Dell™ Latitude™ D600

System Information Guide

系统信息指南

系統資訊指南

システム情報ガイド

시스템 정보 설명서

Model PP05L

Dell™ Latitude™ D600

System Information Guide

Notes, Notices, and Cautions

NOTE: A NOTE indicates important information that helps you make better use of your computer.

NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Abbreviations and Acronyms

For a complete list of abbreviations and acronyms, see the *User's Guide* (depending on your operating system, double-click the **User's Guide** icon on your desktop, or click the **Start** button, click **Help and Support Center**, and then click **User and system guides**).

If you purchased a Dell™ *n* Series computer, any references in this document to Microsoft® Windows® operating systems are not applicable.

Information in this document is subject to change without notice.
© 2003 Dell Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Computer Corporation is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *Inspiron*, *Dell Precision*, *Dimension*, *OptiPlex*, and *Latitude* are trademarks of Dell Computer Corporation; *Intel*, *Pentium,* and *Celeron* are registered trademarks of Intel Corporation; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation; *EMC* is a registered trademark of EMC Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

January 2003 P/N 1N788 Rev. A00

Contents

CAUTION: Safety Instructions 5

General 5
Power 6
Battery 7
Air Travel 8
EMC Instructions 8
California Residents 8

When Using Your Computer 9

Ergonomic Computing Habits 10
When Working Inside Your Computer 10
Protecting Against Electrostatic Discharge 11
Battery Disposal 11

Finding Information for Your Computer 12

Setting Up Your Computer 13

About Your Computer 14

Front View 16
Left View 17
Right View 18
Back View 19
Bottom View 20

Removing a Battery 21

Removing and Installing a Reserve Battery 22

Installing a Battery 24

Running the Dell Diagnostics 24

Regulatory Notices 27

Limited Warranty for the U.S. 29

"Total Satisfaction" Return Policy (U.S. Only) 32

Limited Warranty Terms for Canada 33

"Total Satisfaction" Return Policy (Canada Only) 36

Dell Software and Peripherals (Canada Only) 37

One-Year End-User Manufacturer Guarantee (Latin America and the Caribbean Only) 38

Intel® Warranty Statement for Pentium® and Celeron® Processors Only (U.S. and Canada Only) 39

⚠ CAUTION: Safety Instructions

Use the following safety guidelines to help ensure your own personal safety and to help protect your computer and working environment from potential damage.

General

- Do not attempt to service the computer yourself unless you are a trained service technician. Always follow installation instructions closely.
- If you use an extension power cable with your AC adapter, ensure that the total ampere rating of the products plugged in to the extension power cable does not exceed the ampere rating of the extension cable.
- Do not push objects into air vents or openings of your computer. Doing so can cause fire or electric shock by shorting out interior components.
- Do not store your computer in a low-airflow environment, such as a carrying case or a closed briefcase, while the computer is turned on. Restricting airflow can damage the computer or cause a fire.
- Keep your computer away from radiators and heat sources. Also, do not block cooling vents. Avoid placing loose papers underneath your computer; do not place your computer in a closed-in wall unit or on a bed, sofa, or rug.
- Place the AC adapter in a ventilated area, such as a desk top or on the floor, when you use it to run the computer or to charge the battery. Do not cover the AC adapter with papers or other items that will reduce cooling; also, do not use the AC adapter inside a carrying case.
- The AC adapter may become hot during normal operation of your computer. Use care when handling the adapter during or immediately after operation.
- Do not allow your portable computer to operate with the base resting directly on exposed skin for extended periods of time. The surface temperature of the base will rise during normal operation (particularly when AC power is present). Allowing sustained contact with exposed skin can cause discomfort or, eventually, a burn.
- Do not use your computer in a wet environment, for example, near a bath tub, sink, or swimming pool or in a wet basement
- If your computer includes an integrated or optional (PC Card) modem, disconnect the modem cable if an electrical storm is approaching to avoid the remote risk of electric shock from lightning via the telephone line.

⚠ CAUTION: Safety Instructions *(continued)*

- To help avoid the potential hazard of electric shock, do not connect or disconnect any cables or perform maintenance or reconfiguration of this product during an electrical storm. Do not use your computer during an electrical storm unless all cables have been disconnected and the computer is operating on battery power.
- If your computer includes a modem, the cable used with the modem should be manufactured with a minimum wire size of 26 American wire gauge (AWG) and an FCC-compliant RJ-11 modular plug.
- Before you open the memory module/Mini PCI card/modem cover on the bottom of your computer, disconnect all cables from their electrical outlets and disconnect the telephone cable.
- If your computer has a modem RJ-11 connector and a network RJ-45 connector, insert the telephone cable into the RJ-11 connector, not the RJ-45 connector.
- PC Cards may become very warm during normal operation. Use care when removing PC Cards after their continuous operation.
- Before you clean your computer, disconnect the computer from the electrical outlet. Clean your computer with a soft cloth dampened with water. Do not use liquid or aerosol cleaners, which may contain flammable substances.

Power

- Use only the Dell-provided AC adapter approved for use with this computer. Use of another AC adapter may cause a fire or explosion.
- Before you connect the computer to an electrical outlet, check the AC adapter voltage rating to ensure that the required voltage and frequency match the available power source.
- To remove the computer from all power sources, turn the computer off, remove the battery pack, and disconnect the AC adapter from the electrical outlet.
- To help prevent electric shock, plug the AC adapter and device power cables into properly grounded power sources. These power cables may be equipped with 3-prong plugs to provide an earth grounding connection. Do not use adapter plugs or remove the grounding prong from the power cable plug. If you use a power extension cable, use the appropriate type, 2-prong or 3-prong, to mate with the AC adapter power cable.
- Be sure that nothing rests on your AC adapter's power cable and that the cable is not located where it can be tripped over or stepped on.

⚠ CAUTION: Safety Instructions *(continued)*

- If you are using a multiple-outlet power strip, use caution when plugging the AC adapter's power cable into the power strip. Some power strips may allow you to insert the plug incorrectly. Incorrect insertion of the power plug could result in permanent damage to your computer, as well as risk of electric shock and/or fire. Ensure that the ground prong of the power plug is inserted into the mating ground contact of the power strip.

Battery

- Use only Dell™ battery modules that are approved for use with this computer. Use of other types may increase the risk of fire or explosion.
- Do not carry a battery pack in your pocket, purse, or other container where metal objects (such as car keys or paper clips) could short-circuit the battery terminals. The resulting excessive current flow can cause extremely high temperatures and may result in damage to the battery pack or cause fire or burns.
- The battery poses a burn hazard if you handle it improperly. Do not disassemble it. Handle a damaged or leaking battery pack with extreme care. If the battery is damaged, electrolyte may leak from the cells and may cause personal injury.
- Keep the battery away from children.
- Do not store or leave your computer or battery pack near a heat source such as a radiator, fireplace, stove, electric heater, or other heat-generating appliance or otherwise expose it to temperatures in excess of 60°C (140°F). When heated to excessive temperatures, battery cells could explode or vent, posing a risk of fire.
- Do not dispose of your computer's battery in a fire or with normal household waste. Battery cells may explode. Discard a used battery according to the manufacturer's instructions or contact your local waste disposal agency for disposal instructions. Dispose of a spent or damaged battery promptly.

⚠ CAUTION: Safety Instructions *(continued)*

Air Travel

- Certain Federal Aviation Administration regulations and/or airline-specific restrictions may apply to the operation of your Dell computer while you are on board an aircraft. For example, such regulations/restrictions may prohibit the use of any personal electronic device (PED) that has the capacity for intentional transmission of radio frequency or other electromagnetic signals while on an aircraft.
  - In order to best comply with all such restrictions, if your Dell portable computer is equipped with Dell TrueMobile™ or some other wireless communication device, press Fn F2 to disable this device before you board the aircraft and follow all instructions provided by airline personnel with regard to such device.
  - Additionally, the use of any PED, such as a portable computer, may be prohibited in aircraft during certain critical phases of flight, for example, takeoff and landing. Some airlines may further define the critical flight phase as any time the aircraft is below 3050 m (10,000 ft). Please follow the airline's specific instructions as to when the use of a PED is allowed.

EMC Instructions

Use shielded signal cables to ensure that you maintain the appropriate EMC classification for the intended environment. For parallel printers, a cable is available from Dell. If you prefer, you can order a cable from Dell at its worldwide website at **www.dell.com**.

Static electricity can harm electronic components inside your computer. To prevent static damage, discharge static electricity from your body before you touch any of your computer's electronic components, such as a memory module. You can do so by touching an unpainted metal surface on the computer's input/output panel.

California Residents

WARNING: Handling the cord on this product, or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. ***Wash your hands after handling the cord***.

When Using Your Computer

Observe the following safe-handling guidelines to prevent damage to your computer:

- When setting up the computer for work, place it on a level surface.
- When traveling, do not check the computer as baggage. You can put your computer through an X-ray security machine, but never put your computer through a metal detector. If you have the computer checked by hand, be sure to have a charged battery available in case you are asked to turn on the computer.
- When traveling with the hard drive removed from the computer, wrap the drive in a nonconducting material, such as cloth or paper. If you have the drive checked by hand, be ready to install the drive in the computer. You can put the hard drive through an X-ray security machine, but never put the drive through a metal detector.
- When traveling, do not place the computer in overhead storage compartments where it could slide around. Do not drop your computer or subject it to other mechanical shocks.
- Protect your computer, battery, and hard drive from environmental hazards such as dirt, dust, food, liquids, temperature extremes, and overexposure to sunlight.
- When you move your computer between environments with very different temperature and/or humidity ranges, condensation may form on or within the computer. To avoid damaging the computer, allow sufficient time for the moisture to evaporate before using the computer.

NOTICE: When taking the computer from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the computer to acclimate to room temperature before turning on power.

- When you disconnect a cable, pull on its connector or on its strain-relief loop, not on the cable itself. As you pull out the connector, keep it evenly aligned to avoid bending any connector pins. Also, before you connect a cable make sure both connectors are correctly oriented and aligned.
- Handle components with care. Hold a component such as a memory module by its edges, not its pins.
- When preparing to remove a memory module from the system board or disconnect a device from the computer, turn off the computer, disconnect the AC adapter cable, and then wait 5 seconds before proceeding to help avoid possible damage to the system board.

When Using Your Computer *(continued)*

- Clean the display with a soft, clean cloth and water. Apply the water to the cloth; then stroke the cloth across the display in one direction, moving from the top of the display to the bottom. Remove moisture from the display quickly and keep the display dry. Long-term exposure to moisture can damage the display. *Do not* use a commercial window cleaner to clean your display.
- If your computer gets wet or is damaged, follow the procedures described in "Solving Problems" in your *User's Guide*. If, after following these procedures, you confirm that your computer is not operating properly, contact Dell (see "Getting Help" in your *User's Guide* for the appropriate contact information).

Ergonomic Computing Habits

CAUTION: Improper or prolonged keyboard use may result in injury.

CAUTION: Viewing the display or external monitor screen for extended periods of time may result in eye strain.

For comfort and efficiency, observe the ergonomic guidelines in the Appendix of your online *User's Guide* when setting up and using your computer.

This portable computer is not designed for continuous operation as office equipment. For extended use in an office, it is recommended that you connect an external keyboard.

When Working Inside Your Computer

Before removing or installing memory modules, Mini PCI cards, or modems, perform the following steps in the sequence indicated.

NOTICE: The only time you should ever access the inside of your computer is when you are installing memory modules, a Mini PCI card, or a modem.

NOTICE: Wait 5 seconds after turning off the computer before disconnecting a device or removing a memory module, Mini PCI card, or modem to help prevent possible damage to the system board.

1. Shut down your computer and turn off any attached devices.
2. Disconnect your computer and devices from electrical outlets to reduce the potential for personal injury or shock. Also, disconnect any telephone or telecommunication lines from the computer.
3. Remove the main battery from the battery bay and, if necessary, the second battery from the module bay.

When Using Your Computer *(continued)*

4 Ground yourself by touching the unpainted metal surface of the I/O panel on the back of the computer.

While you work, periodically touch the I/O panel to dissipate any static electricity that might harm internal components.

Protecting Against Electrostatic Discharge

Static electricity can harm electronic components inside your computer. To prevent static damage, discharge static electricity from your body before you touch any of your computer's electronic components, such as a memory module. You can do so by touching an unpainted metal surface on the computer's I/O panel.

As you continue to work inside the computer, periodically touch an I/O connector to remove any static charge your body may have accumulated.

You can also take the following steps to prevent damage from electrostatic discharge (ESD):

- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the antistatic packing material until you are ready to install the component. Just before unwrapping the antistatic packaging, be sure to discharge static electricity from your body.
- When transporting a sensitive component, first place it in an antistatic container or packaging.
- Handle all sensitive components in a static-safe area. If possible, use antistatic floor pads and workbench pads.



Battery Disposal

Your computer uses a lithium-ion battery. For instructions about replacing the lithium-ion battery in your computer, see "Removing a Battery" later in this document and "Using a Battery" in your online *User's Guide*.

Do not dispose of the battery along with household waste. Contact your local waste disposal agency for the address of the nearest battery deposit site.

Finding Information for Your Computer

<table>
<tr><th>What are you looking for?</th><th>Find It Here</th></tr>
<tr><td>• A diagnostic program for my computer
• Drivers for my computer
• My computer documentation
• My device documentation</td><td>Drivers and Utilities CD (also known as the ResourceCD)

Documentation and drivers are already installed on your computer when shipped from Dell. You can use the CD to reinstall drivers, run the Dell Diagnostics, or access your documentation.

Readme files may be included on your CD to provide last-minute updates about technical changes to your computer or advanced technical-reference material for experienced users or technicians.

</td></tr>
<tr><td>• Express Service Code and Service Tag
• Microsoft® Windows® License Label</td><td>Express Service Code and Product Key

These labels are located on your computer.</td></tr>
<tr><td>• Latest drivers for my computer
• Answers to technical service and support questions
• Online discussions with other users and technical support
• Documentation for my computer</td><td>Dell Support Website

The Dell Support website provides several online tools, including:
• Solutions — Troubleshooting hints and tips, articles from technicians, and online courses
• Community Forum — Online discussion with other Dell customers
• Upgrades — Upgrade information for components, such as memory, the hard drive, and the operating system
• Customer Care — Contact information, order status, warranty, and repair information
• Downloads — Drivers, patches, and software updates
• Reference — Computer documentation, product specifications, and white papers</td></tr>
</table>

What are you looking for?	Find It Here
• How to use Windows XP • Documentation for my computer • Documentation for devices (such as a modem)	**Windows Help and Support Center** **1** Click the **Start** button and click **Help and Support**. **2** Type a word or phrase that describes your problem and click the arrow icon. **3** Click the topic that describes your problem. **4** Follow the instructions on the screen.
• How to reinstall my operating system	**Operating System CD** If you reinstall your operating system, use the *Drivers and Utilities* CD to reinstall drivers for the devices that came with your computer. The product key for your operating system is located on your computer.

Setting Up Your Computer

1 Unpack the accessories box.

2 Set aside the contents of the accessories box, which you will need to complete the setup of your computer.

The accessories box also contains user documentation and any software or additional hardware (such as PC Cards, drives, or batteries) you have ordered.

3 Connect the AC adapter to the AC adapter connector and to the electrical outlet.

NOTICE: When you turn on your computer, you might receive a message stating that you need to shut down your computer and upgrade your computer memory. If this message appears, see your *User's Guide* on the Dell Support website (**support.dell.com**) for instructions about upgrading your computer memory.

4 Open the computer display and press the power button to turn on the computer.

NOTE: Do not dock the computer until it has been turned on and shut down at least once.

About Your Computer

See your online *User's Guide* for detailed information about the computer. Depending on your operating system, double-click the **User's Guide** icon on your desktop, or click the **Start** button, click **Help and Support Center**, and then click **User and system guides**. The following items address some of the more commonly asked questions about the computer.

- *Modem and network adapter*: The computer may include both a v.92 56K modem and a 10/100/1000 Ethernet LOM network adapter. For connector locations, see "Right View" later in this document. For more information on ports and connectors, see "About Your Computer" in your online *User's Guide*.

- *Battery life and usage:* Various batteries are available for use with your computer. Using the 4460-mAh battery that comes standard with the computer, you can expect from 3 to 4 hours of operating time from a single fully charged battery with average usage. Performing certain types of operations, such as extended wireless operation, can significantly reduce battery life.
  - For more information on battery performance, usage, and conserving power, see "Using a Battery" and "Power Management" in the *User's Guide*.
  - For information on an optional second battery, see "Using the Module Bay" in the *User's Guide*.
- *Module bay devices:* For information on the module bay and the devices it supports, see "Using the Module Bay" in the *User's Guide*.
- *Docking devices:* Your computer supports the Dell D/Dock Expansion Station and the Dell D/Port Advanced Port Replicator.
  - For information on your optional docking device, see the documentation that accompanied the device.
  - For information on obtaining optimal performance when using a docking device with this computer, see "Solving Problems" in the *User's Guide*.

NOTE: Docking devices may not be available in all countries.

Front View

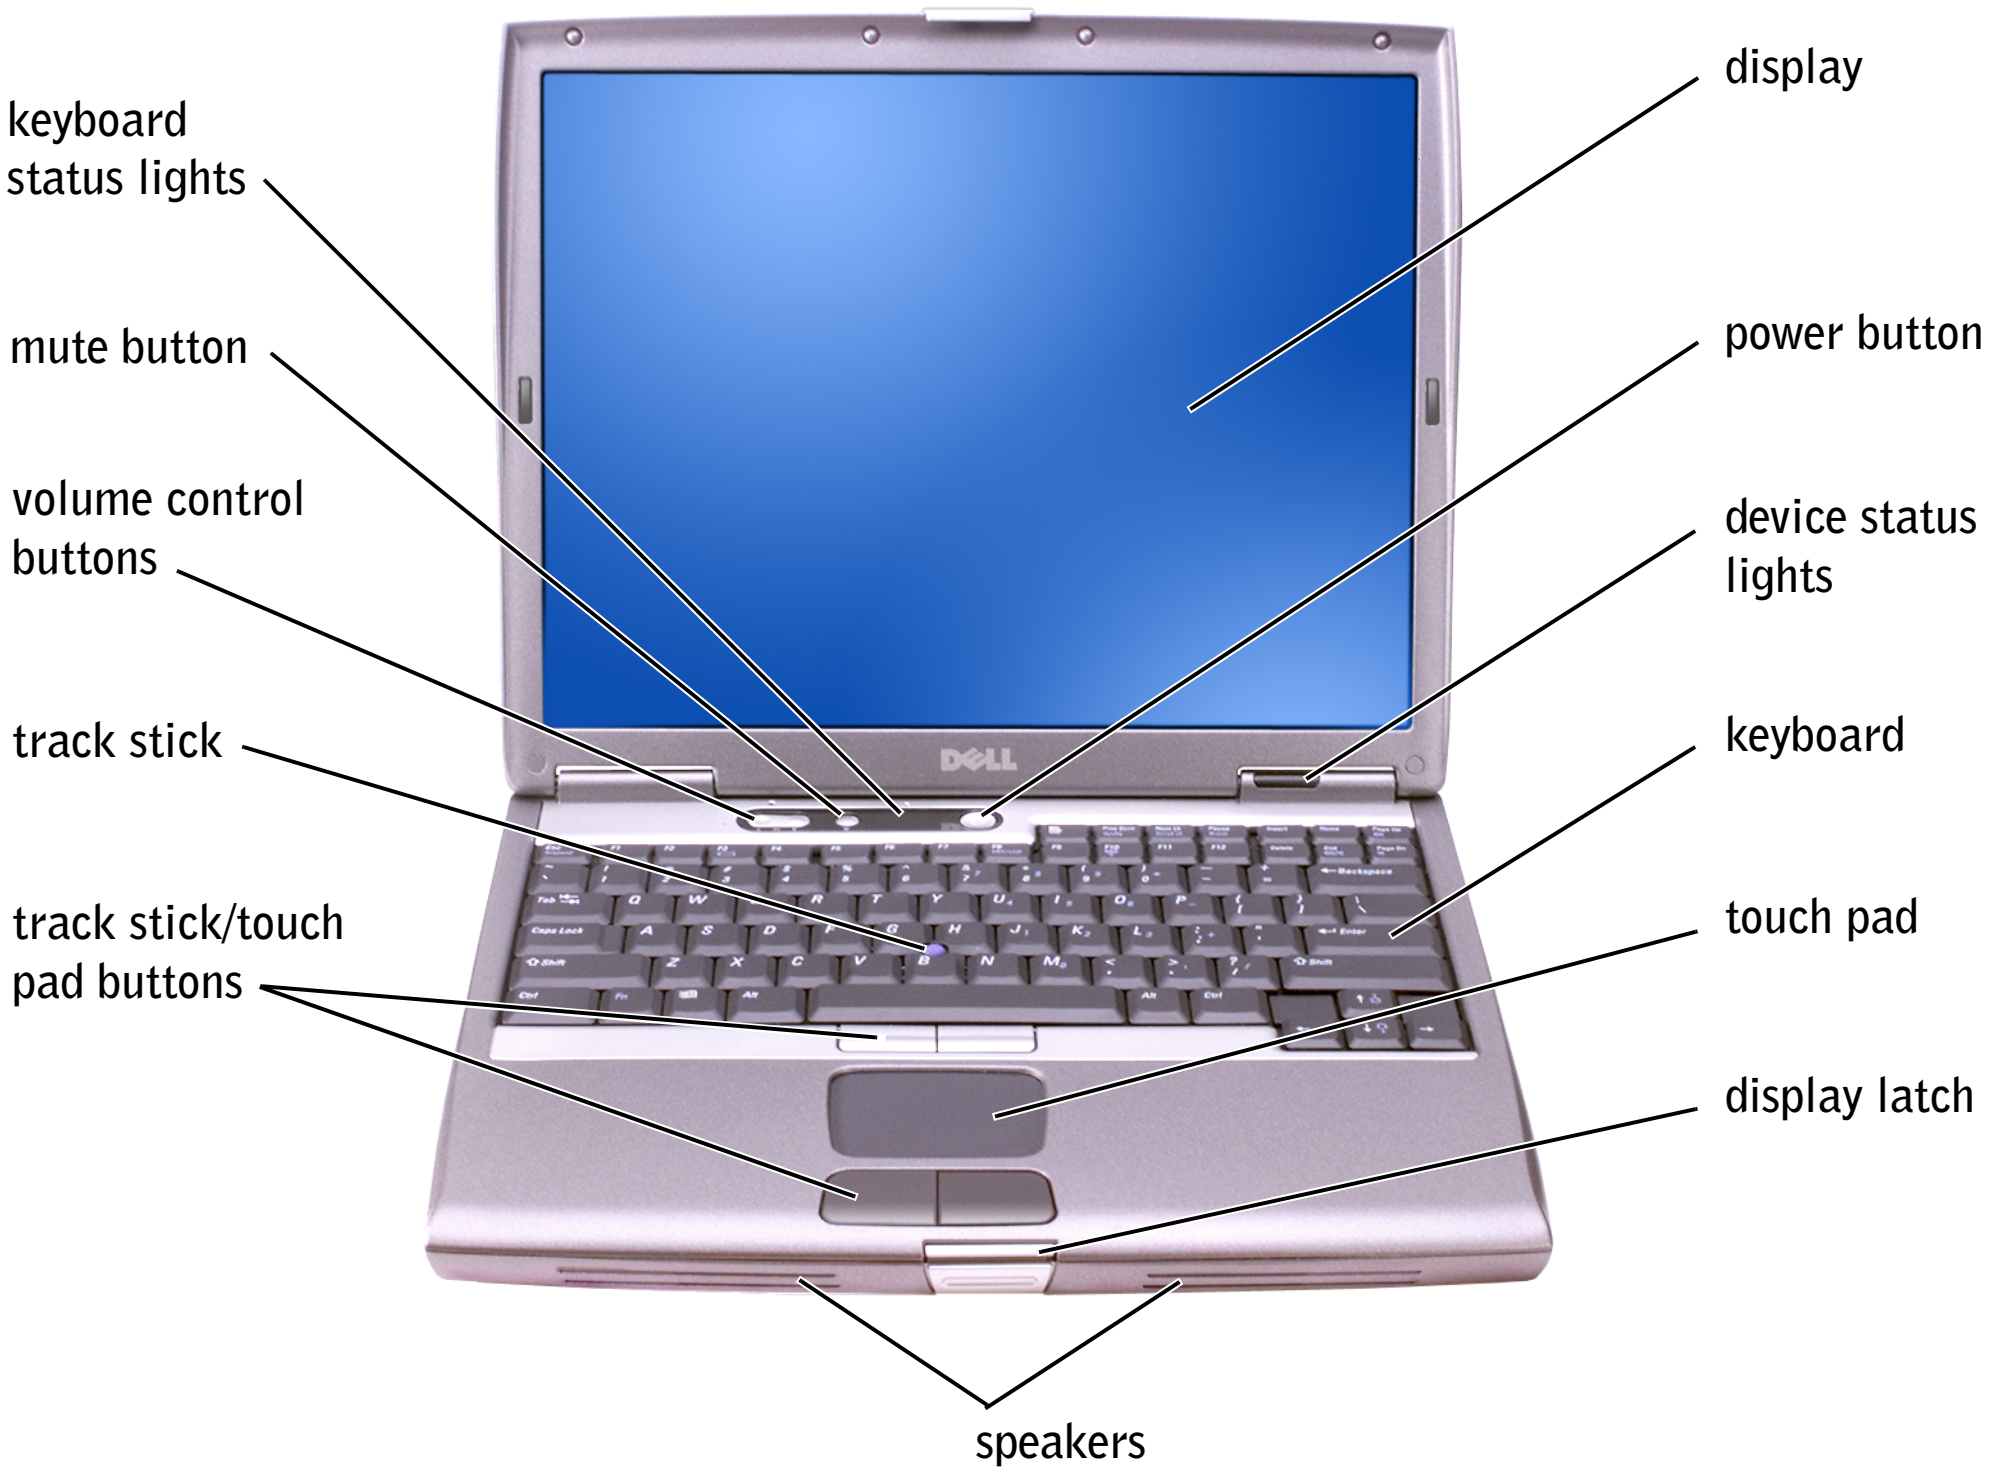
keyboard status lights
mute button
volume control buttons
track stick
track stick/touch pad buttons
display
power button
device status lights
keyboard
touch pad
display latch
speakers

Left View

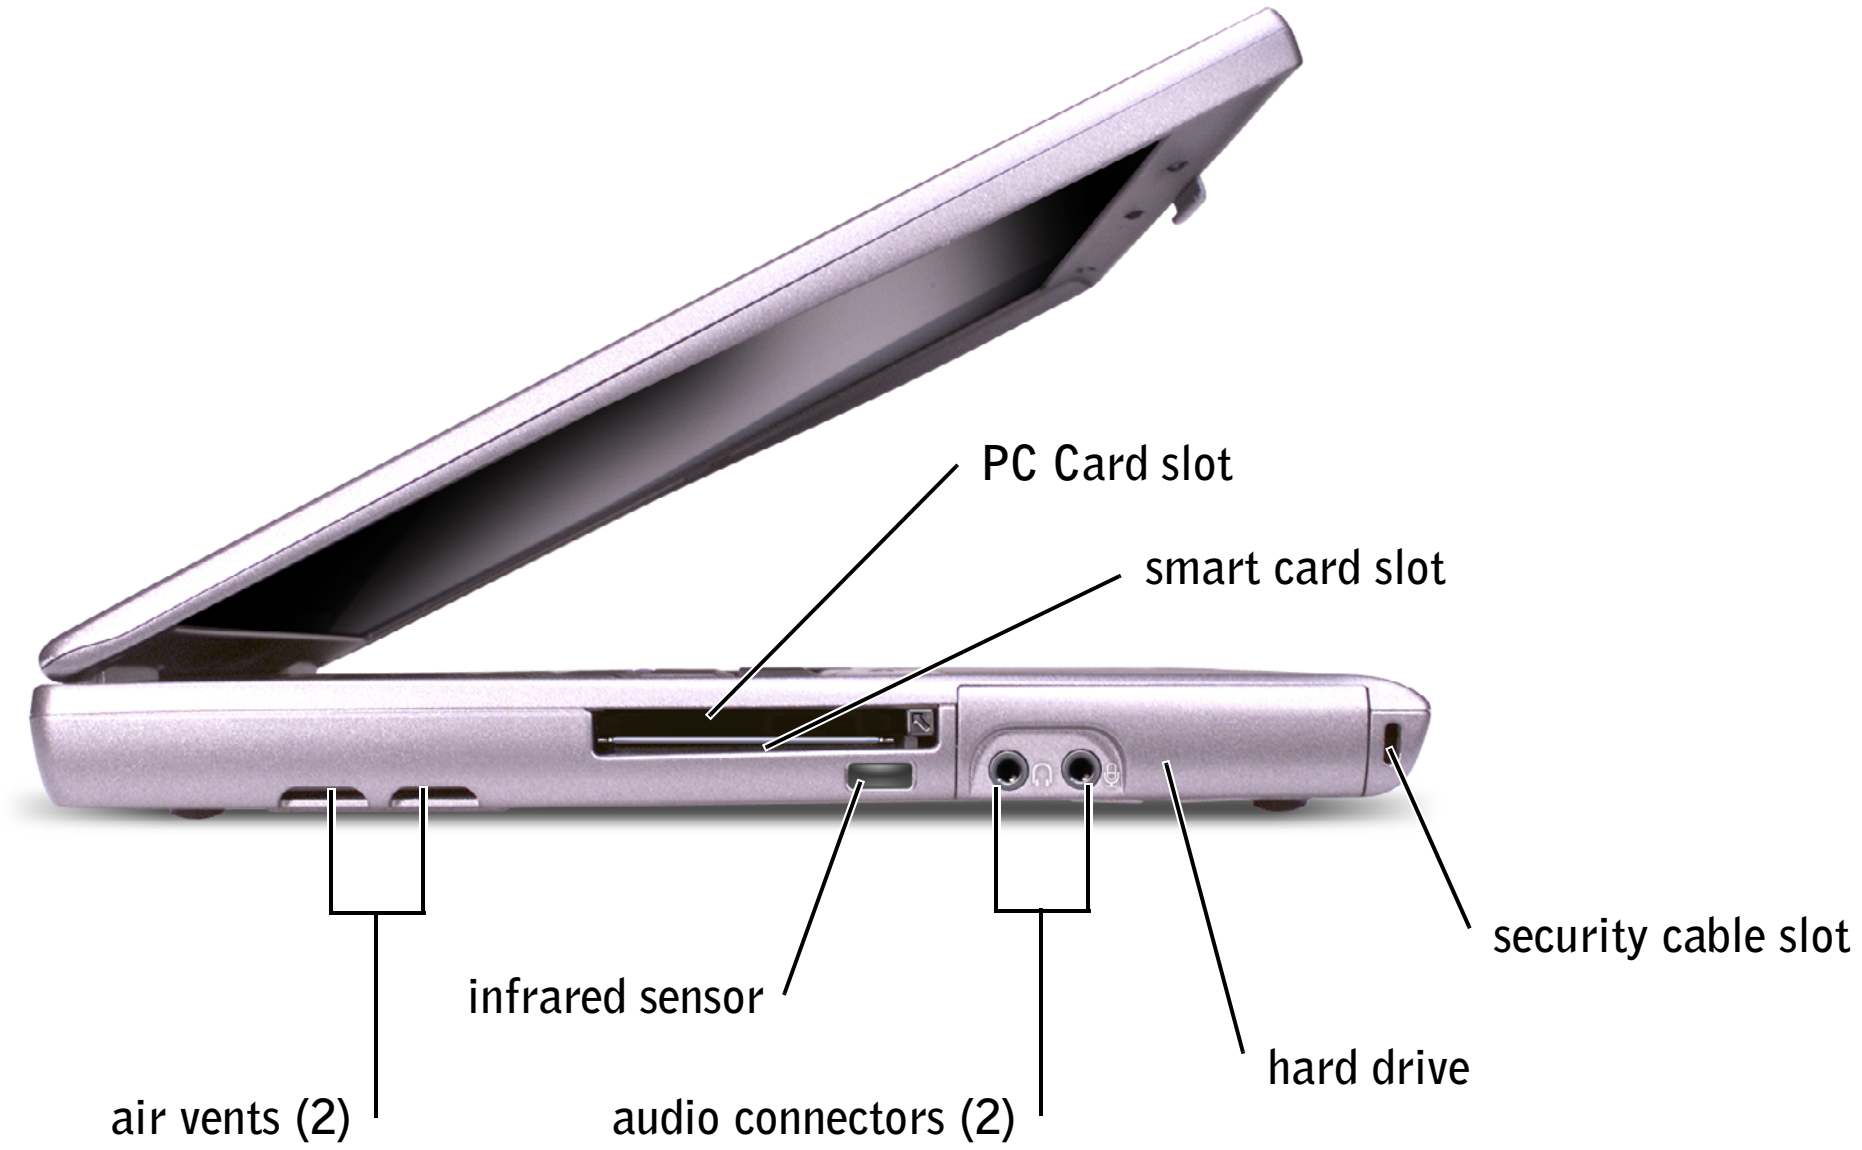
PC Card slot
smart card slot
security cable slot
infrared sensor
hard drive
air vents (2)
audio connectors (2)

Right View

Back View

NOTICE: To avoid damaging the computer, wait 5 seconds after turning off the computer before you disconnect an external device.

CAUTION: Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire.

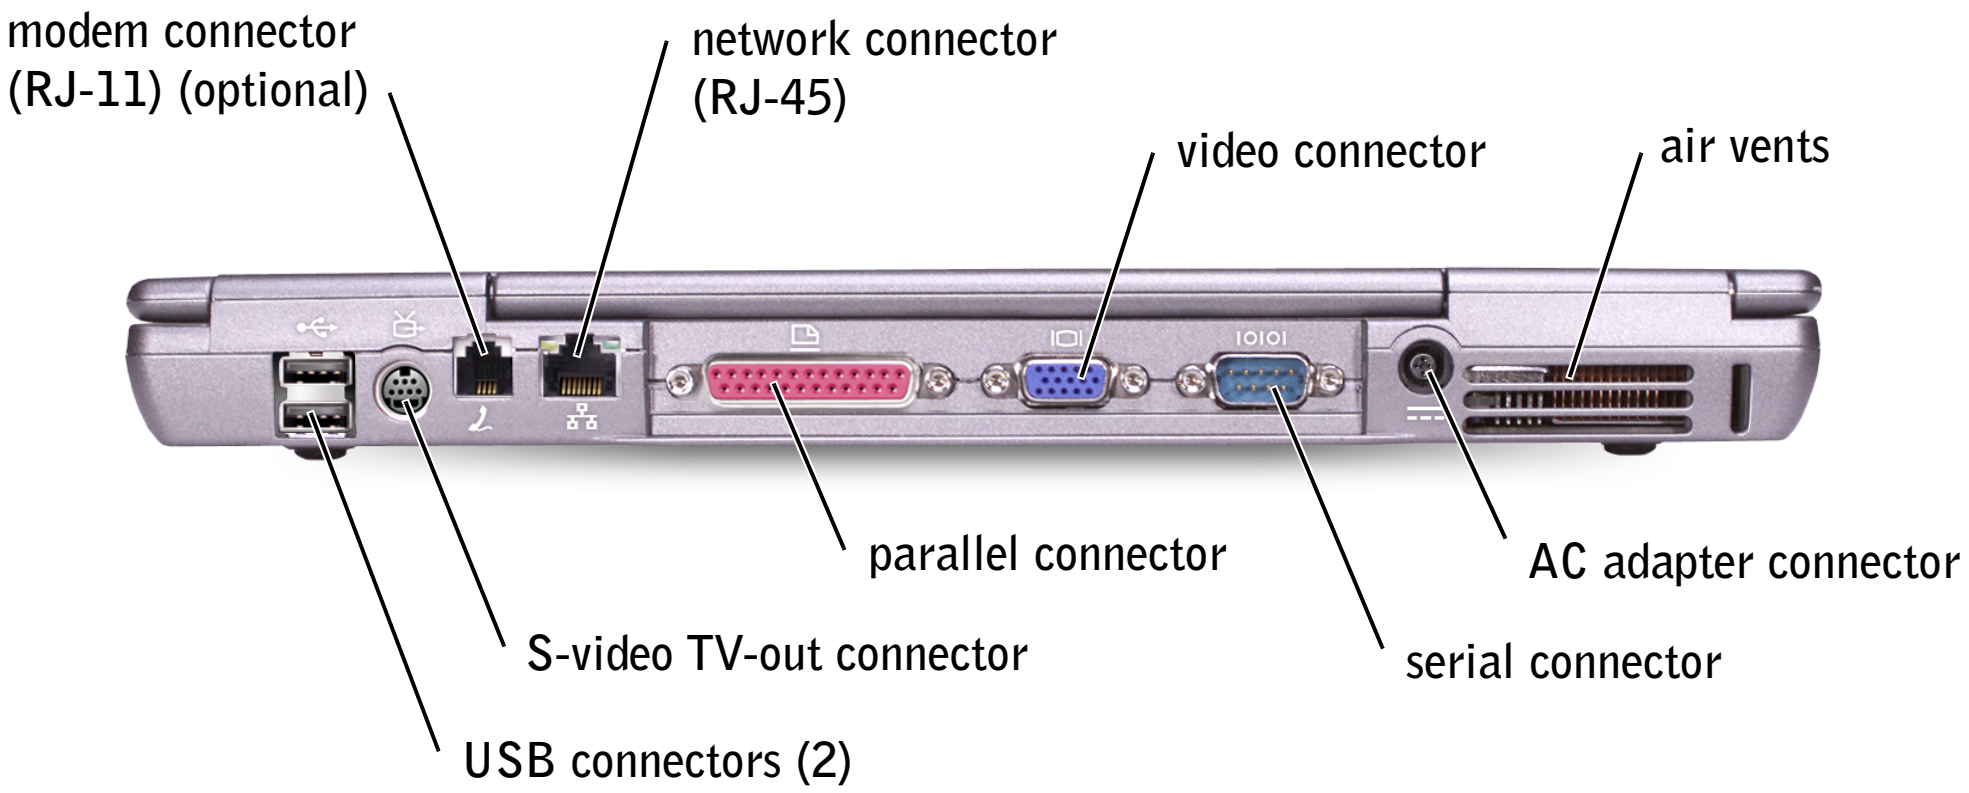

Bottom View

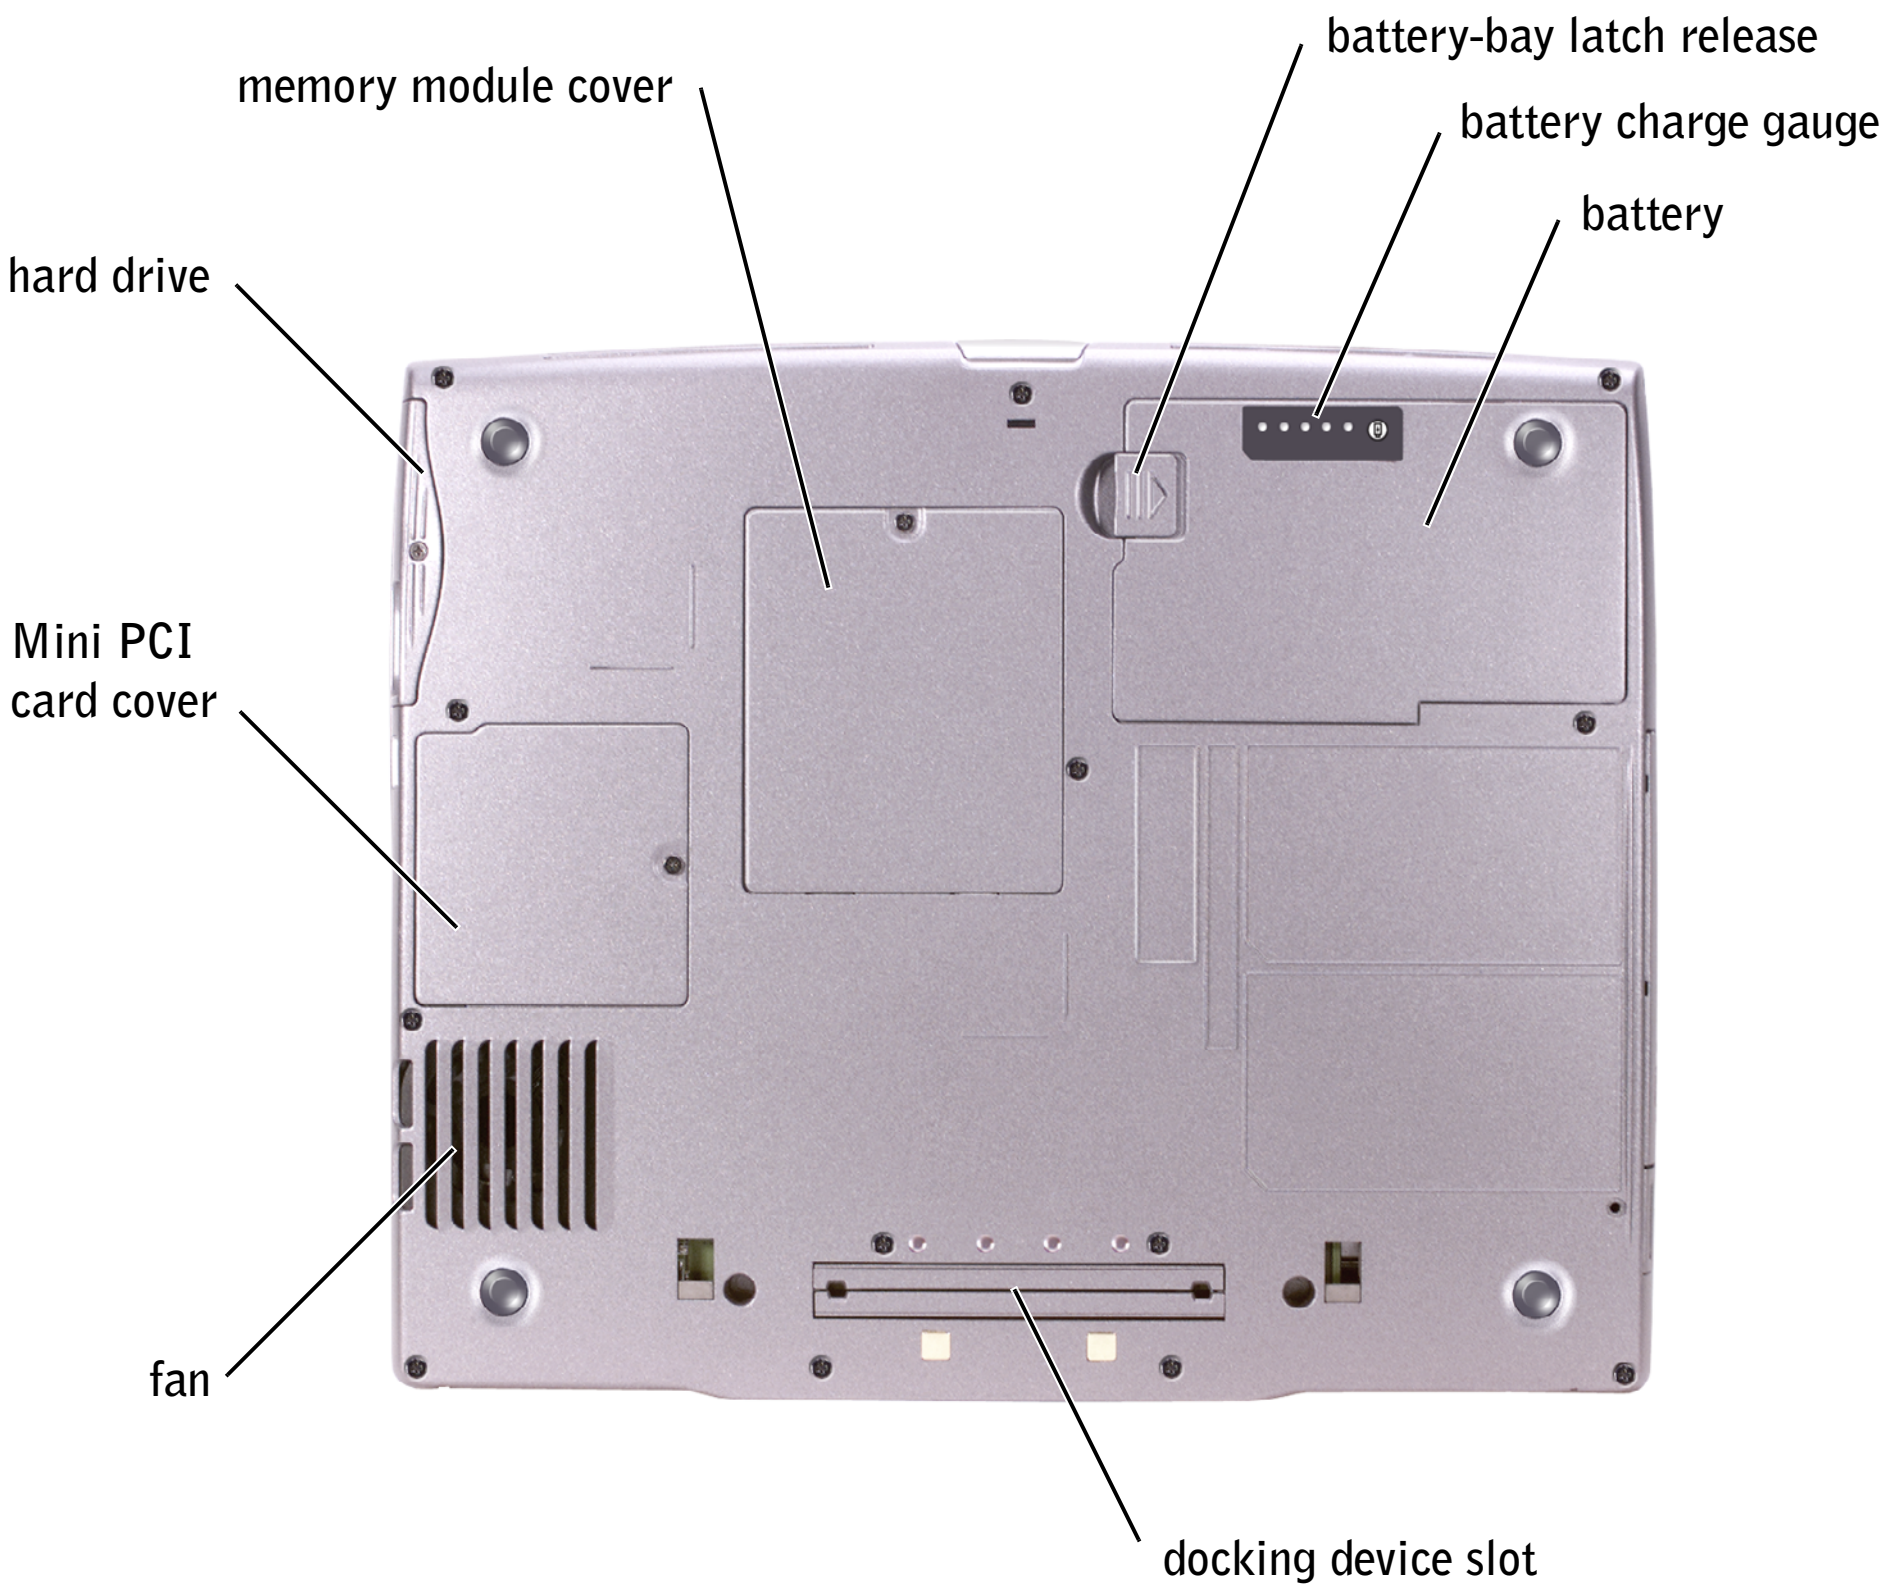
memory module cover
battery-bay latch release
battery charge gauge
battery
hard drive
Mini PCI
card cover
fan
docking device slot

Removing a Battery

For more information about removing the second battery, see "Using the Module Bay" in your online *User's Guide*.

CAUTION: Before performing these procedures, turn off the computer, disconnect it from the electrical outlet, and disconnect the modem from the telephone wall jack.

NOTICE: If you choose to replace the battery with the computer in standby mode, you have up to 90 seconds to complete the battery replacement before the computer shuts down and loses any unsaved data.

1 Ensure that the computer is turned off, disconnected from an electrical outlet, and disconnected from the telephone wall jack.

2 If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.

3 Slide and hold the battery-bay latch release on the bottom of the computer, and then remove the battery from the bay.

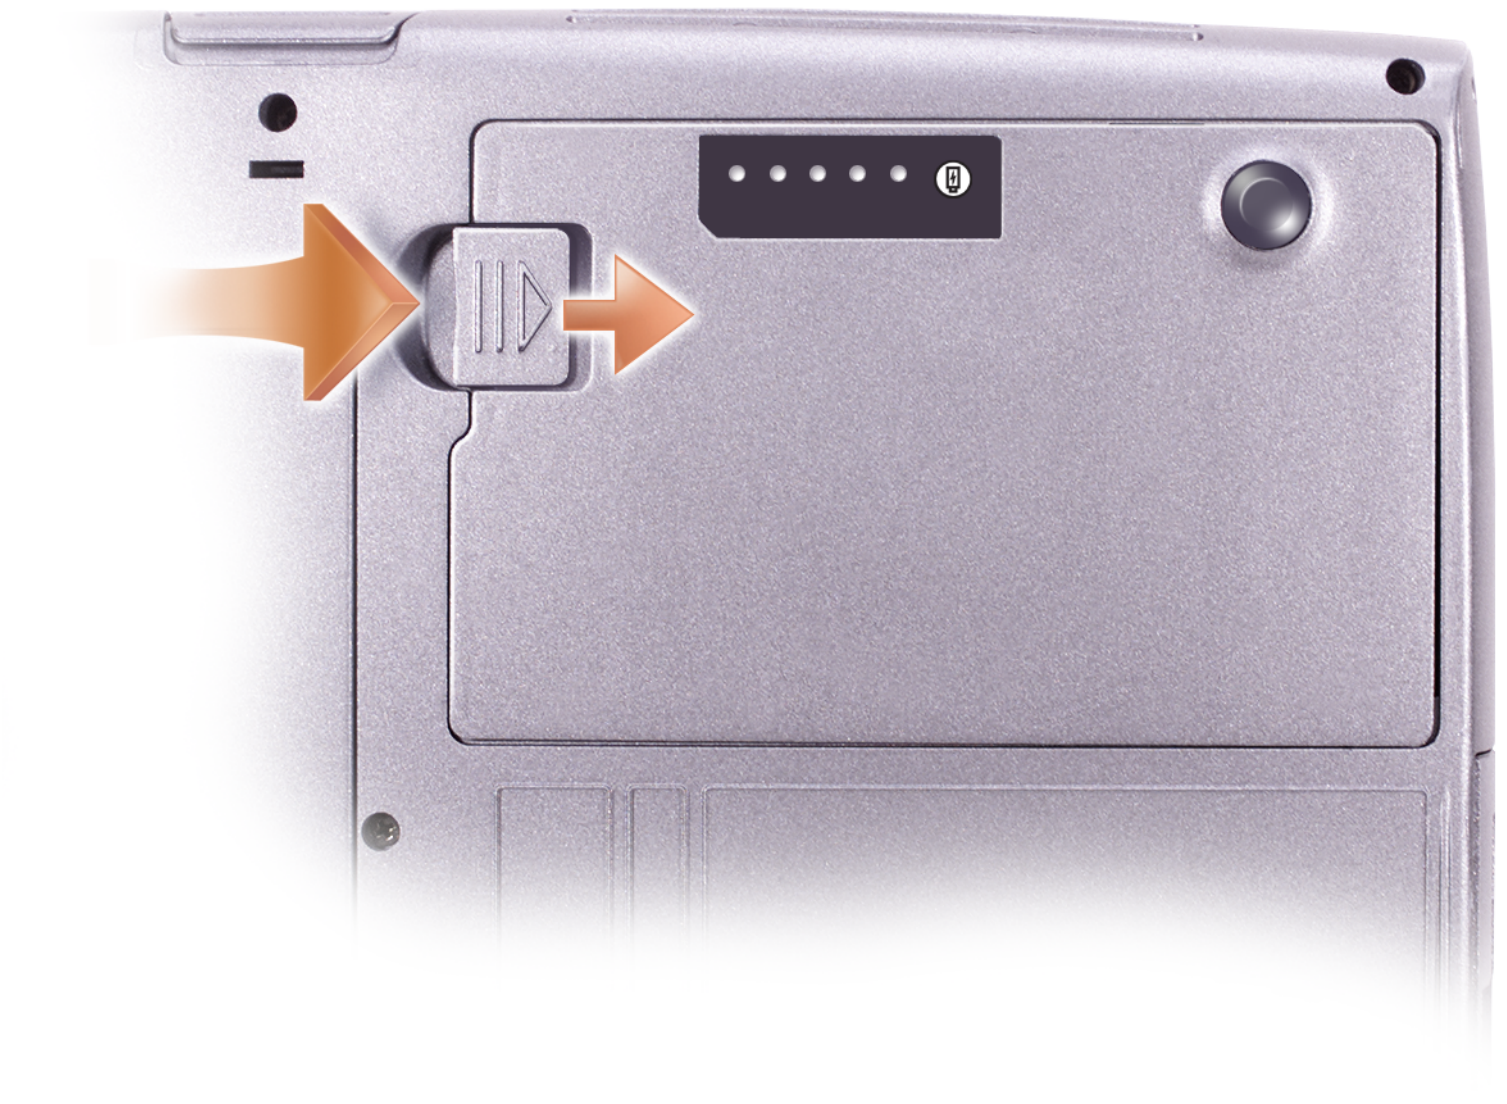

Removing and Installing a Reserve Battery

1 Remove the battery.

2 Remove the reserve battery cover.

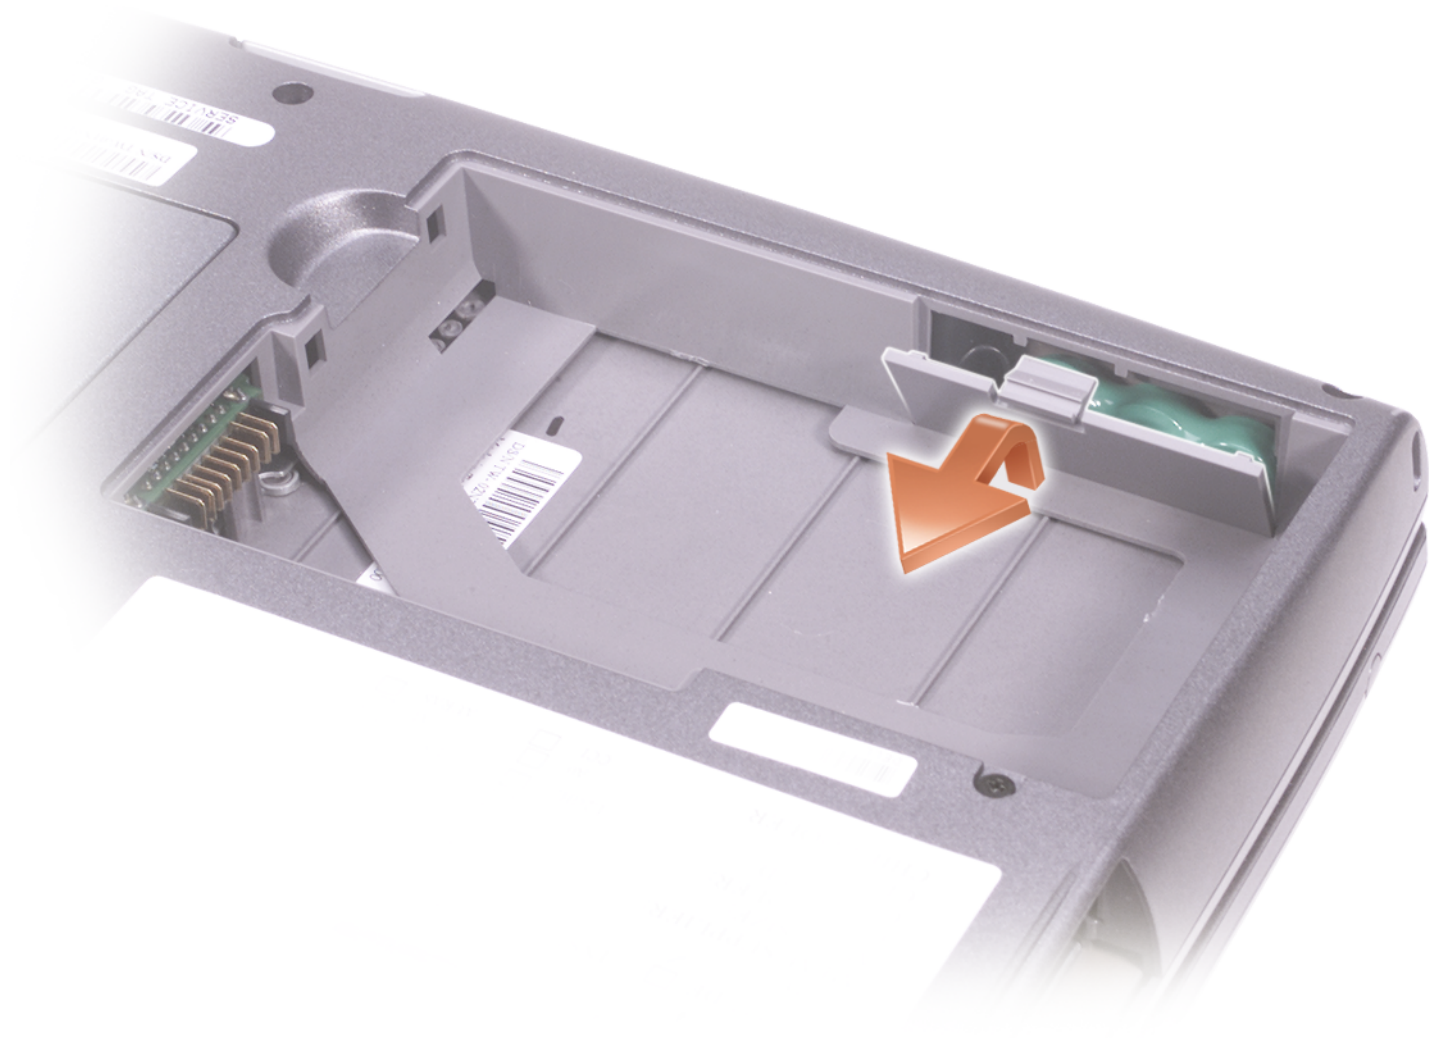

3 Pull the reserve battery out of its compartment, and disconnect the cable from the connector.

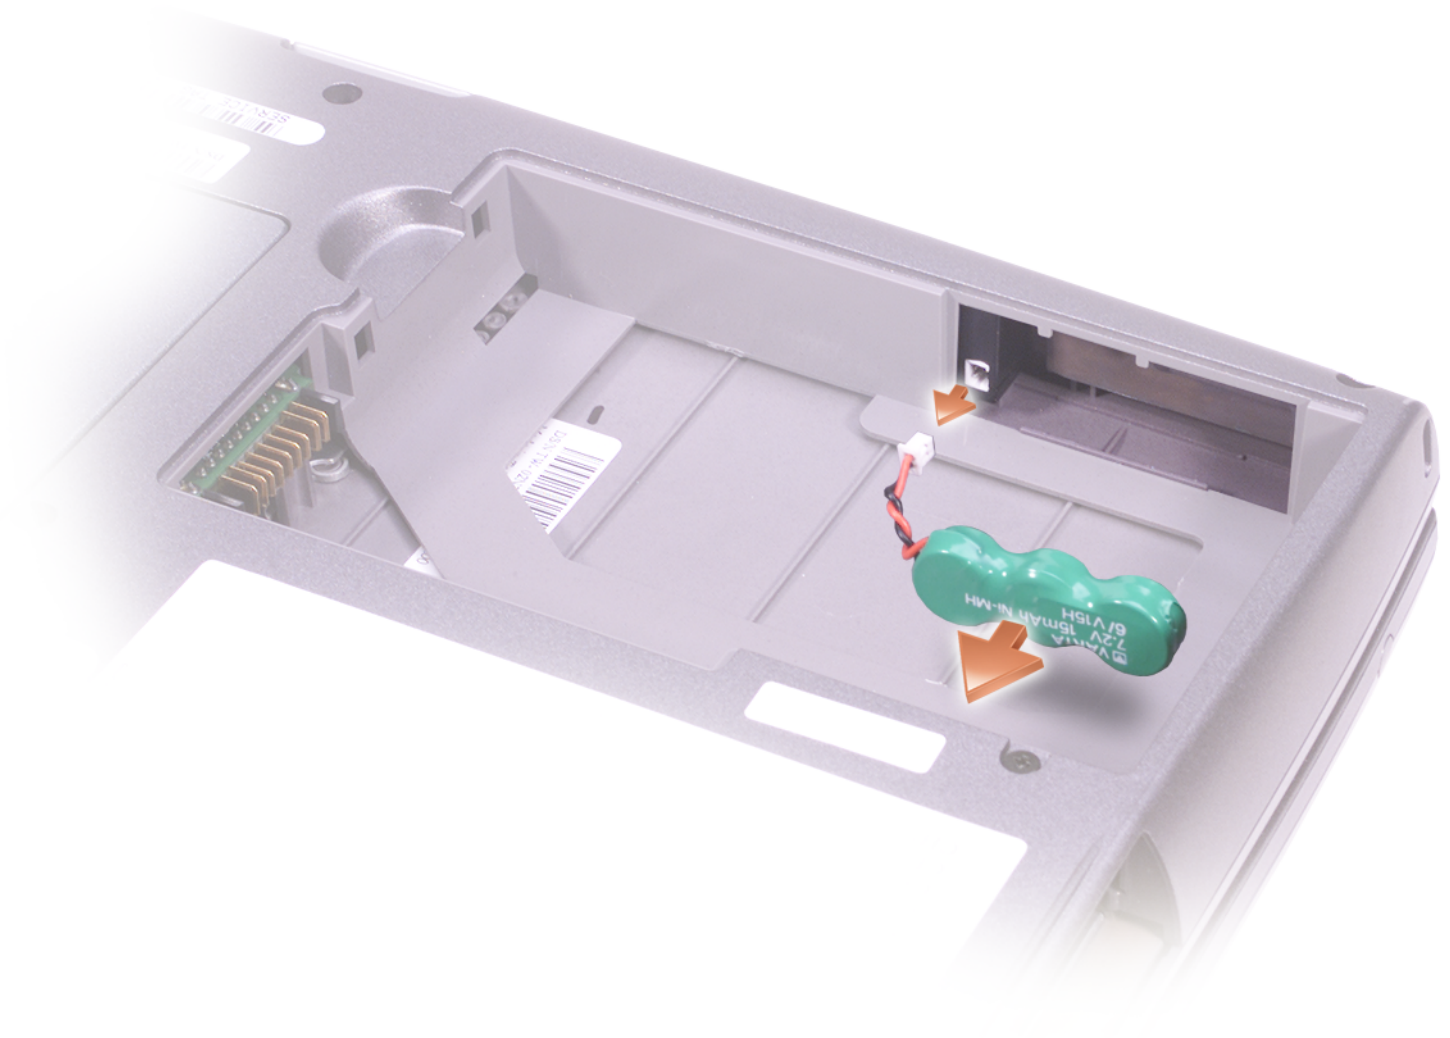

4 Connect the reserve battery cable to the connector in the reserve battery compartment.

5 Place the reserve battery in the compartment, and replace the reserve battery cover.

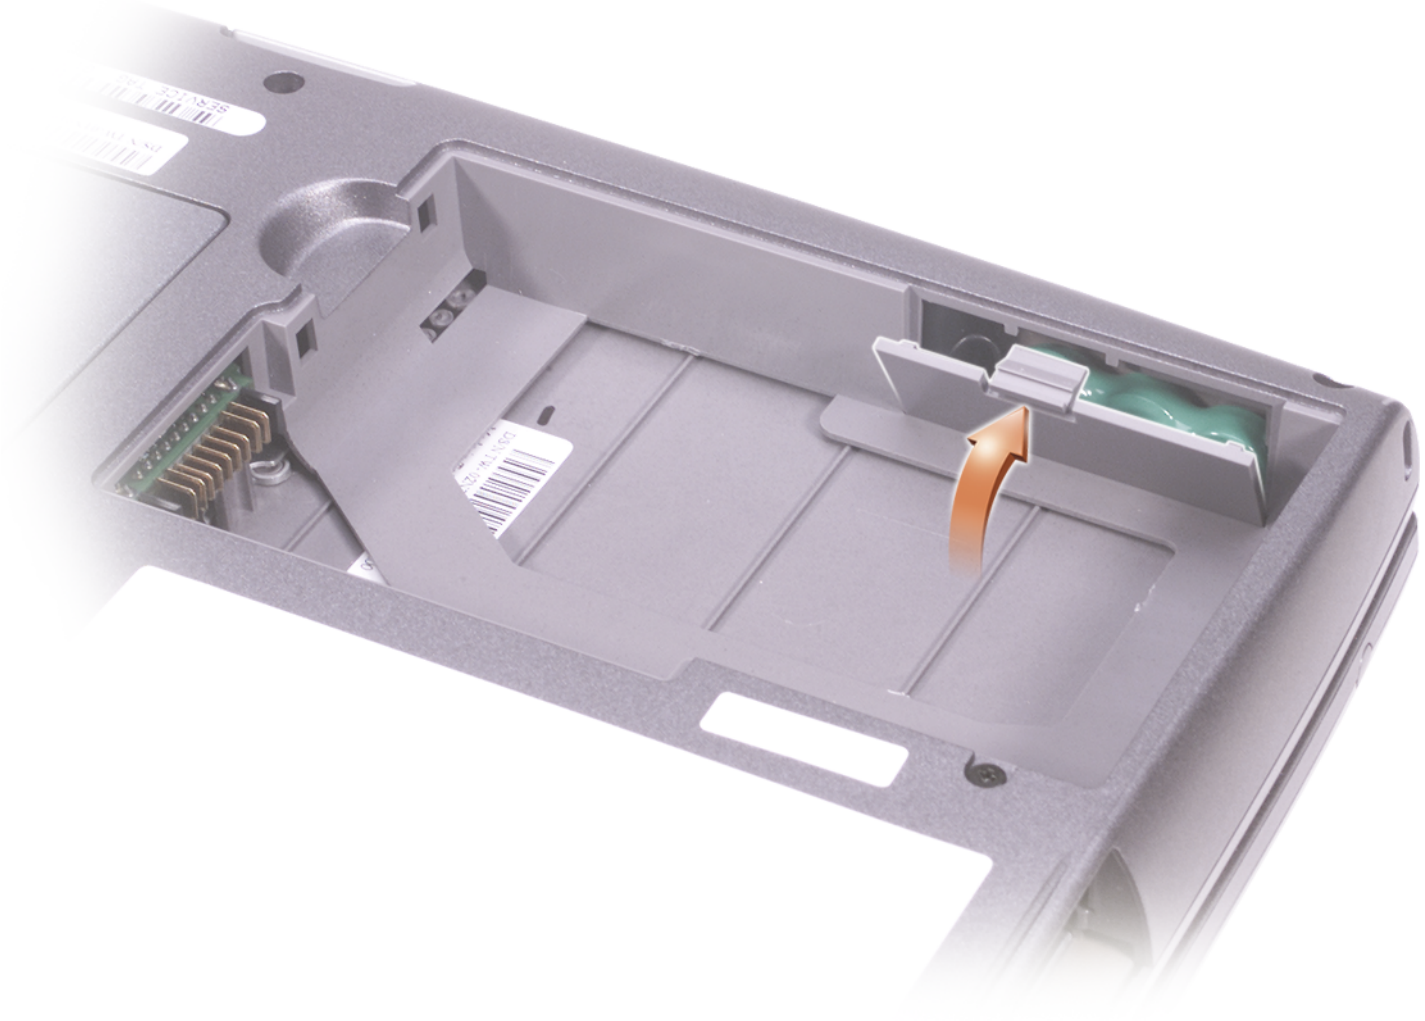

Installing a Battery

Slide the battery into the bay until the latch release clicks.

For more information about installing the second battery, see "Using the Module Bay" in your online *User's Guide*.

Running the Dell Diagnostics

The Dell Diagnostics is located on a hidden Diagnostic utility partition on your hard drive.

NOTE: If your computer cannot display a screen image, contact Dell (see "Getting Help" in your *User's Guide* for the appropriate contact information).

1. Shut down the computer.
2. If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.
3. Connect the computer to an electrical outlet.

4 Turn on the computer. When the DELL™ logo appears, press F12 immediately. If you wait too long and the Microsoft® Windows® logo appears, continue to wait until you see the Windows desktop. Then shut down your computer and try again.

5 When the boot device list appears, highlight **Diagnostics** and press Enter.

The computer begins to run the Pre-boot System Assessment, a series of embedded diagnostics that perform initial testing on your system board, keyboard, hard drive, and display.

- During the assessment, answer any questions that appear.
- If a component failure is detected, the computer stops and beeps. To stop the assessment and reboot to the operating system, press N; to continue to the next test, press Y; to retest the component that failed, press R.
- If failures are detected during the Pre-boot System Assessment, write down the error code(s) and contact Dell (see "Getting Help" in your *User's Guide* for the appropriate contact information) before continuing on to the Dell Diagnostics.
- If you receive a message stating that no Diagnostics utility partition has been found, follow the instructions on the screen to run the Dell Diagnostics from your *Drivers and Utilities* CD.

If the Pre-boot System Assessment completes successfully, you receive the message `Booting Dell Diagnostic Utility Partition. Press any key to continue.`

6 Press any key to start the Dell Diagnostics from the Diagnostics utility partition on your hard drive.

7 After the Dell Diagnostics loads and the **Main Menu** screen appears, click the button for the option you want.

NOTE: If you cannot see anything on your display, you can hold down the mute button and press the power button (instead of F12) to begin the Dell Diagnostics. You do not need to highlight **Diagnostics** and press Enter. The computer automatically runs the Pre-boot System Assessment.

NOTE: The service tag for your computer is located in the title bar of each screen.

Option	Function
Express Test	Performs a quick test of devices. The test typically takes 10 to 20 minutes and requires no interaction on your part. Run Express Test first to increase the possibility of tracing the problem quickly.
Extended Test	Performs a thorough check of devices. The test typically takes 1 hour or more and requires you to answer questions periodically.
Custom Test	Tests a specific device. You can customize the tests to be run.
Symptom Tree	Allows you to select tests based on a symptom of the problem you are experiencing. The option lists the most common symptoms.

8 If a problem is encountered during a test, a message appears, displaying the error code and a description of the problem. Write down the error code and problem description and follow the instructions on the screen. If you cannot resolve the error condition, contact Dell (see "Getting Help" in your *User's Guide* for the appropriate contact information).

9 If you run a test from the **Custom Test** or **Symptom Tree** option, click the applicable tab described in the following table for more information.

Tab	Function
Results	Displays the results of the test and any error conditions encountered.
Errors	Displays error conditions encountered, error codes, and problem description.
Help	Describes the test and may indicate requirements for running the test.

Tab	Function
Configuration	Displays your hardware configuration for the selected device. The Dell Diagnostics obtains your configuration information for all devices from the system setup program, memory, and various internal tests and displays the information in the device list in the left pane of the screen. The device list may not display the names of all the components installed on your computer or all devices attached to your computer.
Parameters	Allows you to customize the test by changing the test settings.

10 When you have finished running a test, close the screen to return to the **Main Menu** screen. To exit the Dell Diagnostics and reboot the computer, close the **Main Menu** screen.

Regulatory Notices

Electromagnetic Interference (EMI) is any signal or emission, radiated in free space or conducted along power or signal leads, that endangers the functioning of a radio navigation or other safety service or seriously degrades, obstructs, or repeatedly interrupts a licensed radio communications service. Radio communications services include but are not limited to AM/FM commercial broadcast, television, cellular services, radar, air-traffic control, pager, and Personal Communication Services (PCS). These licensed services, along with unintentional radiators such as digital devices, including computers, contribute to the electromagnetic environment.

Electromagnetic Compatibility (EMC) is the ability of items of electronic equipment to function properly together in the electronic environment. While this computer has been designed and determined to be compliant with regulatory agency limits for EMI, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio communications services, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.

- Relocate the computer with respect to the receiver.
- Move the computer away from the receiver.
- Plug the computer into a different outlet so that the computer and the receiver are on different branch circuits.

If necessary, consult a Dell Technical Support representative or an experienced radio/television technician for additional suggestions.

For additional regulatory information, see "Regulatory Notices" in the Appendix of your online *User's Guide*. The sections specific to each regulatory agency provide country-specific EMC/EMI or product safety information.

Limited Warranties and Return Policy

Dell-branded hardware products purchased in the U.S. or Canada come with either a 90-day (U.S. only), one-year, two-year, three-year, or four-year limited warranty. To determine which warranty you purchased, see the invoice that accompanied your hardware product(s). The following sections describe the limited warranties and return policy for the U.S., the limited warranties and return policy for Canada, and the manufacturer guarantee for Latin America and the Caribbean.

Limited Warranty for the U.S.

What is covered by this limited warranty?

This limited warranty covers defects in materials and workmanship in your—our end-user customer's—Dell-branded hardware products, including Dell-branded peripheral products.

What is not covered by this limited warranty?

This limited warranty does not cover:

- Software, including the operating system and software added to the Dell-branded hardware products through our factory-integration system, third-party software, or the reloading of software
- Non-Dell-branded products and accessories
- Problems that result from:
  - External causes such as accident, abuse, misuse, or problems with electrical power
  - Servicing not authorized by us
  - Usage that is not in accordance with product instructions
  - Failure to follow the product instructions or failure to perform preventive maintenance
  - Problems caused by using accessories, parts, or components not supplied by us
- Products with missing or altered service tags or serial numbers
- Products for which we have not received payment

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE (OR JURISDICTION TO JURISDICTION). DELL'S RESPONSIBILITY FOR MALFUNCITONS AND DEFECTS IN HARDWARE IS LIMITED TO REPAIR AND REPLACEMENT AS SET FORTH IN THIS WARRANTY STATEMENT. ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN TIME TO THE TERM OF THE LIMITED WARRANTY PERIOD REFLECTED ON YOUR INVOICE. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE LIMITED WARRANTY PERIOD HAS EXPIRED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

WE DO NOT ACCEPT LIABILITY BEYOND THE REMEDIES PROVIDED FOR IN THIS LIMITED WARRANTY OR FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LIABILTY FOR THIRD PARTY CLAIMS AGAINST YOU FOR DAMAGES, FOR PRODUCTS NOT BEING AVAILABLE FOR USE, OR FOR LOST DATA OR LOST SOFTWARE. OUR LIABILITY WILL BE NO MORE THAN THE AMOUNT YOU PAID FOR THE PRODUCT THAT IS THE SUBJECT OF A CLAIM. THIS IS THE MAXIMUM AMOUNT FOR WHICH WE ARE RESPONSIBLE.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

How long does this limited warranty last?

This limited warranty lasts for the time period indicated on your invoice, except that the limited warranty on Dell-branded batteries lasts only one year and the limited warranty on the lamps for Dell-branded projectors lasts only ninety days. The limited warranty begins on the date of the invoice. The warranty period is not extended if we repair or replace a warranted product or any parts. Dell may change the availability of limited warranties, at its discretion, but any changes will not be retroactive.

What do I do if I need warranty service?

Before the warranty expires, please call us at the relevant number listed in the following table. Please also have your Dell service tag number or order number available.

Individual Home Consumers:	
Technical Support	1-800-624-9896
Customer Service	1-800-624-9897
Individual Home Consumers who purchased through an Employee Purchase Program:	
Technical Support and Customer Service	1-800-822-8965
Home and Small Business Commercial Customers:	
Technical Support and Customer Service	1-800-456-3355
Medium, Large, or Global Commercial Customers, Healthcare Customers, and Value Added Resellers (VARs):	
Technical Support and Customer Service	1-800-822-8965
Government and Education Customers:	
Technical Support and Customer Service	1-800-234-1490
Dell-Branded Memory	1-888-363-5150

What will Dell do?

During the first 90 days of the 90-day limited warranty and the first year of all other limited warranties: For the first 90 days of the 90-day limited warranty and the first year of all other limited warranties, we will repair any Dell-branded hardware products returned to us that prove to be defective in materials or workmanship. If we are not able to repair the product, we will replace it with a comparable product that is new or refurbished.

When you contact us, we will issue a Return Material Authorization Number for you to include with your return. You must return the products to us in their original or equivalent packaging, prepay shipping charges, and insure the shipment or accept the risk if the product is lost or damaged in shipment. We will return the repaired or replacement products to you. We will pay to ship the repaired or replaced products to you if you use an address in the United States (excluding Puerto Rico and U.S. possessions and territories). Otherwise, we will ship the product to you freight collect.

If we determine that the product is not covered under this warranty, we will notify you and inform you of service alternatives that are available to you on a fee basis.

NOTE: Before you ship the product(s) to us, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). Remove any confidential, proprietary, or personal information and removable media such as floppy disks, CDs, or PC Cards. We are not responsible for any of your confidential, proprietary, or personal information; lost or corrupted data; or damaged or lost removable media.

During the remaining years: For the remaining period of the limited warranty, we will replace any defective part with new or refurbished parts, if we agree that it needs to be replaced. When you contact us, we will require a valid credit card number at the time you request a replacement part, but we will not charge you for the replacement part as long as you return the original part to us within thirty days after we ship the replacement part to you. If we do not receive the original part within thirty days, we will charge to your credit card the then-current standard price for that part.

We will pay to ship the part to you if you use an address in the United States (excluding Puerto Rico and U.S. possessions and territories). Otherwise, we will ship the part freight collect. We will also include a prepaid shipping container with each replacement part for your use in returning the replaced part to us.

NOTE: Before you replace parts, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). We are not responsible for lost or corrupted data.

What if I purchased a service contract?

If your on-site service contract is with Dell, on-site service will be provided to you under the terms of the on-site service agreement. Please refer to that contract for details on how to obtain service.

If you purchased through us a service contract with one of our third-party service providers, please refer to that contract for details on how to obtain service.

How will you fix my product?

We use new and refurbished parts made by various manufacturers in performing warranty repairs and in building replacement parts and systems. Refurbished parts and systems are parts or systems that have been returned to Dell, some of which were never used by a customer. All parts and systems are inspected and tested for quality. Replacement parts and systems are covered for the remaining period of the limited warranty for the product you bought.

What do I do if I am not satisfied?

We pride ourselves on our great customer service. If you are not satisfied with the service you receive under this limited warranty, please let us know. We have found that the best way to resolve issues regarding our limited warranty is to work together. If, after those discussions, you are still not satisfied, we believe arbitration is the most expeditious way to resolve your concerns. Therefore, **ANY CLAIM, DISPUTE, OR CONTROVERSY (WHETHER IN CONTRACT, TORT, OR OTHERWISE, WHETHER PREEXISTING, PRESENT, OR FUTURE, AND INCLUDING STATUTORY, COMMON LAW, INTENTIONAL TORT, AND EQUITABLE CLAIMS) AGAINST DELL** arising from or relating to this limited warranty, its interpretation, or the breach, termination, or validity thereof, the relationships which result from this limited warranty (including, to the full extent permitted by applicable law, relationships with third parties), Dell's advertising, or any related purchase **SHALL BE RESOLVED EXCLUSIVELY AND FINALLY BY BINDING ARBITRATION ADMINISTERED BY THE NATIONAL ARBITRATION FORUM (NAF)** under its Code of Procedure then in effect (available via the Internet at **www.arb-forum.com/** or via telephone at 1-800-474-2371). The arbitration will be limited solely to the dispute or controversy between you and Dell. Any award of the arbitrator(s) shall be final and binding on each of the parties, and may be entered as a judgment in any court of competent jurisdiction. Information may be obtained and claims may be filed with the NAF at P.O. Box 50191, Minneapolis, MN 55405. This provision applies only to individual home consumers and consumers who purchased through an employee purchase program. It does not apply to small, medium, large, and global commercial customers or government, education, and healthcare customers.

May I transfer the limited warranty?

Limited warranties on systems may be transferred if the current owner transfers ownership of the system and records the transfer with us. The limited warranty on Dell-branded memory may not be transferred.You may record your transfer by going to Dell's website:

- If you are an Individual Home Consumer, go to **www.dell.com/us/en/dhs/topics/sbtopic_015_ccare.htm**
- If you are a Small, Medium, Large, or Global Commercial Customer, go to **www.dell.com/us/en/biz/topics/sbtopic_ccare_nav_015_ccare.htm**
- If you are a Government, Education, or Healthcare Customer, or an Individual Consumer who purchased through an employee purchase program, go to **www.dell.com/us/en/pub/topics/sbtopic_015_ccare.htm**

If you do not have Internet access, call your customer care representative or call 1-800-624-9897.

"Total Satisfaction" Return Policy (U.S. Only)

We value our relationship with you and want to make sure that you're satisfied with your purchases. That's why we offer a "Total Satisfaction" return policy for most products that you—the end-user customer—purchase directly from Dell. Under this policy, you may return to Dell products that you purchased directly from Dell for a credit or a refund of the purchase price paid, less shipping and handling and applicable restocking fees as follows:

- **New Hardware Products and Accessories** — All new hardware, accessories, parts, and unopened software still in its sealed package, excluding the products listed below, may be returned within thirty days from the invoice date. To return applications software or an operating system that has been installed by Dell, you must return the entire computer. A different return policy applies to nondefective products purchased through Dell's Software and Peripherals division by customers of our Small and Medium Business divisions. Those products may be returned within thirty days from the invoice date, but a fifteen percent (15%) restocking fee will be deducted from any refund or credit. The "Total Satisfaction" Return Policy and Software and Peripherals division return policy are not available for Dell | EMC storage products, EMC-branded products, or enterprise software.

- **Reconditioned or Refurbished Dell-Branded Hardware Products and Parts** — All reconditioned or refurbished Dell-branded server and storage products may be returned within thirty days from the invoice date. All other reconditioned or refurbished Dell-branded hardware products and parts may be returned within fourteen days of the invoice date.

To return products, e-mail or call Dell customer service to receive a Credit Return Authorization Number within the return policy period applicable to the product you want to return. You must obtain a Credit Return Authorization Number in order to return the product. See "Getting Help" in your *User's Guide* (or **www.dell.com/us/en/gen/contact.htm**) to find the appropriate contact information for obtaining customer assistance.

You must ship the products to Dell within five days of the date that Dell issues the Credit Return Authorization Number. You must also return the products to Dell in their original packaging, in as-new condition along with any media, documentation, and all other items that were included in the original shipment, prepay shipping charges, and insure the shipment or accept the risk of loss or damage during shipment.

Limited Warranty Terms for Canada

What is covered by this limited warranty?

This limited warranty covers defects in materials and workmanship in your—our end-user customer's—Dell-branded hardware products, including Dell-branded peripheral products.

What is not covered by this limited warranty?

This limited warranty does not cover:

- Software, including the operating system and software added to the Dell-branded hardware products through our factory-integration system, or the reloading of the software
- Non-Dell branded products and accessories
- Problems that result from:
  - External causes such as accident, abuse, misuse, or problems with electrical power
  - Servicing not authorized by us
  - Usage that is not in accordance with product instructions
  - Failure to follow the product instructions or failure to perform preventive maintenance
  - Problems caused by using accessories, parts, or components not supplied by us
- Products with missing or altered service tags or serial numbers
- Products for which we have not received payment

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM PROVINCE TO PROVINCE. DELL'S RESPONSIBILITY FOR MALFUNCTIONS AND DEFECTS IN PRODUCT IS LIMITED TO REPAIR AND REPLACEMENT AS SET FORTH IN THIS WARRANTY STATEMENT, FOR THE TERM OF THE WARRANTY PERIOD REFLECTED ON YOUR INVOICE. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS WARRANTY STATEMENT, DELL DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. SOME PROVINCES DO NOT ALLOW THE EXCLUSION OF CERTAIN IMPLIED WARRANTIES OR CONDITIONS, OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS. THEREFORE, THE FOREGOING EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

WE DO NOT ACCEPT LIABILITY BEYOND THE REMEDIES PROVIDED FOR IN THIS WARRANTY STATEMENT OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LIABILTY FOR THIRD PARTY CLAIMS AGAINST YOU FOR DAMAGES, FOR PRODUCTS NOT BEING AVAILABLE FOR USE, OR FOR LOST DATA OR LOST SOFTWARE. OUR LIABILITY WILL BE NO MORE THAN THE AMOUNT YOU PAID FOR THE PRODUCT THAT IS THE SUBJECT OF A CLAIM. THIS IS THE MAXIMUM AMOUNT FOR WHICH WE ARE RESPONSIBLE.

SOME PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

How long does this limited warranty last?

This limited warranty lasts for the time period indicated on your invoice, except that the limited warranty on Dell-branded batteries lasts only one year and the limited warranty on the lamps for Dell-branded projectors lasts only ninety days. The limited warranty begins on the date of the invoice. The warranty period is not extended if we repair or replace a warranted product or any parts. Dell may change the terms and availability of limited warranties, at its discretion, but any changes will not be retroactive (that is, the warranty terms in place at the time of purchase will apply to your purchase).

What do I do if I need warranty service?

Before the warranty expires, please call us at the relevant number listed in the following table. Please also have your Dell service tag number or order number available.

Individual Home Consumers; Home Office and Small Business Customers:	
Technical Support and Customer Service	1-800-847-4096
Medium, Large, and Global Commercial Customers; Government, Education, and Healthcare Customers; and Value Added Resellers (VARs):	
Technical Support	1-800-387-5757
Customer Service	1-800-326-9463
Government or Education Customers, or Individual Home Consumers who purchased through an Employee Purchase Program:	
Technical Support	1-800-387-5757
Customer Service	1-800-326-9463 (Extension 8221 for Individual Consumers)
Dell-Branded Memory	1-888-363-5150

What will Dell do?

During the first year of all limited warranties: During the first year of all limited warranties, we will repair any Dell-branded hardware products returned to us that prove to be defective in materials or workmanship. If we are not able to repair the product, we will replace it with a comparable product that is new or refurbished.

When you contact us, we will issue a Return Material Authorization Number for you to include with your return. You must return the products to us in their original or equivalent packaging, prepay shipping charges, and insure the shipment or accept the risk if the product is lost or damaged in shipment. We will return the repaired or replacement products to you. We will pay to ship the repaired or replaced products to you if you use an address in Canada. Otherwise, we will ship the product to you freight collect.

If we determine that the problem is not covered under this warranty, we will notify you and inform you of service alternatives that are available to you on a fee basis.

NOTE: Before you ship the product(s) to us, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). Remove any confidential, proprietary or personal information, removable media, such as floppy disks, CDs, or PC Cards. We are not responsible for any of your confidential, proprietary or personal information; lost or corrupted data; or damaged or lost removable media.

During the remaining years following the first year of all limited warranties: We will replace any defective part with new or refurbished parts, if we agree that it needs to be replaced. When you contact us, we will require a valid credit card number at the time you request a replacement part, but we will not charge you for the replacement part as long as you return the original part to us within thirty days after we ship the replacement part to you. If we do not receive the original part within thirty days, we will charge to your credit card the then-current standard price for that part.

We will pay to ship the part to you if you use an address in Canada. Otherwise, we will ship the part freight collect. We will also include a prepaid shipping container with each replacement part for your use in returning the replaced part to us.

NOTE: Before you replace parts, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). We are not responsible for lost or corrupted data.

What if I purchased an on-site service contract?

If your service contract is with Dell, service will be provided to you under the terms of the service contract. Please refer to that contract for details on how to obtain service. Dell's service contracts can be found online at **www.dell.ca** or by calling Customer Care at 1-800-847-4096. If you purchased through us a service contract with one of our third-party service providers, please refer to that contract (mailed to you with your invoice) for details on how to obtain service.

How will you fix my product?

We use new and refurbished parts made by various manufacturers in performing warranty repairs and in building replacement parts and systems. Refurbished parts and systems are parts or systems that have been returned to Dell, some of which were never used by a customer. All parts and systems are inspected and tested for quality. Replacement parts and systems are covered for the remaining period of the limited warranty for the product you bought. Dell owns all parts removed from repaired products.

What do I do if I am not satisfied?

We pride ourselves on our great customer service. If you are not satisfied with the service you receive under this limited warranty, please let us know. We have found that the best way to resolve issues regarding our limited warranty is to work together. If, after those discussions, you are still not satisfied, we believe arbitration is the most expeditious way to resolve your concerns. Therefore, **ANY CLAIM, DISPUTE, OR CONTROVERSY (WHETHER IN CONTRACT, TORT, OR OTHERWISE, WHETHER PREEXISTING, PRESENT OR FUTURE, AND INCLUDING STATUTORY, COMMON LAW, INTENTIONAL TORT, AND EQUITABLE CLAIMS) AGAINST DELL** arising from or relating to this limited warranty, its interpretation, or the breach, termination or validity thereof, the relationships which result from this limited warranty (including, to the full extent permitted by applicable law, relationships with third parties), Dell's advertising, or any related purchase **SHALL BE RESOLVED EXCLUSIVELY AND FINALLY BY BINDING ARBITRATION ADMINISTERED BY THE NATIONAL ARBITRATION FORUM (NAF)** under its Code of Procedure then in effect (available via the Internet at **www.arb-forum.com/**, or via telephone at 1-800-474-2371). The arbitration will be limited solely to the dispute or controversy between you and Dell. Any award of the arbitrator(s) shall be final and binding on each of the parties, and may be entered as a judgment in any court of competent jurisdiction. Information may be obtained and claims may be filed with the NAF at P.O. Box 50191, Minneapolis, MN 55405.

May I transfer the limited warranty?

Limited warranties on systems may be transferred if the current owner transfers ownership of the system and records the transfer with us. The limited warranty on Dell-branded memory may not be transferred.You may record your transfer by going to our website:

- If you are an Individual Home Consumer, go to **www.dell.com/us/en/dhs/topics/sbtopic_016_ccare.htm**
- If you are a Home Office, Small, Medium, Large, or Global Commercial Customer, go to **www.dell.com/us/en/biz/topics/sbtopic_ccare_nav_016_ccare.htm**
- If you are a Government, Education, or Healthcare Customer, or an Individual Home Consumer who purchased through an Employee Purchase Program, go to **www.dell.com/us/en/pub/topics/sbtopic_016_ccare.htm**

If you do not have Internet access, please call Dell at 1-800-326-9463.

"Total Satisfaction" Return Policy (Canada Only)

If you are an end-user customer who bought new products directly from Dell, you may return them to Dell up to 30 days after you receive them for a refund or credit of the product purchase price. If you are an end-user customer who bought reconditioned or refurbished products from Dell, you may return them to Dell within 14 days after the date of invoice for a refund or credit of the product purchase price. In either case, the refund or credit will not include any shipping and handling charges shown on your invoice and will be subject to a fifteen percent (15%) restocking fee, unless otherwise prohibited by law. If you are an organization that bought the products under a written agreement with Dell, the agreement may contain different terms for the return of products than specified by this policy.

To return products, you must call Dell Customer Service at 1-800-387-5759 to receive a Credit Return Authorization Number. To expedite the process of your refund or credit, Dell expects you to return the products to Dell in their original packaging within five days of the date that Dell issues the Credit Return Authorization Number. You must also prepay shipping charges and insure the shipment or accept the risk of loss or damage during shipment. You may return software for a refund or credit only if the sealed package containing the floppy disk(s) or CD(s) is unopened. Returned products must be in as-new condition, and all of the manuals, floppy disk(s), CD(s), power cables, and other items included with a product must be returned with it. For customers who want to return, for refund or credit only, either application or operating system software that has been installed by Dell, the whole system must be returned, along with any media and documentation that may have been included in the original shipment.

The "Total Satisfaction" Return Policy does not apply to Dell | EMC storage products. It also does not apply to products purchased through Dell's Software and Peripherals division. For those products, please instead refer to Dell's Software and Peripheral's then-current return policy (see the following section, "Dell Software and Peripherals (Canada Only)").

Dell Software and Peripherals (Canada Only)

Third-Party Software and Peripherals Products

Similar to other resellers of software and peripherals, Dell does not warrant third-party products. Third-party software and peripheral products are covered by the warranties provided by the original manufacturer or publisher only. Third party manufacturer warranties vary from product to product. Consult your product documentation for specific warranty information. More information may also be available from the manufacturer or publisher.

While Dell offers a wide selection of software and peripheral products, we do not specifically test or guarantee that all of the products we offer work with any or all of the various models of Dell computers, nor do we test or guarantee all of the products we sell on the hundreds of different brands of computers available today. If you have questions about compatibility, we recommend and encourage you to contact the third-party software and peripheral product manufacturer or publisher directly.

Dell-Branded Peripheral Products

Dell does provide a limited warranty for new Dell-branded peripheral products (products for which Dell is listed as the manufacturer) such as monitors, batteries, memory, docking stations, and projectors). To determine which limited warranty applies to the product you purchased, see the Dell invoice and/or the product documentation that accompanied your product. Descriptions of Dell's limited warranties are described in preceding sections.

Return Policy

If you are an end-user customer who bought Dell Software and Peripherals products directly from a Dell company, you may return Dell Software and Peripherals products that are in as-new condition to Dell up to 30 days from the date of invoice for a refund of the product purchase price if already paid. This refund will not include any shipping and handling charges shown on your invoice; you are responsible for those.

To return products, you must call Dell Customer Service at 1-800-387-5759 to receive a Credit Return Authorization Number. You must ship the Dell Software and Peripherals products back to Dell in their original manufacturer's packaging (which must be in as-new condition), prepay shipping charges, and insure the shipment or accept the risk of loss or damage during shipment.

To qualify for refund or replacement, returned products must be in as-new condition, software products must be unopened, and all of the manuals, floppy disk(s), CD(s), power cables, and other items included with a product must be returned with it.

One-Year End-User Manufacturer Guarantee (Latin America and the Caribbean Only)

Guarantee

Dell Computer Corporation ("Dell") warrants to the end user in accordance with the following provisions that its branded hardware products, purchased by the end user from a Dell company or an authorized Dell distributor in Latin America or the Caribbean, will be free from defects in materials, workmanship, and design affecting normal use, for a period of one year from the original purchase date. Products for which proper claims are made will, at Dell's option, be repaired or replaced at Dell's expense. Dell owns all parts removed from repaired products. Dell uses new and reconditioned parts made by various manufacturers in performing repairs and building replacement products.

Exclusions

This Guarantee does not apply to defects resulting from: improper or inadequate installation, use, or maintenance; actions or modifications by unauthorized third parties or the end user; accidental or willful damage; or normal wear and tear.

Making a Claim

Claims must be made in Latin America or the Caribbean by contacting the Dell point of sale within the guarantee period. The end user must always supply proof of purchase, indicating name and address of the seller, date of purchase, model and serial number, name and address of the customer, and details of symptoms and configuration at the time of malfunction, including peripherals and software used. Otherwise, Dell may refuse the guarantee claim. Upon diagnosis of a warranted defect, Dell will make arrangements and pay for ground freight and insurance to and from Dell's repair/replacement center. The end user must ensure that the defective product is available for collection properly packed in original or equally protective packaging together with the details listed above and the return number provided to the end user by Dell.

Limitation and Statutory Rights

Dell makes no other warranty, guarantee or like statement other than as explicitly stated above, and this Guarantee is given in place of all other guarantees whatsoever, to the fullest extent permitted by law. In the absence of applicable legislation, this Guarantee will be the end user's sole and exclusive remedy against Dell or any of its affiliates, and neither Dell nor any of its affiliates shall be liable for loss of profit or contracts, or any other indirect or consequential loss arising from negligence, breach of contract, or howsoever.

This Guarantee does not impair or affect mandatory statutory rights of the end user against and/or any rights resulting from other contracts concluded by the end user with Dell and/or any other seller.

Dell World Trade LP
One Dell Way, Round Rock, TX 78682, USA

Dell Computadores do Brasil Ltda (CNPJ No. 72.381.189/0001-10)/
Dell Commercial do Brasil Ltda (CNPJ No. 03 405 822/0001-40)
Avenida Industrial Belgraf, 400
92990-000 - Eldorado do Sul – RS - Brasil

Dell Computer de Chile Ltda
Coyancura 2283, Piso 3- Of.302,
Providencia, Santiago - Chile

Dell Computer de Colombia Corporation
Carrera 7 #115-33 Oficina 603
Bogota, Colombia

Dell Computer de Mexico SA de CV
Paseo de la Reforma 2620 - 11° Piso
Col. Lomas Altas
11950 México, D.F.

Intel® Warranty Statement for Pentium® and Celeron® Processors Only (U.S. and Canada Only)

Intel's Three Year Limited Warranty

Limited Warranty
Intel warrants that its family of Pentium® and Celeron® processors, if properly used and installed, will be free from defects in materials and workmanship and will substantially conform to Intel's publicly available specifications for a period of three (3) years after the date the Pentium or Celeron processor was purchased (whether purchased separately or as part of a computer system).

If the Pentium or Celeron processor, which is the subject of this Limited Warranty, fails during the warranty period for reasons covered by this Limited Warranty, Intel, at its option, will:

• REPAIR the Pentium or Celeron processor by means of hardware and/or software; OR
• REPLACE the Pentium or Celeron processor with another Pentium or Celeron processor; OR
if Intel is unable to repair or replace the particular Pentium or Celeron processor,
• REFUND the then-current value of the Pentium or Celeron processor.

THIS LIMITED WARRANTY, AND ANY IMPLIED WARRANTIES THAT MAY EXIST UNDER STATE LAW, APPLY ONLY TO THE ORIGINAL PURCHASER OF THE PENTIUM OR CELERON PROCESSOR, OR PENTIUM OR CELERON PROCESSOR-BASED COMPUTER AND LAST ONLY FOR AS LONG AS SUCH PURCHASER CONTINUES TO OWN THE PROCESSOR.

Extent of Limited Warranty
Intel does not warrant that your Pentium or Celeron processor will be free from design defects or errors known as "errata." Current characterized errata are available upon request. This limited warranty is for purchasers in the United States and Canada only. The limited warranty does not cover any costs relating to removal or replacement of any Pentium or Celeron processors that are soldered or otherwise permanently affixed to your system's motherboard.

This limited warranty does not cover damages due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing.

How to Obtain Warranty Service
To obtain warranty service for your Pentium or Celeron processor, you may contact your computer system manufacturer in accordance with its instructions, or you may contact Intel.

To request warranty service from Intel, you should call Intel at 1-800-628-8686 during the warranty period during normal business hours (Pacific Time), excluding holidays. Please be prepared to provide:
(1) your name, address, and telephone numbers;
(2) proof of purchase;
(3) this Intel warranty card;
(4) a description of the computer system including the brand and model; and
(5) an explanation of the problem.

[Note: The Customer Service Representative may need additional information from you depending on the nature of the problem.]

The replacement processor is warranted under this written warranty and is subject to the same limitations and exclusions for the remainder of the original warranty period or one (1) year, whichever is longer.

WARRANTY LIMITATIONS AND EXCLUSIONS
THESE WARRANTIES REPLACE ALL OTHER WARRANTIES, EXPRESS OR IMPLIED INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. INTEL MAKES NO EXPRESS WARRANTIES BEYOND THOSE STATED HERE. INTEL DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES SO THIS LIMITATION MAY NOT APPLY TO YOU. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME LAWS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

LIMITATIONS OF LIABILITY
INTEL'S RESPONSIBILITY UNDER THIS, OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. INTEL IS NOT RESPONSIBLE FOR INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING YOUR PENTIUM PROCESSOR. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THE LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM JURISDICTION TO JURISDICTION.

Intel Pentium® and Celeron® Processors are backed by a three-year limited warranty.
Please refer to the reverse side of this card for complete warranty details.

Intel's Commitment to Quality
Intel is committed to producing the highest quality processors available. That's why we have hundreds of people dedicated to continuously improve our design, manufacturing, and testing technology.

We put every one of our Pentium® and Celeron® processors through a rigorous battery of tests during the design and manufacturing processes.

To verify that the new chip will correctly run the software written for Intel Architecture processors, a team of Intel engineers is dedicated to compatibility testing. In a state-of-art lab, this group runs an extensive set of operating systems, applications, network tests and stress tests repeatedly to ensure that the processor is compatible with representative software.

Just as importantly, we work with hardware and software companies in the computer industry to ensure that our processors are compatible with their products.

Additionally, a sampling of Intel processors are subjected to a rigorous "burn-in" test whereby the chip is operated at higher-than-normal temperatures and voltages. During this burn-in period, the processor experiences the equivalent of weeks of normal usage. These units are monitored for failures as part of our ongoing quality assurance process.

As a result, today's microprocessors from Intel are among the most reliable components in computers.

What are 'Errata'?
Exhaustive product testing can highlight differences between the actual behavior of the microprocessor and its specifications. Sometimes the discrepancies are caused by a design defect or error, which we call errata. Rigorous validation identifies most errata during the development of the processor, but we do detect additional errata during the life cycle of a microprocessor.

When an erratum is identified, our engineers work to characterize it and find a solution. We work with system designers and software developers to ensure that the discrepancy does not affect their products. If necessary, special software or hardware solutions (sometimes known as "work arounds") are implemented in the system design to prevent computer users from encountering the problem. Errata may then be corrected in future revisions of the microprocessor.

No microprocessor is perfect, and Intel recognizes that some consumers want to know about any errata, whether or not the errata affect them. Intel makes documentation of all characterized Pentium and Celeron processor errata publicly available through our Technical Documentation Service.

At Intel, our goal is to make every computer user satisfied with his or her Pentium or Celeron processor. Should you have any questions, comments or concerns about your Intel microprocessor, please call us at 1-800-628-8686.

©1997, 1998 Intel Corporation. All rights reserved.

Dell™ Latitude™ D600

系统信息指南

注、注意和警告

注：注表示可以帮助您更好地使用计算机的重要信息。

注意：注意表示可能会损坏硬件或导致数据丢失，并告诉您如何避免此类问题。

警告：警告表示存在可能导致财产损失、人身伤害或死亡的潜在危险。

缩略语和缩写词

有关缩写词或缩略语的完整列表，请参阅 《用户指南》（视您使用的操作系统而定，双击桌面上的 **"User's Guide"** [**用户指南**]图标，或者单击 **"Start"** [**开始**]按钮，单击 **"Help and Support Center"** [**帮助和支持中心**]，然后单击 **"User and system guides"** [**用户与系统指南**]）。

如果您购买的是 Dell™ n 系列计算机，则本文中关于 Microsoft® Windows® 操作系统的任何参考内容均不适用。

本文件中的信息如有更改，恕不另行通知。
© 2003 Dell Computer Corporation。版权所有，翻印必究。

未经 Dell Computer Corporation 书面许可，不准以任何形式进行复制。

本文件中使用的商标：Dell、DELL 徽标、Inspiron、Dell Precision、Dimension、OptiPlex 和 Latitude 是 Dell Computer Corporation 的商标；Intel、Pentium 和 Celeron 是 Intel Corporation 的注册商标；Microsoft 和 Windows 是 Microsoft Corporation 的注册商标；EMC 是 EMC Corporation 的注册商标。

本文件中述及的其它商标和产品名称是指拥有相应商标和名称的公司或其制造的产品。Dell Computer Corporation 对其它公司的商标和产品名称不拥有任何专利权。

2003 年 1 月　P/N 1N788　Rev. A00

目录

警告：安全说明 45

一般信息 45

电源 46

电池 47

乘飞机旅行 48

EMC 说明 48

使用计算机时 49

符合人机工程学操作习惯 50

拆装计算机内部组件时 50

防止静电损害 51

电池处理 51

查找计算机的相关信息 52

安装计算机 53

关于您的计算机 54

正面视图 56

左侧视图 57

右侧视图 58

背面视图 59

底部视图 60

取出电池 61

取出和安装备用电池 62

安装电池 64

运行 Dell 诊断程序 64

管制通告 66

⚠ 警告：安全说明

遵循以下安全原则可以确保您的人身安全，并且有助于避免计算机和工作环境出现损坏的危险。

一般信息

- 除非您是合格的维修技术人员，否则请勿尝试自行维修计算机。始终严格按照安装说明进行。
- 如果您使用延长电缆连接交流适配器，请确保延长电缆连接的所有产品的额定电流总和不超过延长电缆的额定电流。
- 不要将物体塞入计算机的通风孔或开口处。如果塞入物体，可能会导致内部组件短路而引起火灾或电击。
- 请勿将打开的计算机存放在通风不畅的环境中，例如手提箱或密封的公文包。通风不畅会损坏计算机或导致起火。
- 将计算机置于远离暖气片和有热源的地方。另外，切勿堵塞通风孔。不要将纸张垫在计算机下，也不要将计算机紧靠墙壁或放置在床、沙发或地毯上。
- 使用交流适配器运行计算机或为电池充电时，请将交流适配器放在通风的地方，例如桌面或地板上。不要将纸张或其它物品置于交流适配器上面，因为它们会降低适配器的冷却速度；另外，也不要在手提箱中使用交流适配器。
- 在计算机正常操作期间，交流适配器可能会变得很热。在操作期间或刚执行操作之后，请小心处理该适配器。
- 直接在裸露的皮肤上操作便携式计算机时，请不要操作太长的时间。随着操作的进行，充电器底部的表面温度会逐渐升高（特别在使用交流电源时）。长久地接触会引起皮肤不适，甚至会灼伤皮肤。
- 不要在潮湿的环境中使用计算机，例如浴缸、水池、游泳池旁边或潮湿的地下室内。
- 如果计算机中安装了集成的或可选的（PC 卡）调制解调器，请在雷雨快要来临时断开调制解调器的电缆，以免雷电产生的危险电压通过电话线从远处传入计算机而造成电击。

⚠ 警告：安全说明（续）

- 为避免潜在的触电危险，切勿在雷电期间连接或断开任何电缆，也不要维修或重新配置本产品。切勿在雷雨期间使用计算机，除非您的计算机使用电池供电，并且已断开了所有电缆。
- 如果计算机中安装了调制解调器，则调制解调器所用的电缆应采用 26 美国线规 (AWG) 中规定的最细电线以及符合 FCC 标准的 RJ-11 模块化插头进行制造。
- 打开计算机底部的内存模块/小型 PCI 卡/调制解调器护盖之前，请断开所有电缆与电源插座的连接，并断开电话电缆的连接。
- 如果计算机具有调制解调器 RJ-11 连接器和网络 RJ-45 连接器，请将电话电缆插入 RJ-11 连接器而不是 RJ-45 连接器。
- 正常运行期间，PC 卡的温度可能会很高。如果您在计算机连续运行后卸下 PC 卡，请务必小心。
- 清洁计算机之前，请先断开计算机与电源插座的连接。使用蘸水的软布擦拭计算机。切勿使用液体或喷雾清洁剂，因为其中可能含有易燃物质。

电源

- 只使用经认证可与本计算机配合使用的 Dell™ 交流适配器。使用其它类型的交流适配器可能会导致起火或爆炸。
- 将计算机连接至电源插座之前，请检查交流适配器的额定电压，确保所需的电压和频率与提供的电源相匹配。
- 要断开计算机的所有电源连接，请关闭计算机并取出电池组，然后从电源插座中断开交流适配器的连接。
- 为避免遭受电击，请将交流适配器和设备电源电缆插入正确接地的电源。这些电源电缆配有三脚插头，可以确保正确接地。不要使用转接插头，也不要拔下电源电缆插头的接地插脚。如果使用延长电缆，请使用适当类型的二线或三线电缆，以正确连接交流适配器电源电缆。
- 不要在交流适配器电源电缆上放置任何物品，并将电缆置于不会被踩踏或踢到的地方。
- 如果您使用多插座配电盘，请注意有关将电源适配器电源电缆插入配电盘的警告信息。某些配电盘可能会允许您错误地插入电源插头。错误地插入电源插头可能会对计算机造成永久性的损坏，同时还可能会导致电击和（或）起火。请确保将电源插头的接地插脚正确插入配电盘的相应接地触点。

⚠ 警告：安全说明（续）

电池

- 仅可使用经认证可以配合本计算机使用的 Dell™ 电池模块。使用其它类型的电池可能会导致起火或爆炸。
- 不要将电池组放入您的口袋、钱包或其它类似容器中，因为其中的金属物体（例如汽车钥匙或纸夹）可能会造成电池两端短路。由此产生的强大电流会形成极高的温度，从而烧坏电池组或灼伤皮肤。
- 如果处理不当，电池可能会灼伤皮肤。切勿拆开电池。处理已损坏或发生漏液的电池组时，请务必小心谨慎。如果电池损坏，电解液可能会从中流出并造成人身伤害。
- 将电池放置在远离儿童的地方。
- 不要将计算机或电池组存储或放置在热源（例如暖气片、壁炉、火炉、电暖气或其它产生热能的装置）附近，也不要暴露在温度超过 60ºC (140ºF) 的环境中。加热到高温时，电池可能会发生爆炸而导致起火。
- 不要将计算机电池丢入火中，也不要与普通家庭废品放在一起。电池可能会发生爆炸。根据制造商的说明处理废弃的电池，或者与当地的废品处理机构联系，了解处理电池的有关说明。请尽快处理已耗尽电量或已损坏的电池。

⚠ 警告：安全说明（续）

乘飞机旅行

- 在登机后使用 Dell 计算机时，可能会受到某些联邦航空管制条例或航空公司特有规定的限制。例如，这些条例/限制可能会禁止在飞机上使用任何可以发送射频或其它电磁信号的个人电子设备 (PED)。
  - 为了更好地遵守所有这些限制，如果您的 Dell 便携式计算机配有 Dell TrueMobile™ 或其它一些无线通信设备，请在登机前按 Fn F2 组合键禁用此设备，并且遵守机组人员就此类设备提供的所有使用说明。
  - 另外，在某些关键飞行状态下（例如飞机起飞或降落时），可能会禁止在飞机上使用个人计算机等个人电子设备。某些航空公司可能会进一步将飞机在 3050 米（10,000 英尺）高度以下飞行时定义为关键飞行状态。请务必遵守航空公司就何时允许使用个人电子设备所作出的特别说明。

EMC 说明

使用屏蔽信号电缆，确保在特定的环境中维持相应的 EMC 分类。Dell 提供了并行打印机电缆。如果您愿意，可以通过 Dell 的 WWW 站点 **www.dell.com** 向 Dell 订购电缆。

静电会损坏计算机内部的电子组件。为防止静电损害，请在接触计算机的任何电子组件（例如内存模块）之前先导去身上的静电。您可以通过触摸计算机输入/输出面板上未上漆的金属表面来导去静电。

使用计算机时

遵循以下安全处理原则，防止对计算机造成损害：

- 安装计算机时，请将其放置在平面上。
- 旅行时，请不要将计算机当作行李接受检查。您可以让计算机通过 X 光安全检查机，但不可让其通过金属检测器。如果工作人员需要对计算机进行人工检查，请确保计算机配有已充电的电池，因为工作人员可能会要求您打开计算机。
- 如果在旅行期间携带从计算机中卸下的硬盘驱动器，请用不导电的材料（例如布料或纸张）包好硬盘驱动器。如果工作人员需要对硬盘驱动器进行人工检查，请做好将驱动器装回计算机的准备。您可以让硬盘驱动器通过 X 光安全检查机，但切勿让其通过金属探测器。
- 旅行时，不要将计算机放置在座位上方的储物箱中，计算机在此储物箱中会四处滑动。切勿让计算机跌落或受到机械性撞击。
- 保护好您的计算机、电池和硬盘驱动器，防止外部环境对它们造成危害，例如污垢、灰尘、食物、液体、过高或过低的温度以及阳光直射。
- 在温度和（或）湿度差别较大的环境中移动计算机时，可能会在计算机表面或内部形成冷凝。为避免损坏计算机，请在使用前让计算机有足够的时间蒸发掉水份。

注意：将计算机从低温移至温暖环境或从高温移至较冷环境时，请在计算机适应室温后再开机。

- 断开电缆时，请抓住电缆的连接器或张力释放拉环将其拔出，切勿拉扯电缆。拔出连接器时应均匀用力，以免弄弯连接器插针。此外，在连接电缆之前，请确保两个连接器正确定位并对齐。
- 处理组件时应小心。您应握住组件（例如内存模块）的边缘，而不要握住组件的插针。
- 如果您准备从主机板上卸下内存模块或从计算机中断开某个设备的连接，请关闭计算机并断开交流适配器电缆的连接，然后等待 5 秒钟再继续操作，这样可以避免损坏主机板。

使用计算机时（续）

- 使用干净的软布和清水清洁显示屏。将软布蘸上水，然后从显示屏的顶部开始，向底部沿着一个方向擦拭显示屏。应迅速擦去显示屏上的水渍，使显示屏保持干燥。长期暴露在潮湿环境中，会使显示屏受到损坏。清洁显示屏时，请勿使用购买的窗户清洁剂。
- 如果您的计算机受潮或损坏，请执行《用户指南》中"解决问题"部分所述的步骤。执行这些步骤后，如果您确认计算机仍然不能正常工作，请与 Dell 联系（有关适当的联系信息，请参阅《用户指南》中的"获得帮助"）。

符合人机工程学操作习惯

⚠ **警告：不正确或超长时间地使用键盘可能会造成身体损伤。**

⚠ **警告：长时间地观看显示屏或外部显示器屏幕可能会造成眼睛疲劳。**

为满足舒适和高效的要求，在安装和使用计算机时，请遵循联机《用户指南》附录中的人机工程学原则。

本便携式计算机不适合作为办公设备进行连续操作。如果在办公室内长时间使用，建议您连接外部键盘。

拆装计算机内部组件时

拆卸或安装内存模块、小型 PCI 卡或调制解调器时，请按所示顺序执行以下步骤。

➡ **注意：**仅在安装内存模块、小型 PCI 卡或调制解调器时，才有必要拆卸计算机的内部组件。

➡ **注意：**请在关闭计算机后等待 5 秒钟，然后再断开设备连接或取出内存模块、小型 PCI 卡或调制解调器，这样可以避免损坏主机板。

1. 关闭计算机和已连接的任何设备。
2. 从电源插座中拔出计算机和外围设备的电源插头，以免造成人身伤害或电击。另外，从计算机上断开所有电话或电信线路的连接。
3. 从电池槽中取出主电池；如果有必要，从模块化托架中取出第二块电池。
4. 触摸计算机背面 I/O 面板上未上漆的金属表面，导去身上的静电。

   在工作期间不时地触摸 I/O 面板，导去可能会损坏内部组件的静电。

使用计算机时（续）

防止静电损害

静电会损坏计算机内部的电子组件。为防止静电损害，请在接触计算机的任何电子组件（例如内存模块）之前先导去身上的静电。您可以通过触摸计算机 I/O 面板上未上漆的金属表面来导去静电。

连续拆装计算机内部组件时，请不时地触摸 I/O 连接器，导去身上可能累积的静电。

另外，请采取以下措施防止静电释放 (ESD) 造成损害：

- 打开静电敏感组件的包装箱时，请不要将组件从防静电的包装材料中取出，除非您已准备好安装此组件。打开防静电包装之前，应确保已导去身上的静电。
- 运送对静电敏感的组件时，应先将其放入防静电的容器或包装内。
- 在无静电的工作区内处理所有的敏感组件。如果有可能，请使用防静电的地板垫和工作台垫。



电池处理

您的计算机使用锂离子电池。有关更换计算机中的锂离子电池的说明，请参阅本文稍后的“取出电池”和联机《用户指南》中的“使用电池”。

不要将电池与家庭废品放在一起。有关最近的电池回收点位置，请与当地的废品处理机构联系。

查找计算机的相关信息

您查找的内容	可以找到的位置
• 适用于计算机的诊断程序 • 适用于计算机的驱动程序 • 计算机说明文件 • 设备说明文件	**Drivers and Utilities CD（也称为 ResourceCD）** 您的计算机从 Dell 出厂时，已安装了说明文件和驱动程序。您可以使用该 CD 来重新安装驱动程序、运行 Dell 诊断程序或访问说明文件。 CD 中可能包含“自述”文件，介绍了有关计算机技术的最新更新信息，或者为有经验的用户或技术人员提供了高级技术参考资料。
• 快速服务代码和服务标签号码 • Microsoft® Windows® 许可标签	**快速服务代码和产品密钥** 这些标签位于您的计算机上。
• 适用于计算机的最新驱动程序 • 对技术服务与支持问题的解答 • 与其他用户和技术支持人员进行联机讨论 • 适用于计算机的说明文件	**Dell 支持 Web 站点** Dell 支持 Web 站点提供了几种联机工具，包括： • 解决方案 — 故障排除提示、技术性文章和联机课程 • 社区论坛 — 与其他 Dell 客户进行联机讨论 • 升级 — 内存、硬盘驱动器和操作系统等组件的升级信息 • 客户服务 — 联系信息、订购状态、保修和维修信息 • 下载 — 驱动程序、补丁程序和软件更新 • 参考 — 计算机说明文件、产品规格和白皮书
• 如何使用 Windows XP • 适用于计算机的说明文件 • 设备说明文件（例如调制解调器）	**Windows 帮助和支持中心** 1 单击 **“Start”（开始）**按钮，然后单击 **“Help and Support”（帮助和支持）**。 2 键入说明问题的字词，然后单击箭头图标。 3 单击说明问题的主题。 4 按照屏幕上的说明进行操作。

<table>
<tr><th>您查找的内容</th><th>可以找到的位置</th></tr>
<tr><td>• 如何重新安装操作系统</td><td>Operating System CD

如果您重新安装操作系统，请使用 Drivers and Utilities CD 为计算机附带的设备重新安装驱动程序。

操作系统的产品密钥位于计算机上。</td></tr>
</table>

安装计算机

1 打开附件盒。

2 将附件盒中的物品放在一边，您需要使用它们安装计算机。

附件盒还包含用户说明文件以及您订购的所有软件或其它硬件（例如 PC 卡、驱动器或电池）。

3 将交流适配器连接至交流适配器连接器和电源插座。

注意：打开计算机时，您可能会看到一则信息，表示您必须关闭计算机并升级计算机内存。如果屏幕显示此信息，请访问 Dell 支持 Web 站点 (support.dell.com) 上的《用户指南》，获得有关升级计算机内存的说明。

4 打开计算机显示屏，按下电源按钮启动计算机。

注：至少必须执行一次开机和关机操作，才能对接计算机。

关于您的计算机

有关计算机的详情，请参阅联机《用户指南》。视您使用的操作系统而定，双击桌面上的 **"User's Guide"（用户指南）**图标，或者单击 **"Start"（开始）**按钮，单击 **"Help and Support Center"（帮助和支持中心）**，然后单击 **"User and system guides"（用户与系统指南）**。以下项目解决了与计算机有关的一些常见问题。

- 调制解调器和网络适配器：计算机可能附带了 v.92 56K 调制解调器和 10/100/1000 Ethernet LOM 网络适配器。有关连接器位置，请参阅本说明文件后面的"右侧视图"。有关端口与连接器的详情，请参阅联机《用户指南》中的"关于您的计算机"。

- 电池使用时间与用法：有各种电池可供计算机使用。如果使用随计算机附带的 4460mAh 电池，在一般使用方法与电池充满电的情况下，单块电池的操作时间可达到 3 至 4 小时。执行某些类型的操作（例如扩展无线操作）时，电池使用时间可能会明显降低。
  - 有关电池性能、用法与节省电量的详情，请参阅 《用户指南》中的 “使用电池”和 “电源管理”。
  - 有关可选备用电池的信息，请参阅 《用户指南》中的 “使用模块化托架”。
- 模块化托架设备：有关模块化托架及其所支持设备的信息，请参阅《用户指南》中的“使用模块化托架”。
- 对接设备：您的计算机支持 Dell D/Dock 扩充站和 Dell D/Port 高级端口复制器。
  - 有关可选对接设备的信息，请参阅随设备附带的说明文件。
  - 有关在将对接设备与本计算机配合使用时如何获得最佳性能的信息，请参阅 《用户指南》中的 “解决问题”。

注：并非所有国家或地区均提供了对接设备。

正面视图

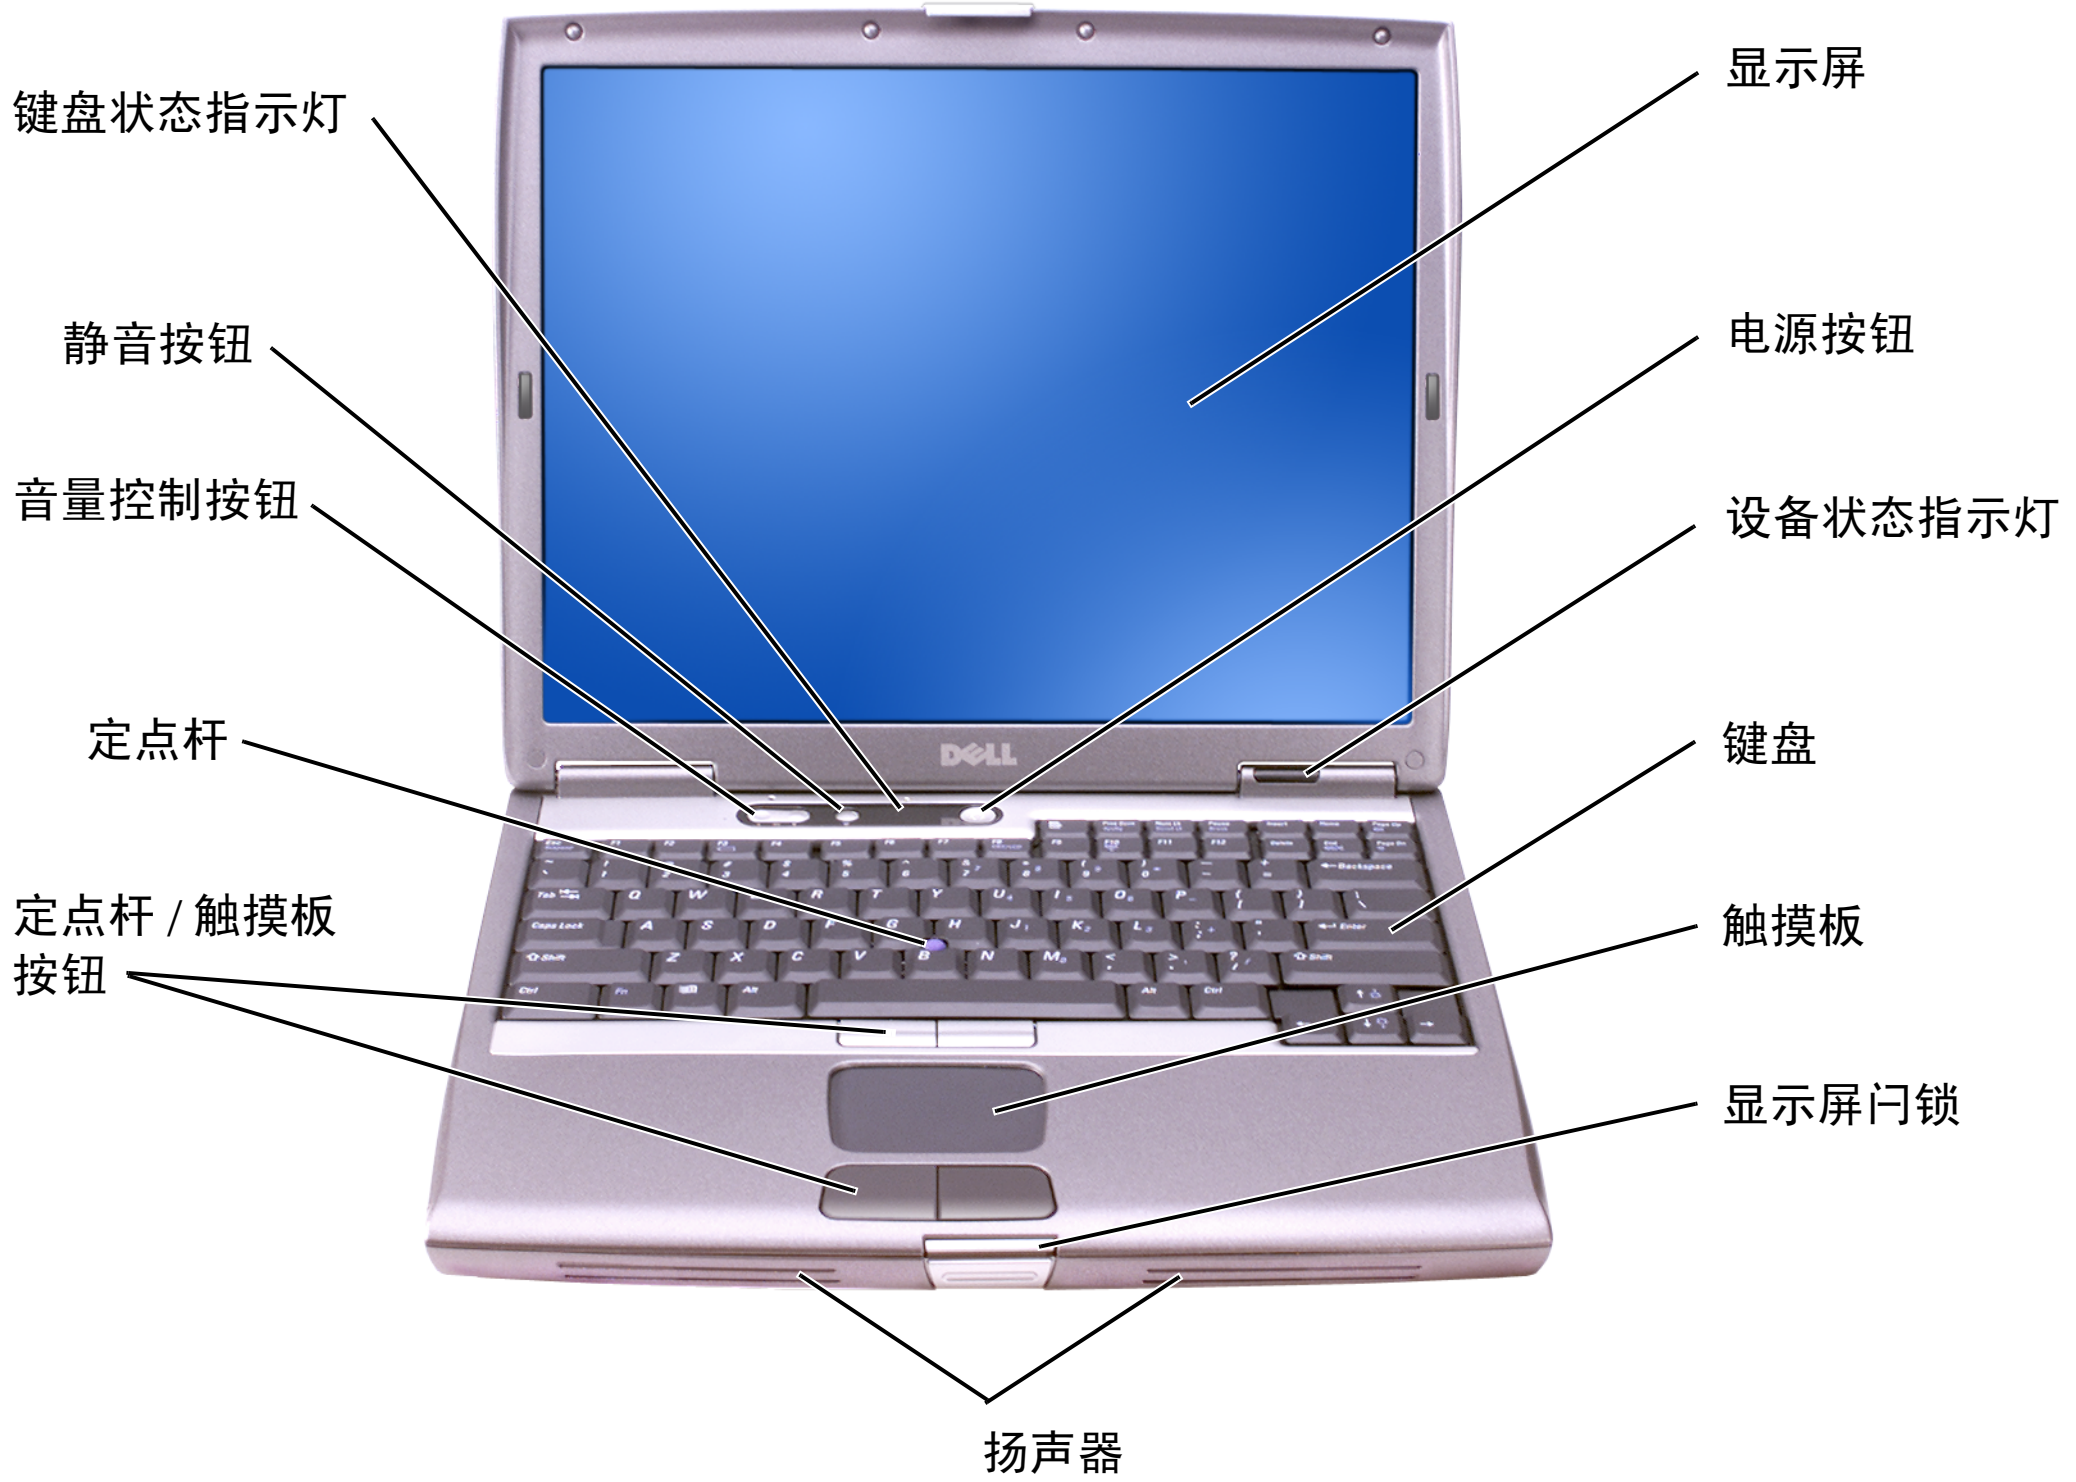
键盘状态指示灯
静音按钮
音量控制按钮
定点杆
定点杆 / 触摸板
按钮
显示屏
电源按钮
设备状态指示灯
键盘
触摸板
显示屏闩锁
扬声器

左侧视图

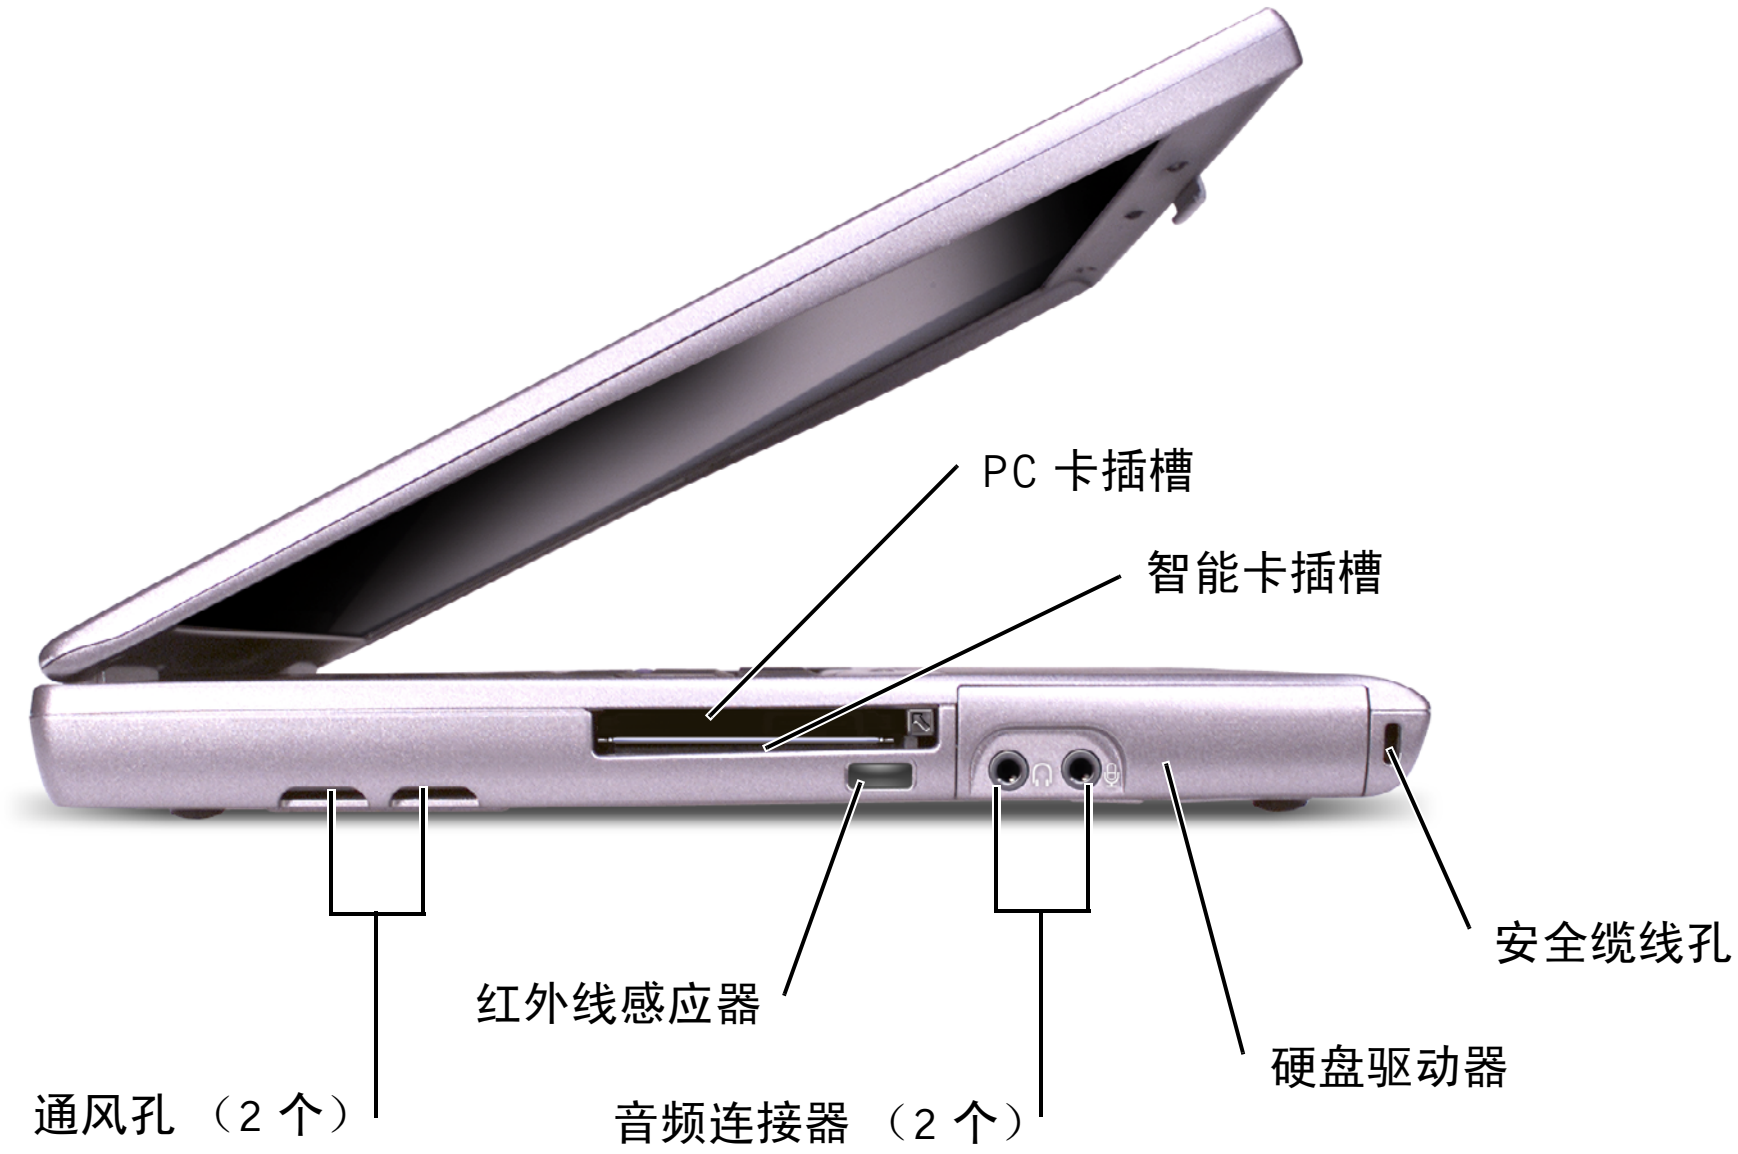

右侧视图

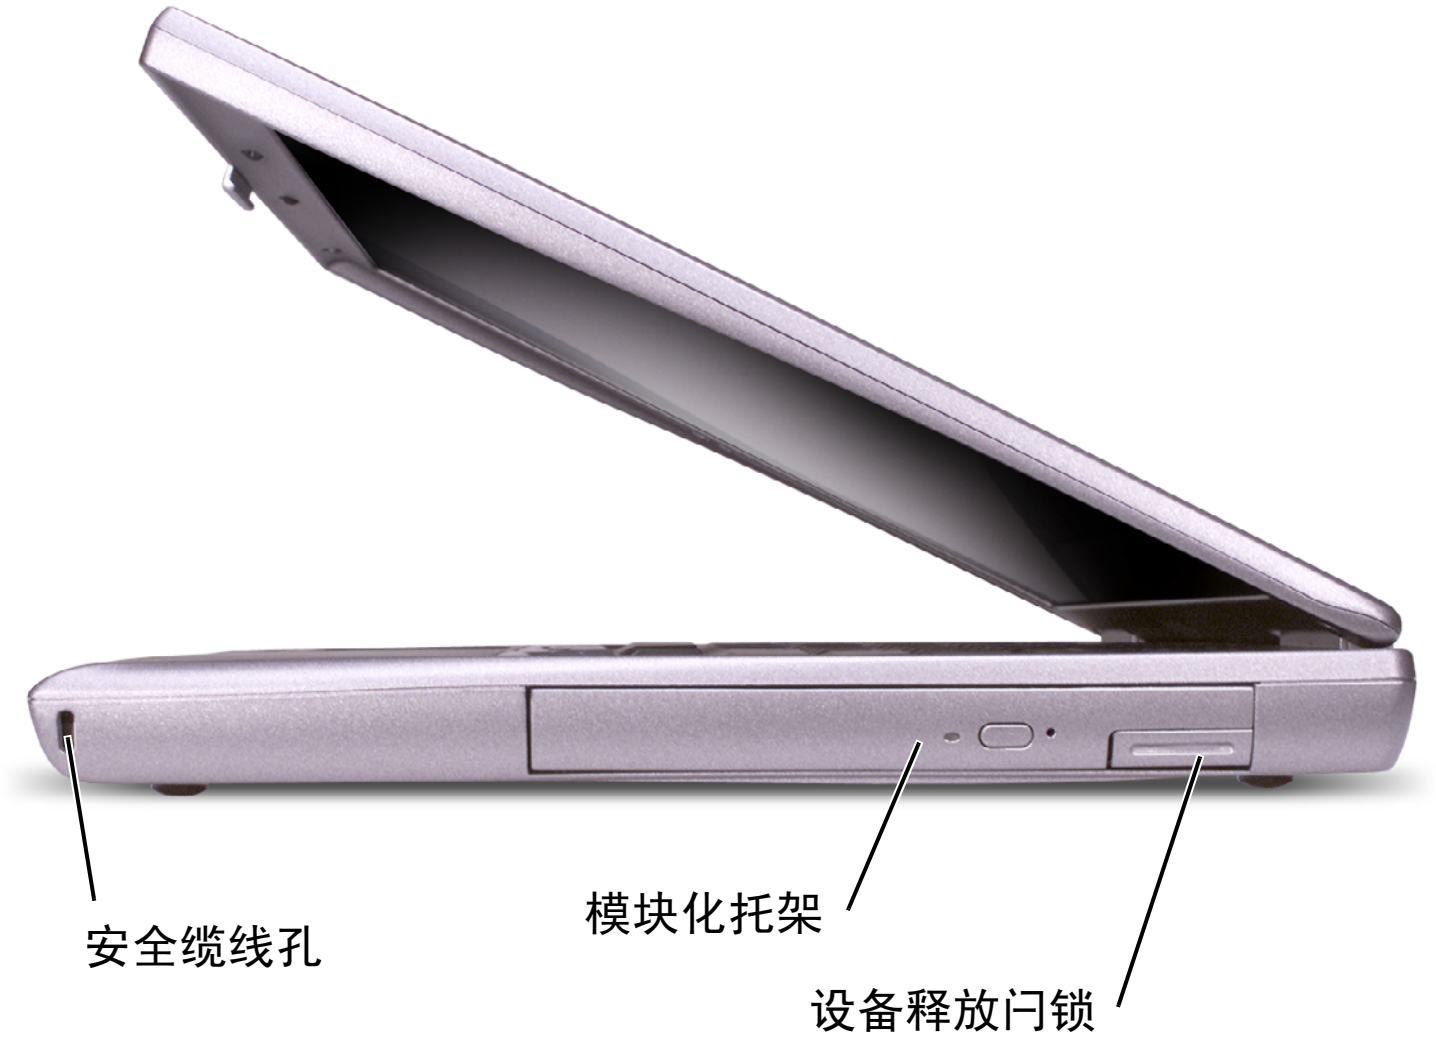

背面视图

注意：为避免损坏计算机，请在关闭计算机后等待 5 秒钟，然后再断开外部设备的连接。

警告：请勿堵塞通风孔或将物体塞入通风孔，也不要让灰尘积聚在通风孔内，不要将正在运行的计算机存储在通风不良的环境中，例如密封的公文包中。通风不畅会损坏计算机或导致起火。

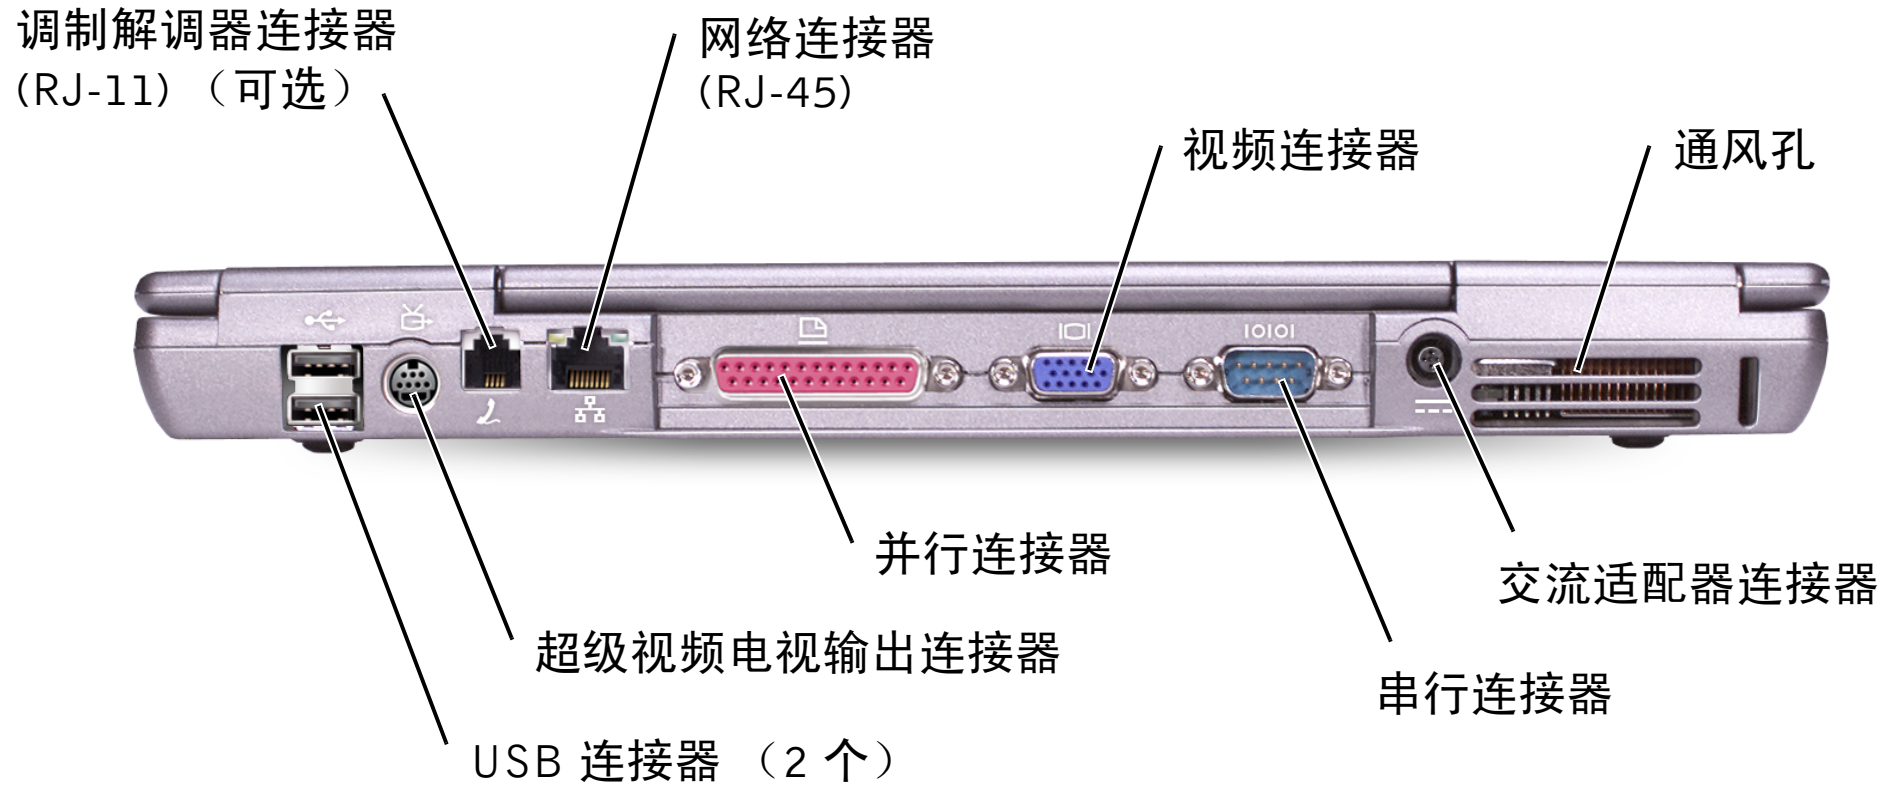

底部视图

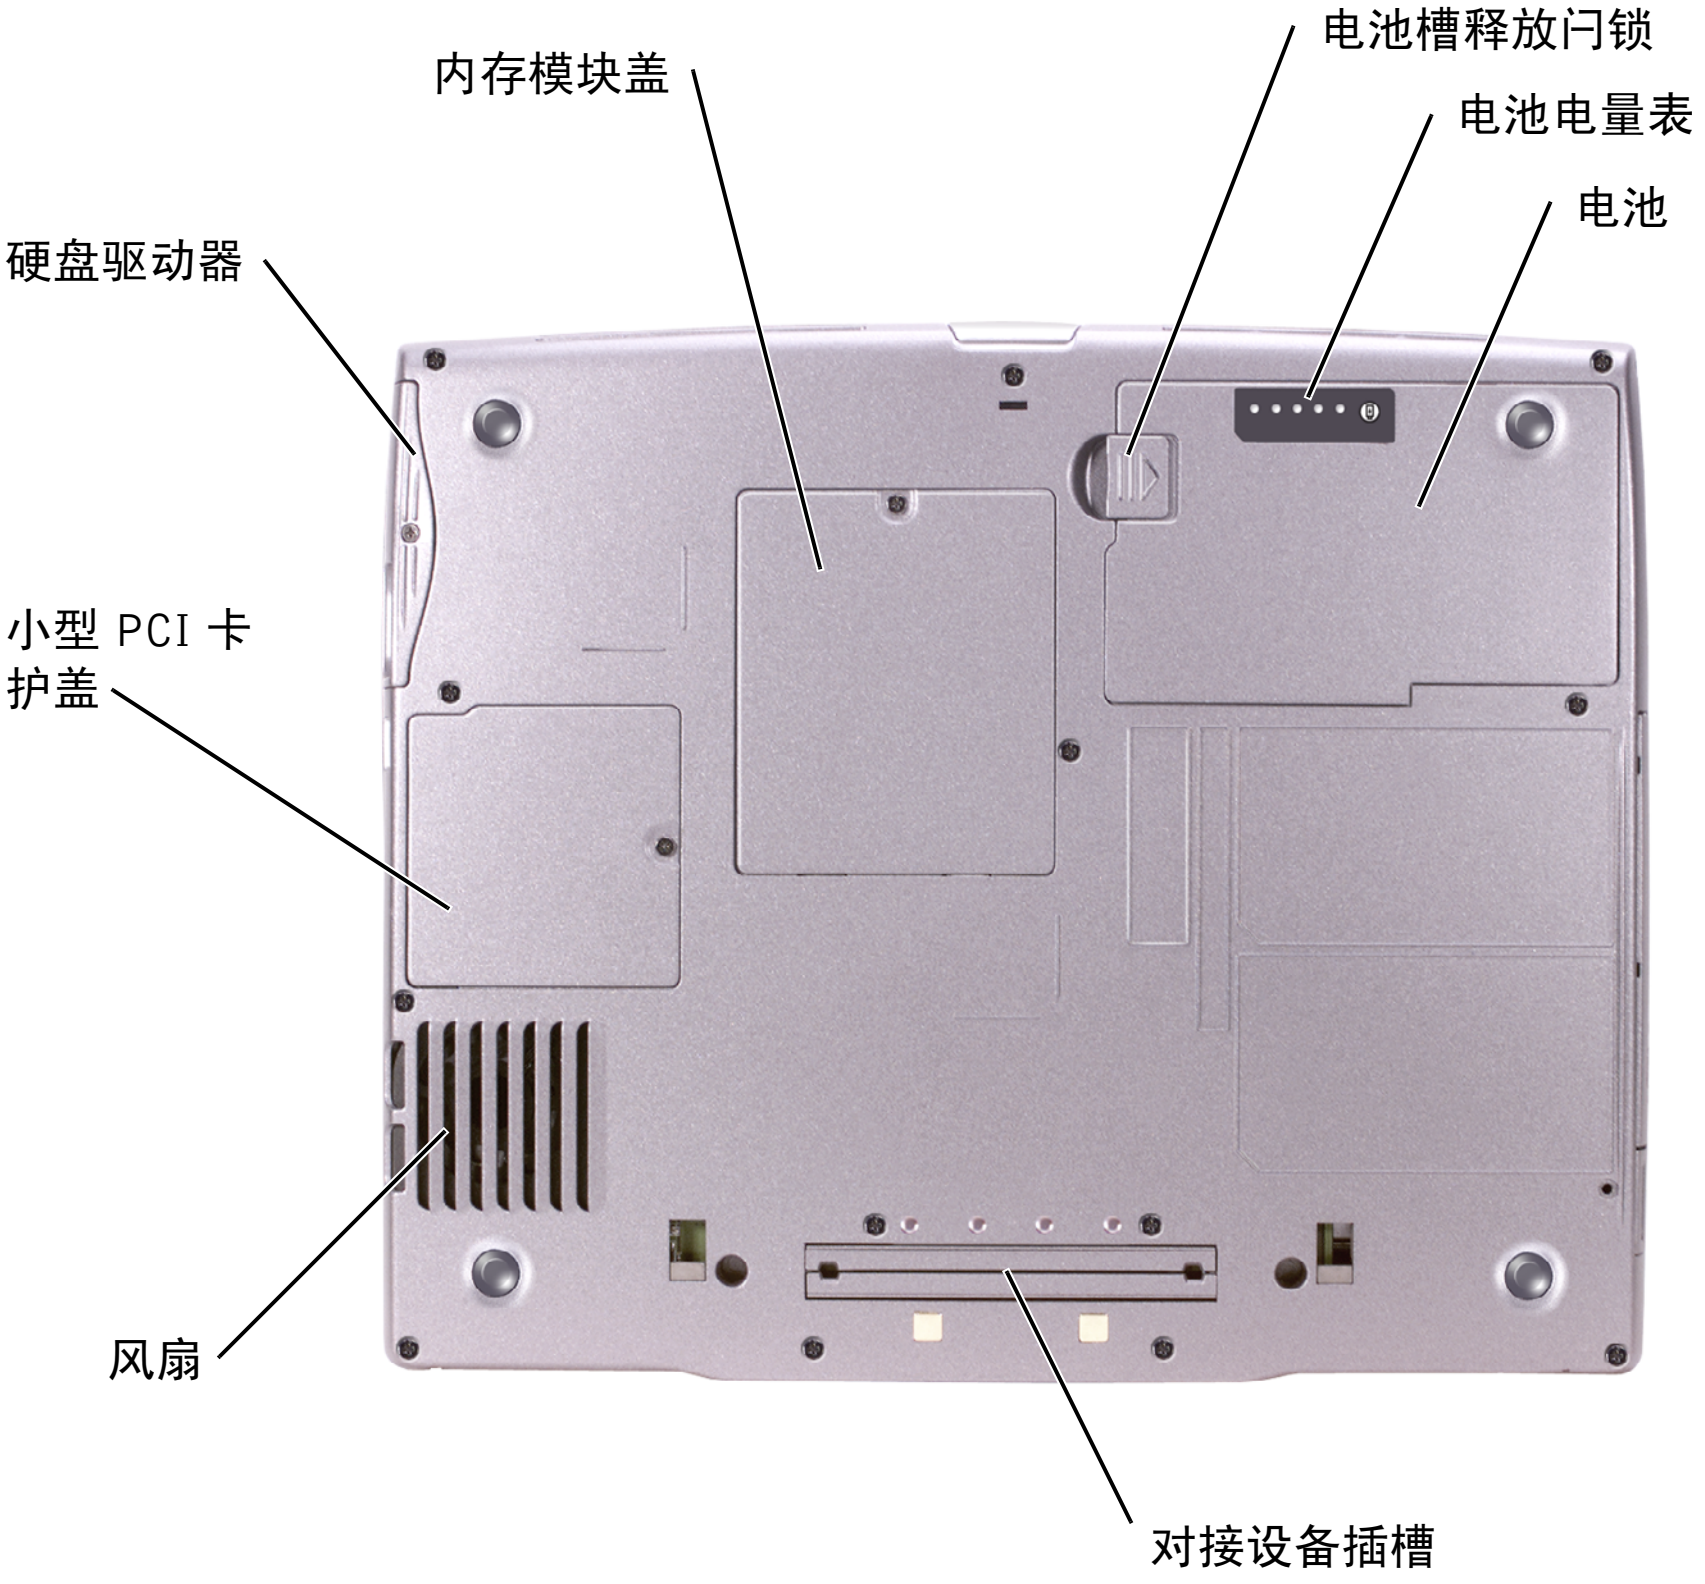

取出电池

有关取出第二块电池的详情，请参阅联机《用户指南》中的“使用模块化托架”。

⚠ **警告：执行这些过程之前，请关闭计算机并从电源插座中断开其连接，然后从墙上电话插孔中断开调制解调器的连接。**

注意：如果您在计算机处于备用模式时更换电池，则最多有 90 秒钟的时间来完成电池更换，否则计算机将会关机并丢失任何未保存的数据。

1 请确保计算机已关闭，并且已从电源插座和墙上电话插孔中断开连接。

2 如果已将计算机连接至对接设备（即已对接），请断开其对接。有关说明，请参阅对接设备附带的说明文件。

3 滑动并按住计算机底部的电池槽释放闩锁，然后从电池槽中取出电池。

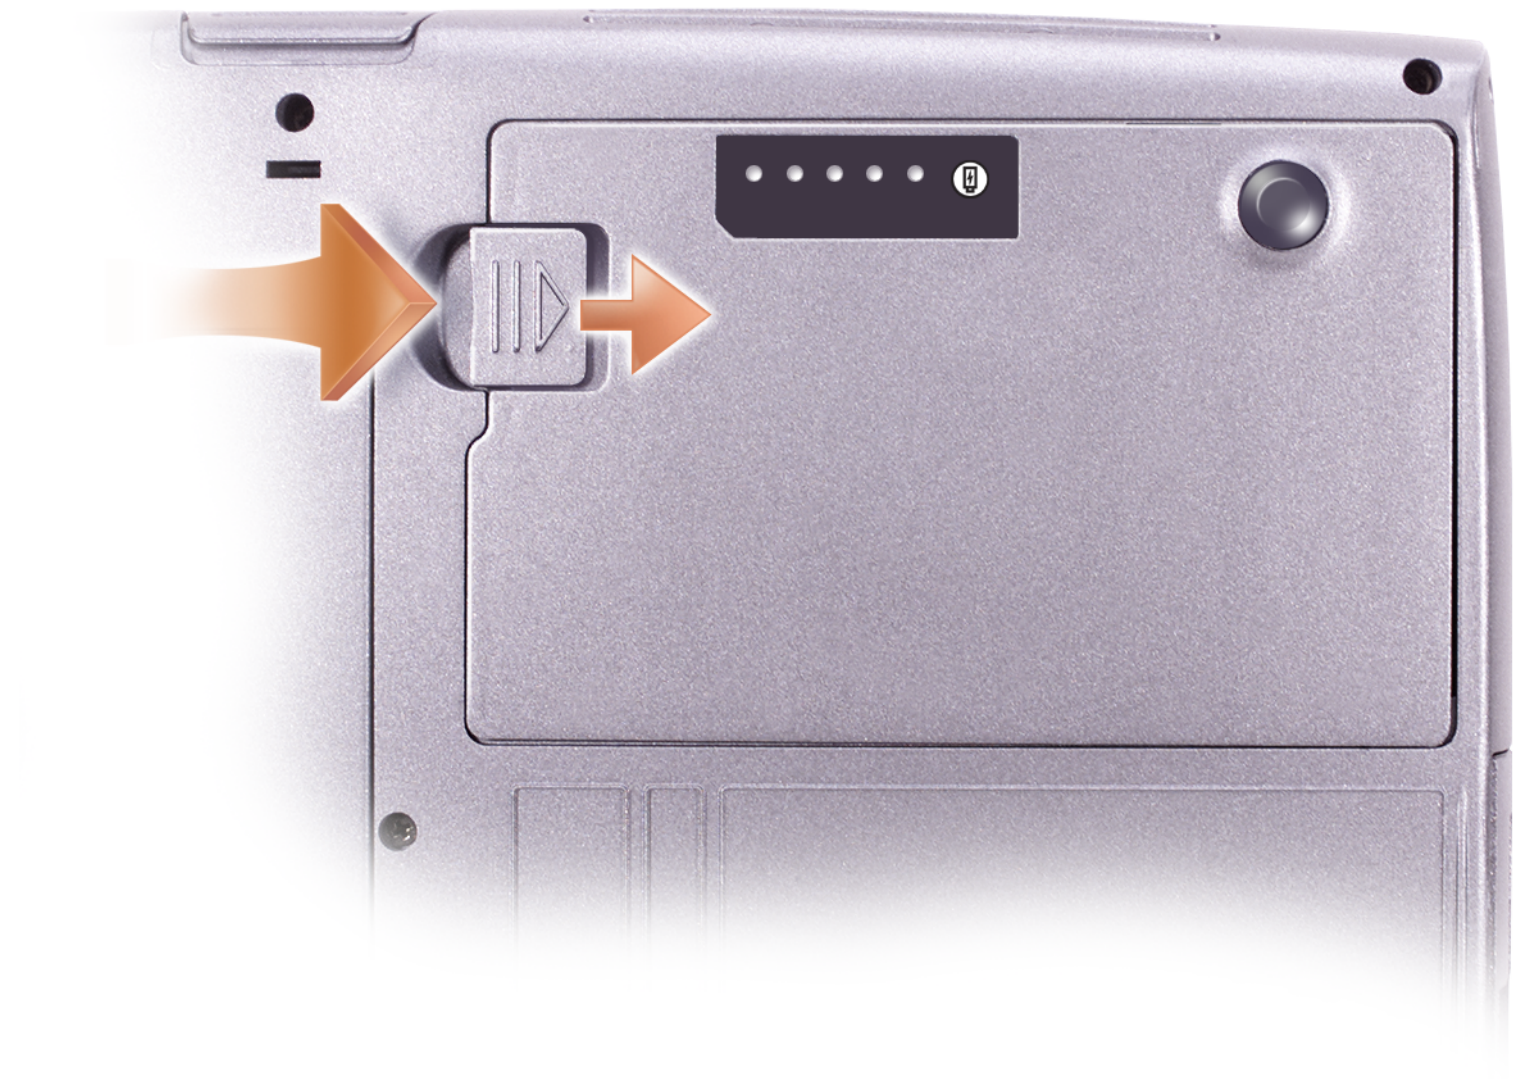

取出和安装备用电池

1 取出电池。

2 卸下备用电池盖。

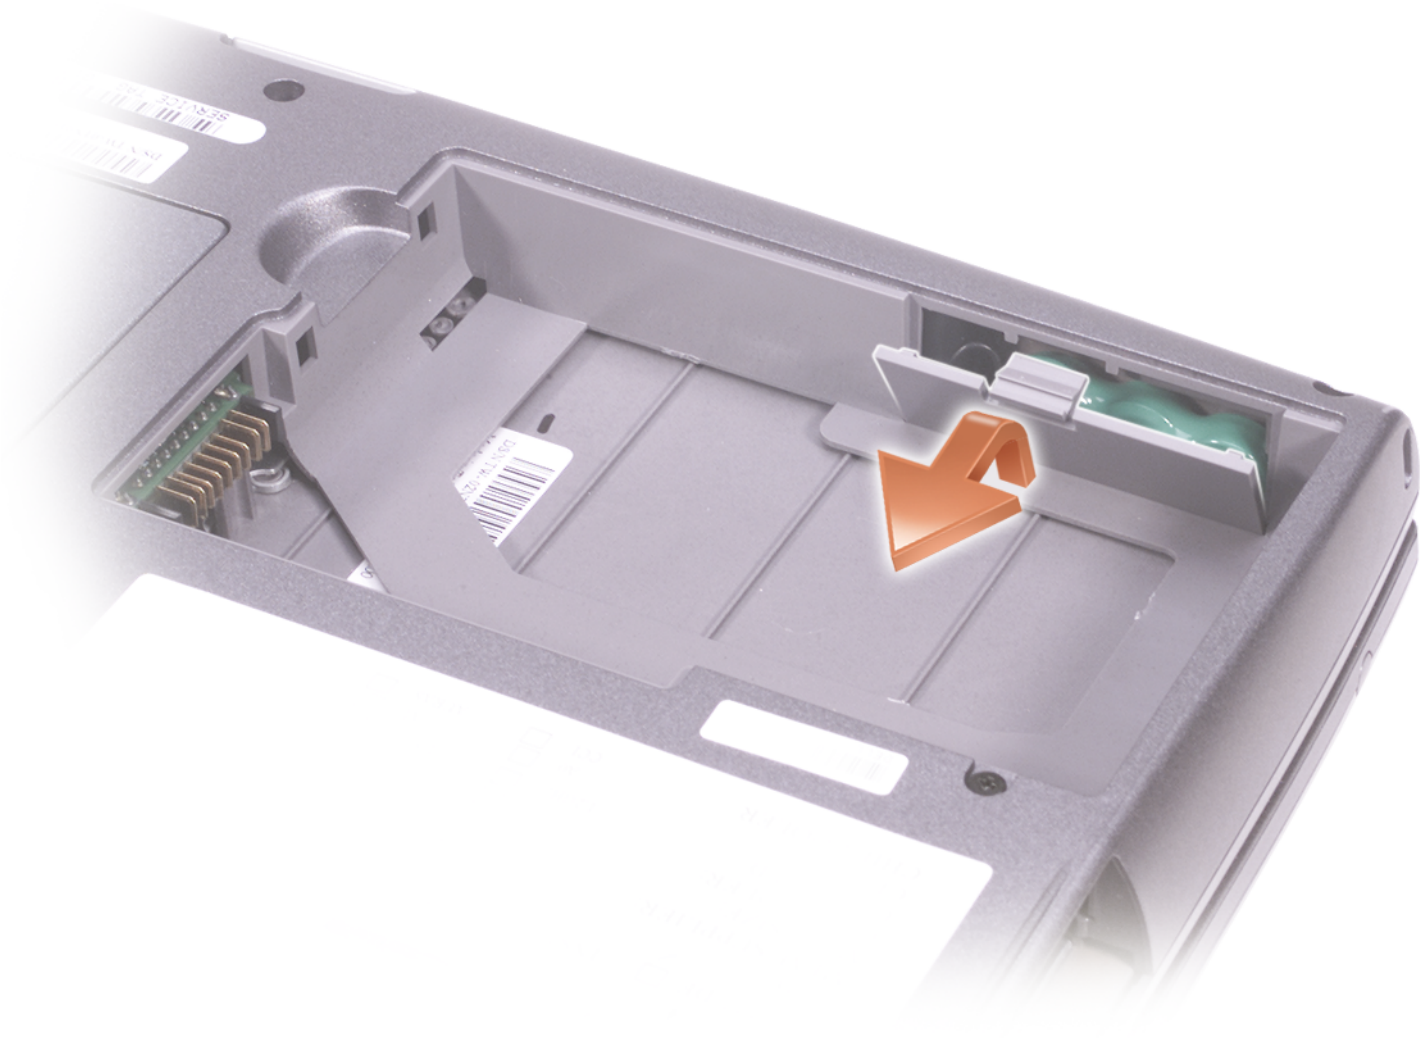

3 从电池盒中取出备用电池，然后从连接器中断开电缆的连接。

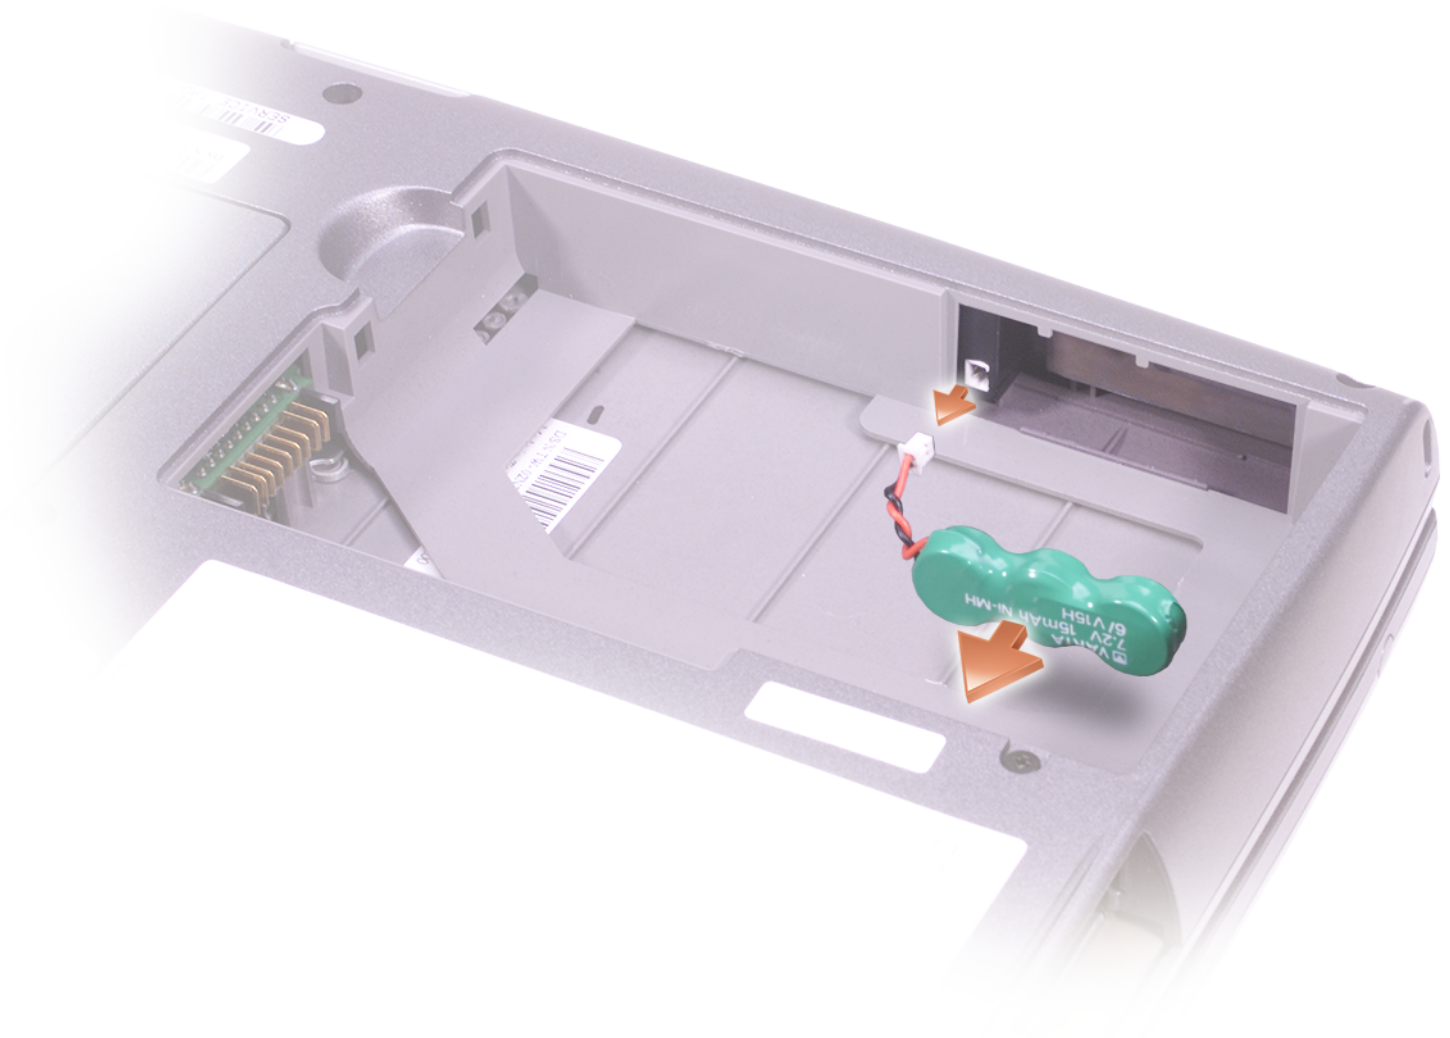

4　将备用电池电缆连接至备用电池盒中的连接器。

5　将备用电池放入电池盒，然后装回备用电池盖。

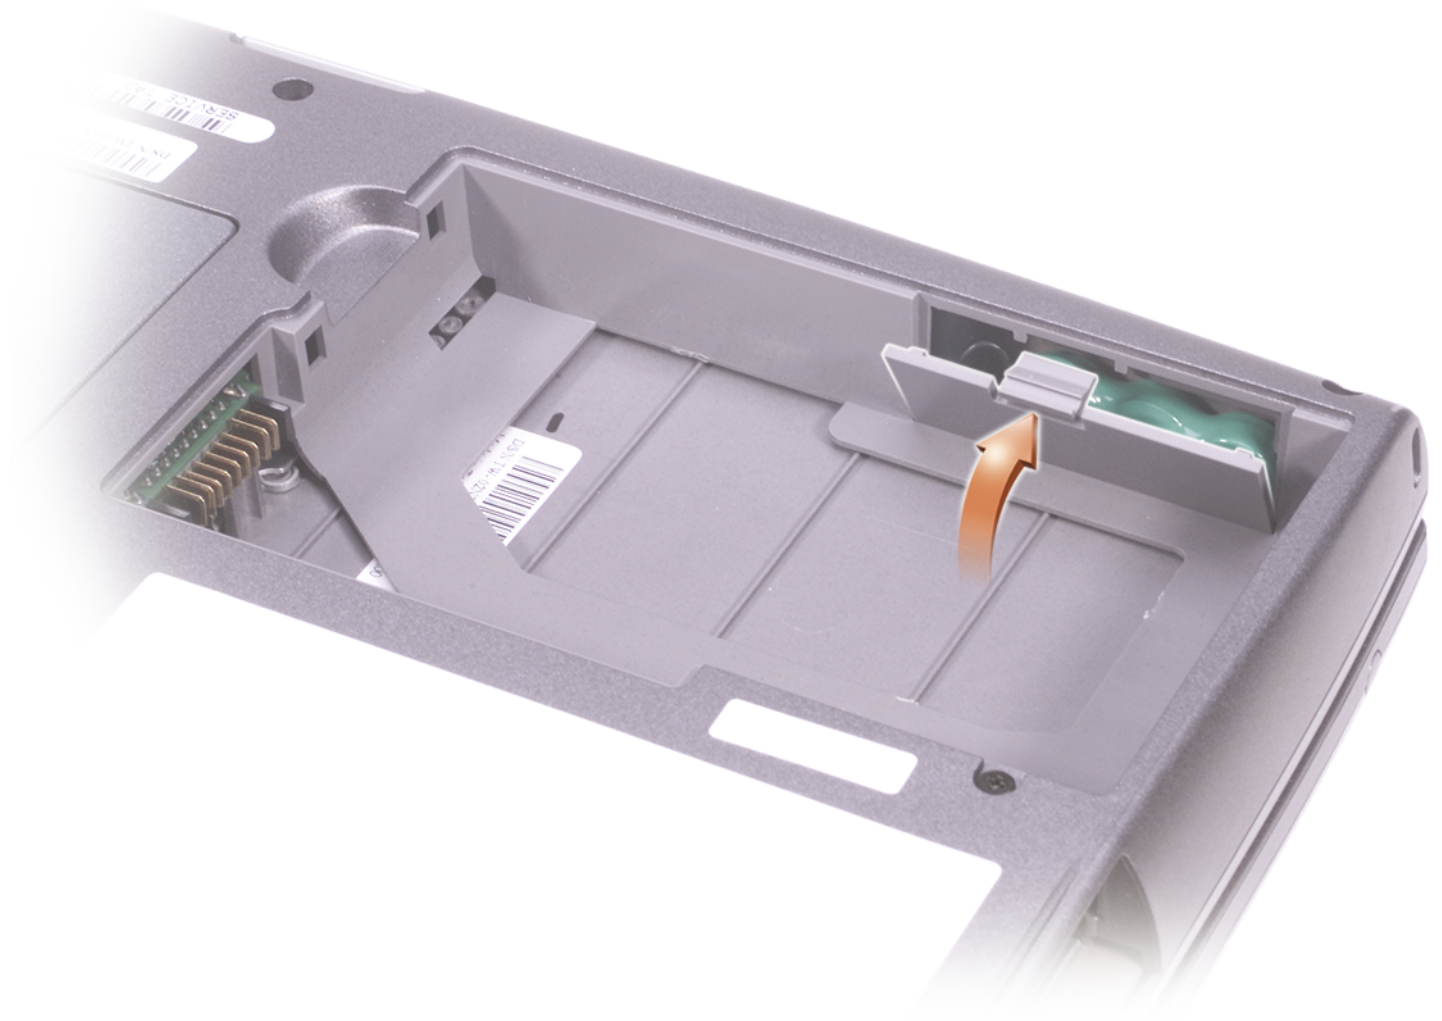

安装电池

将电池滑入电池槽，直至释放闩锁卡入到位。

有关安装第二块电池的详情，请参阅联机《用户指南》中的“使用模块化托架”。

运行 Dell 诊断程序

Dell 诊断程序位于隐藏在硬盘驱动器上的诊断公用程序分区中。

注：如果计算机无法显示屏幕图象，请与 Dell 联系（有关适当的联系信息，请参阅《用户指南》中的“获得帮助”）。

注：如果显示屏未显示任何内容，则可以在按住静音按钮的同时按下电源按钮（而不是 F12 键），开始运行 Dell 诊断程序。您无需突出显示“Diagnostics”（**诊断程序**）并按 Enter 键。计算机将自动运行预引导系统评估程序。

1 关闭计算机。
2 如果已将计算机连接至对接设备（即已对接），请断开其对接。有关说明，请参阅对接设备附带的说明文件。
3 将计算机连接至电源插座。
4 打开计算机。屏幕显示 DELL™ 徽标时，请立即按 F12 键。如果您等待的时间太长，并且屏幕上显示了 Microsoft® Windows® 徽标，请继续等待直至显示 Windows 桌面。关闭计算机，然后再试一次。
5 屏幕显示引导设备列表时，突出显示 **“Diagnostics”（诊断程序）** 并按 Enter 键。

   计算机将开始运行预引导系统评估程序，这是一套嵌入式诊断程序，可用于对主机板、键盘、硬盘驱动器和显示屏进行初步检测。

   - 评估期间，请回答显示的任何问题。
   - 如果检测到组件故障，计算机将停止运行并发出哔声。要停止评估并重新引导至操作系统，请按 N 键；要继续下一项检测，请按 Y 键；要重新检测出现故障的组件，请按 R 键。
   - 如果在预引导系统评估期间检测到故障，请写下错误代码，然后在继续运行 Dell 诊断程序之前先与 Dell 联系（有关适当的联系信息，请参阅《用户指南》中“获得帮助”）。

- 如果显示的信息表示未找到诊断公用程序分区，请按照屏幕上的说明通过 Drivers and Utilities CD 来运行 Dell 诊断程序。

如果预引导系统评估成功完成，则会显示以下信息：`Booting Dell Diagnostic Utility Partition`（正在引导 `Dell` 诊断公用程序分区）。请按任意键继续。

6 按任意键，从硬盘驱动器上的诊断公用程序分区中启动 Dell 诊断程序。

7 Dell 诊断程序载入并显示 **"Main Menu"（主菜单）**屏幕后，单击对应于所需选项的按钮。

注：计算机的服务标签位于每个屏幕的标题栏中。

选项	功能
Express Test（快速检测）	对设备执行快速检测。此检测通常需要 10 至 20 分钟，并且无需您参与操作。先运行"Express Test"（快速检测）有利于提高快速找出问题的可能性。
Extended Test（扩展检测）	对设备执行彻底的检测。此检测通常需要一个小时甚至更长时间，并且需要您定期回答一些问题。
Custom Test（自定义检测）	检测特定的某个设备。您可以自定义要运行的检测程序。
Symptom Tree（症状树视图）	使您可以根据问题的症状选择检测程序。此选项列出了最常见的症状。

8 如果在检测期间遇到问题，屏幕将出现一则信息，其中显示了错误代码和对问题的描述。记下错误代码和问题描述，然后按照屏幕上的说明进行操作。如果您无法解决错误，请与 Dell 联系（有关适当的联系信息，请参阅《用户指南》中的"获得帮助"）。

9 如果您通过 **"Custom Test"（自定义检测）**或 **"Symptom Tree"（症状树视图）**选项运行检测程序，请单击以下表格中列出的适当标签以了解有关详情。

标签	功能
Results（结果）	显示检测的结果以及遇到的任何错误。
Errors（错误）	显示遇到的错误、错误代码以及问题描述。
Help（帮助）	对检测程序进行说明，可能还会提示运行检测程序所需满足的要求。

标签	功能
Configuration（配置）	显示选定设备的硬件配置。 Dell 诊断程序通过系统设置程序、内存和各种内部检测程序获得所有设备的配置信息，然后将其显示在屏幕左窗格的设备列表中。设备列表可能不会显示计算机中安装的所有组件或计算机连接的所有设备的名称。
Parameters（参数）	使您可以通过更改检测程序设置来自定义检测。

10 检测程序运行完毕后，关闭屏幕以返回**“Main Menu”（主菜单）**屏幕。要退出 Dell 诊断程序并重新启动计算机，请关闭**“Main Menu”（主菜单）**屏幕。

管制通告

电磁干扰 (EMI) 是一种信号或辐射，它散布在空中或通过电源线或信号线传送，这样会对无线电导航或其它安全服务设施的正常工作造成危害，并且严重地干扰、阻碍或重复中断经许可的无线电通信服务。无线电通信服务包括但不仅限于 AM/ FM 商业电台、电视、蜂窝式无线电通信、雷达、空中交通管制、寻呼机和个人通信服务 (PCS)。这些经许可的服务与无意放射体（例如包括计算机在内的数字设备）一起形成了电磁环境。

电磁兼容性 (EMC) 指各种电子设备在电子环境中共同工作的能力。本计算机的设计符合管制机构关于 EMI 的限制，但是不能保证在特定的安装环境中绝对不产生干扰。如果此设备确实对无线电通信服务造成了干扰（可以通过关闭和打开设备确定是否有干扰），请尝试以下一种或多种方法排除干扰：

- 重新调整接收天线的方向。
- 根据接收器的位置重新放置计算机。
- 将计算机移至远离接收器的位置。
- 将计算机连接至不同的电源插座，使计算机与接收器占用不同的分支电路。

如果有必要，请咨询 Dell 技术支持代表或有经验的无线电/电视技术人员，获得其它有益建议。

有关管制通告的详情，请参阅联机 《用户指南》附录中的“管制通告”。每个管制机构的特定部分提供了适用于特定国家或地区的 EMC/EMI 或产品安全信息。

Dell™ Latitude™ D600

系統資訊指南

註、注意事項和注意

註：註表示可以幫助您更有效地使用電腦的重要資訊。

注意事項：注意事項表示可能會損壞硬體或導致資料遺失，並告訴您如何避免發生此類問題。

注意：注意表示可能會導致財產損壞、人身受傷或生命危險。

縮寫和簡寫用語

若要獲得縮寫和簡寫用語的完整清單，請參閱使用者指南 (依據作業系統的不同，在桌面上連按兩下 User's Guide [**使用者指南**] 圖示，或依次按一下**開始**按鈕、**說明及支援中心**和 User and system guides [**使用者和系統指南**])。

如果您購買了 Dell™ n 系列電腦，則本文件中對 Microsoft® Windows® 作業系統的任何參考都不適用。

本文件中的資訊如有變更，恕不另行通知。
著作權所有 © 2003 年 Dell Computer Corporation。所有權利均予保留。

未經 Dell Computer Corporation 的書面許可，不得以任何形式進行複製。

本文件中使用的商標：Dell、DELL 標誌、Inspiron、Dell Precision、Dimension、OptiPlex 和 Latitude 是 Dell Computer Corporation 的商標；Intel、Pentium 和 Celeron 是 Intel Corporation 的註冊商標；Microsoft 和 Windows 是 Microsoft Corporation 的註冊商標；EMC 是 EMC Corporation 的註冊商標。

本文件中述及的其他商標和商業名稱可能指擁有相應商標和名稱的公司實體或其產品。Dell Computer Corporation 對本公司之外的商標和產品名稱不擁有任何專利權。

2003 年 1 月　P/N 1N788　Rev. A00

目錄

注意：安全說明 73

一般規定 73

電源 74

電池 75

空中旅行 76

EMC 說明 76

使用您的電腦時 77

人體工學計算習慣 78

進行主機內部組裝時 78

防止靜電損害. 78

電池處理 79

尋找有關電腦的資訊 80

安裝您的電腦 81

關於您的電腦 82

前視圖 83

左側視圖 84

右側視圖 85

後視圖 85

底視圖 86

取出電池 87

取出和安裝備用電池 88

安裝電池 90

執行 Dell 診斷程式 90

管制通告 92

⚠ 注意：安全說明

爲了確保您自身的安全，以及保護電腦和工作環境免受潛在因素的損壞，請務必遵照下列安全規範。

一般規定

- 除非您是受過訓練的維修技術人員，否則請勿嘗試自己維修電腦。請務必嚴格遵循安裝說明。
- 如果使用延長電源線連接交流電變壓器，請確定與延長電源線插接的產品之總安培額定值不超過延長線的安培額定值。
- 請勿在電腦的通風口或開口處塞入任何物件，否則可能會導致內部元件短路而發生火災或觸電。
- 電腦開啓電源時，切勿將其置於通風不好的環境中，例如攜帶盒或密閉的箱子中。通風不好會損壞電腦或導致發生火災。
- 將您的電腦擺放在遠離散熱器或其他熱源的地方。此外，不可堵塞散熱通風孔。且避免將紙張墊在電腦下，也不要將電腦緊貼牆壁或是擺放在床、沙發或地毯上。
- 使用交流電變壓器爲電腦供電或爲電池充電時，請將交流電變壓器放在通風的位置，例如桌面或地板上。請勿用紙張或其他會影響散熱的物件蓋住交流電變壓器；另外，請勿在攜帶盒內使用交流電變壓器。
- 交流電變壓器在電腦正常作業期間可能會變熱。作業期間或作業剛完成後處理變壓器時，請務必謹愼。
- 可攜式電腦作業時，請勿讓基座長時間與皮膚直接接觸。正常作業期間 (尤其是使用交流電源時)，基座的表面溫度將會升高。如果皮膚長時間接觸基座，可能會導致不適或灼傷。
- 請勿在潮濕的環境中 (例如浴缸、洗滌槽或游泳池附近，或者潮濕的地下室) 使用電腦。
- 如果您的電腦配有內建或選購的 (PC 卡) 數據機，請在雷暴來臨前拔除數據機纜線，以免閃電透過電話線而造成觸電危險。

⚠ 注意：安全說明（續）

- 爲避免觸電的潛在危險，請勿在發生雷暴時連接或拔除任何纜線，或對本產品進行維護或重新組態。除非已拔除所有纜線且電腦使用電池電能進行作業，否則請勿在發生雷暴時使用電腦。
- 如果您的電腦配有數據機，則數據機使用的纜線在製造時應符合 26 美規線徑 (AWG) 的最小電線尺寸之規定，並具有符合 FCC 標準的 RJ-11 模組化插頭。
- 當您打開電腦底部的記憶體模組/Mini PCI 卡/數據機蓋之前，請從電源插座中除下所有纜線並拔除電話線。
- 如果電腦配備一個數據機 RJ-11 接頭和一個網路 RJ-45 接頭，請將電話線插入 RJ-11 接頭而不是 R-45 接頭。
- 正常作業期間，PC 卡可能會變得很熱。在持續作業後取出 PC 卡時，請務必謹慎。
- 清潔電腦之前，請先從電源插座上拔除電腦的電源線。然後使用一塊用水蘸濕的軟布清潔電腦。切勿使用可能含易燃物質的液體或噴霧清潔劑。

電源

- 請僅使用獲准用於本電腦的 Dell 提供之交流電變壓器。使用其他交流電變壓器可能會導致發生火災或爆炸。
- 將電腦連接至電源插座之前，請檢查交流電變壓器的電壓額定值，以確保所需的電壓和頻率與供電來源一致。
- 若要切斷電腦的所有電源，請關閉電腦電源，取出電池組，然後從電源插座上拔除交流電變壓器的電源線。
- 爲防止觸電，請將交流電變壓器和裝置的電源線插入已正確接地的電源。這些電源線可能配有三叉式插頭以提供接地連接。請勿使用變壓器插頭或移除電源線插頭上的接地叉腳。如果使用延長電源線，請使用適當的電源線類型 (雙叉或三叉)，以與交流電變壓器的電源線相匹配。
- 請確定交流電變壓器的電源線上沒有放置任何物件，且不是處於會被絆倒或踩到的地方。
- 如果使用的是多插座電源板，請小心地將交流電變壓器的電源線插入電源板。某些電源板可能會使您錯誤插接插頭。錯誤插接電源插頭可能會導致電腦永久性損壞，並會有觸電和 (或) 發生火災的危險。請確定電源插頭的接地叉腳已插入電源板上相匹配的接地插座。

⚠ 注意：安全說明（續）

電池

- 請僅使用獲准用於本電腦的 Dell™ 電池模組。使用其他類型的電池模組可能會增加火災的發生或爆炸的危險。
- 請勿將電池組放在口袋、錢包或其他箱子中，以免其中的金屬物件 (例如車鑰匙或迴紋針) 引起電池短路。短路導致的過強電流會產生極高溫度，並可能損壞電池組，或導致發生火災或灼傷。
- 如果電池處理不當，可能會導致燃燒的危險。請勿將電池拆開。請特別小心處理已損壞或電解液漏出的電池組。如果電池已損壞，電池中的電解液可能會洩漏出來並導致人身受傷。
- 將電池置於小孩觸摸不到的地方。
- 請勿將電腦或電池組存放在或置於熱源 (例如暖氣爐、壁爐、火爐、電暖氣或其他發熱設備) 附近，或者將其置於攝氏 60 度 (華氏 140 度) 以上的環境中。如果溫度過高，電池組可能會爆炸或冒煙，進而導致發生火災的危險。
- 請勿焚燒電腦的電池或將其與一般家居廢棄物放在一起處理。電池組可能會爆炸。請按照製造廠商的說明丟棄使用過的電池，或與當地的廢棄物處理機構聯絡，詢問如何處理電池。請及時處理已報廢或損壞的電池。

注意：安全說明 (續)

空中旅行

- 搭乘飛機時，使用 Dell 電腦可能要遵循某些聯邦航空管理條例和 (或) 特定航空公司的限制。例如，這些條例/限制可能禁止在飛機上使用任何可主動發射無線電頻率或其他電磁訊號的個人電子裝置 (PED)。
  - 如果您的 Dell 可攜式電腦配有 Dell TrueMobile™ 或其他無線通訊裝置，爲了嚴格遵循上述所有限制，請在登機前按下 Fn F2 以關閉此裝置，並遵循空服人員對此類裝置提出的所有說明。
  - 另外，在某些重要的飛行階段 (例如起飛和降落時)，飛機上可能禁止使用任何如可攜式電腦之類的 PED。某些航空公司可能會進一步規定，高度低於 3050 公尺 (10,000 呎) 的飛行均屬於重要的飛行階段。關於何時可以使用 PED 的資訊，請遵循航空公司的特定說明。

EMC 說明

請使用帶保護層訊號纜線以確定系統符合相應使用環境的 EMC 等級。對於並列印表機，其纜線將由 Dell 提供。您也可以透過全球資訊網網站 **(www.dell.com)** 向 Dell 訂購纜線。

靜電會損壞電腦內部的電子元件。爲防止靜電損壞，請在觸摸電腦的任何電子元件 (例如記憶體模組) 之前，先導去您身上的靜電。您可以觸摸電腦輸入/輸出面板上未上漆的金屬表面以導去身上的靜電。

使用您的電腦時

請遵循下列安全處理指引，以防止損壞電腦：

- 在安裝電腦以進行操作時，請將其放置在平坦的表面上。
- 在旅行時，請勿將電腦當作行李進行檢查。您可以讓電腦通過 X 光安全檢查機，但切勿讓電腦接受金屬偵測器的檢查。如果您讓工作人員徒手檢 查電腦，請確保電腦配有已充電的電池，以防工作人員要求您開機檢查。
- 如果要在旅行時卸下電腦中的硬碟，請用不導電的材料 (例如布或紙張) 包好硬碟。如果您讓工作人員徒手檢查硬碟，請將硬碟安裝在電腦中。您可以讓硬碟通過 X 光安全檢查機，但切勿讓硬碟接受金屬偵測器的檢查。
- 旅行途中，請勿將電腦放置在頭頂上的置物櫃中以免它四處滑動。切勿讓電腦摔落地面或受到機械性的撞擊。
- 請保護電腦、電池和硬碟機免受污垢、塵埃、食物、液體、溫度過高或過低和過度曝曬的環境危害。
- 在溫度和 (或) 濕度相差非常大的環境中移動電腦時，可能會使電腦表面或內部形成冷凝。使用電腦之前，請確保有足夠的時間讓水份蒸發，以免損壞電腦。

注意事項：在將電腦從低溫移至較溫暖的環境，或從高溫移至較涼爽的環境時，請讓電腦恢復至室溫後再開啓電源。

- 拔除纜線時，請拉扯其接頭或放鬆拉環，避免直接拉扯纜線。拉出接頭時，接頭的兩邊應同時退出，以免弄彎接頭的插腳。另外，連接纜線之前，請確定兩個接頭均已正確定位且對準插孔。
- 請小心處理元件。拿取記憶體模組之類的元件時，請握住其邊緣，避免接觸到插腳。
- 準備從主機板上取出記憶體模組或中斷裝置與電腦的連接之前，請先關閉電腦電源，拔除交流電變壓器的纜線，然後等待 5 秒鐘再繼續進行，以免損壞主機板。
- 使用一塊用水蘸濕的乾淨軟布清潔顯示器。將軟布蘸濕，然後沿著一個方向由上而下擦拭顯示器。請迅速擦乾顯示器上的水份並保持顯示器乾燥。長時間帶有水份可能會損壞顯示器。請勿使用市面上可買到的窗戶清潔劑來清潔顯示器。
- 如果您的電腦被弄濕或損壞，請按照使用者指南中的「解決問題」所述的程序進行。完成這些程序之後，如果您確認電腦仍然無法正常操作，請與 Dell 公司聯絡。(請參閱使用者指南中的「獲得幫助」，以獲得適當的聯絡資訊)。

使用您的電腦時（續）

人體工學計算習慣

⚠ **注意：不正確或長時間使用鍵盤可能會導致傷害。**

⚠ **注意：長時間注視顯示器或外接式監視器螢幕可能會導致眼睛疲勞。**

安裝和使用電腦時，為了能舒適地使用和獲得最高的效率，請遵循線上使用者指南的附錄中之人體工學指引。

此可攜式電腦設計目的並非是作為連續作業的辦公設備使用。如果要長時間在辦公室中使用，建議您連接外接式鍵盤。

進行主機內部組裝時

在卸下或安裝記憶體模組、Mini PCI 卡或數據機之前，請依序執行下列步驟。

注意事項：僅在安裝記憶體模組、Mini PCI 卡或數據機時，才需要裝卸電腦的內部元件。

注意事項：中斷裝置的連接或卸下記憶體模、Mini PCI 卡或數據機之前，請先關閉電腦電源並等待 5 秒鐘，以免損壞主機板。

1 關機並關閉所有連接裝置的電源。

2 請從電源插座上拔除電腦和裝置的電源線，以免造成人身受傷或觸電。 另外，請從電腦上拔除所有電話或電信通訊連線。

3 從電池槽中取出主電池，如有必要，請從模組槽中取出第二個電池。

4 觸摸電腦背面 I/O 面板上未上漆的金屬表面以導去您身上的靜電。

在您進行工作時，應經常觸摸 I/O 面板，以導去可能損壞內部元件的靜電。

防止靜電損害

靜電會損壞電腦內部的電子元件。為防止靜電損壞，請在觸摸電腦的任何電子元件 (例如記憶體模組) 之前，先導去您身上的靜電。您可以觸摸電腦 I/O 面板上未上漆的金屬表面以導去您身上的靜電。

您在進行電腦內部操作時，應經常觸摸 I/O 接頭，以導去您身上可能累積的靜電。

使用您的電腦時（續）

您亦可採取下列步驟以防止靜電釋放 (ESD) 造成的損壞：

- 打開對靜電敏感之元件的運送紙箱時，在您已準備好將它安裝到電腦內之前，請勿將元件從防靜電的包裝材料中取出。打開防靜電的包裝之前，請務必導去您身上的靜電。
- 運送敏感元件時，首先應將它放入防靜電的容器或包裝內。
- 請在無靜電的工作區域處理所有的敏感元件。如有可能，請使用防靜電地板墊和工作檯墊。



電池處理

您的電腦使用鋰電池。若要獲得關於更換電腦鋰電池的說明，請參閱本文件後面的「取出電池」和線上使用者指南中的「使用電池」。

切勿將電池與一般家居廢棄物一起處理。請與當地的廢棄物處理機構聯絡以瞭解離您最近的電池收集地點。

尋找有關電腦的資訊

要尋找的項目是？	所在位置
• 電腦的診斷程式 • 電腦的驅動程式 • 電腦說明文件 • 裝置說明文件	**驅動程式和公用程式 CD (亦稱為 ResourceCD)** 電腦出廠時，Dell 已經安裝了說明文件和驅動程式。您可以使用此光碟重新安裝驅動程式、執行 Dell 診斷程式或存取說明文件。 光碟中可能包含 readme (讀我) 檔案，它提供關於電腦的技術變更之最新資訊，或者為有經驗的使用者或技術人員提供進階技術參考資料。
• 快速服務代碼和服務標籤 • Microsoft® Windows® 授權標籤	**快速服務代碼和產品識別碼**  這些標籤均位於您的電腦上。
• 最新的電腦驅動程式 • 技術服務和支援問題的解答 • 與其他使用者和技術支援進行線上討論 • 電腦的說明文件	**Dell 支援網站** Dell 支援網站將提供幾種線上工具，其中包括： • Solutions (解決方案) — 故障排除提示、技術文件和線上課程 • Community Forum (社群論壇) — 與其他 Dell 客戶進行線上討論 • Upgrades (升級) — 元件的升級資訊，例如記憶體、硬碟和作業系統 • Customer Care (客戶關懷中心) — 聯絡資訊、訂單狀態、保固和維修資訊 • Downloads (下載軟體) — 驅動程式、修補程式和軟體更新 • Reference (參考) — 電腦說明文件、產品規格及白皮書
• 如何使用 Windows XP • 電腦的說明文件 • 裝置 (例如數據機) 的說明文件	**Windows 說明及支援中心** **1** 依次按一下**開始**按鈕和**說明及支援**。 **2** 鍵入描述問題的字詞或短語，然後按一下箭頭圖示。 **3** 按一下描述問題的主題。 **4** 按照螢幕上的說明進行。

要尋找的項目是？	所在位置
• 如何重新安裝作業系統	**作業系統光碟** 如果重新安裝作業系統，請使用驅動程式和公用程式 CD 來重新安裝用於電腦隨附的裝置之驅動程式。 作業系統的產品識別碼位於您的電腦上。

安裝您的電腦

1 打開附件盒的包裝。

2 取出附件盒內的物件並放在一邊。您需要這些物件才能完成電腦的安裝。

附件盒內亦包含使用者說明文件和您訂購的任何軟體或附加硬體 (例如 PC 卡、磁碟機或電池)。

3 將交流電變壓器連接至交流電變壓器連接器和電源插座。

注意事項：開啓電腦電源時，您可能會收到一則訊息，表示您需要關機並升級電腦記憶體。如果出現此訊息，請參閱 Dell 支援網站 (support.dell.com) 中的使用者指南以獲得關於升級電腦記憶體的說明。

4 打開電腦顯示器，然後按下電源按鈕以開啓電腦電源。

註：開啓電腦電源並關機至少一次之前，請勿將電腦連線。

關於您的電腦

請參閱線上使用者指南以獲得關於電腦的詳細資訊。依據作業系統的不同，在桌面上連按兩下 User's Guide 圖示，然後依次按一下**開始**按鈕、**說明及支援中心**和 User and system guides。下列項目將解決關於電腦的一些常見問題。

- 數據機和網路配接卡：電腦可能配有一個 v.92 56K 數據機和一個 10/100/1000 乙太網路 LOM 網路配接卡。若要瞭解接頭的位置，請參閱本文件中後面的「右側視圖」。若要獲得更多關於連接埠和接頭的資訊，請參閱線上使用者指南中的「關於您的電腦」。
- 電池的使用壽命與用量：您的電腦可使用各種電池。使用作爲電腦標準配件隨附 4460 mAh 電池，一顆完全充電電池的平均作業時間均爲 3 至 4 小時。執行特別操作 (例如延伸無線操作) 會大大縮短電池的使用壽命。
  – 若要獲得更多關於電池效能、用量和省電的資訊，請參閱使用者指南中的 「使用電池」和 「電源管理」。

– 若要獲得關於選購的第二個電池的資訊，請參閱使用者指南中的 「使用模組槽」。

- 模組槽裝置：若要獲得關於模組槽和其支援裝置的資訊，請參閱使用者指南中的「使用模組槽」 。
- 連線裝置：您的電腦支援 Dell D/Dock 擴充站和 Dell D/Port 進階連接埠複製裝置。

– 若要獲得關於選購的連線裝置之資訊，請參閱裝置隨附的說明文件。

– 若要獲得關於配合本電腦使用連線裝置時獲得最佳效能的資訊，請參閱使用者指南中的 「解決問題」。

註：連線裝置可能不適用於所有國家。

前視圖

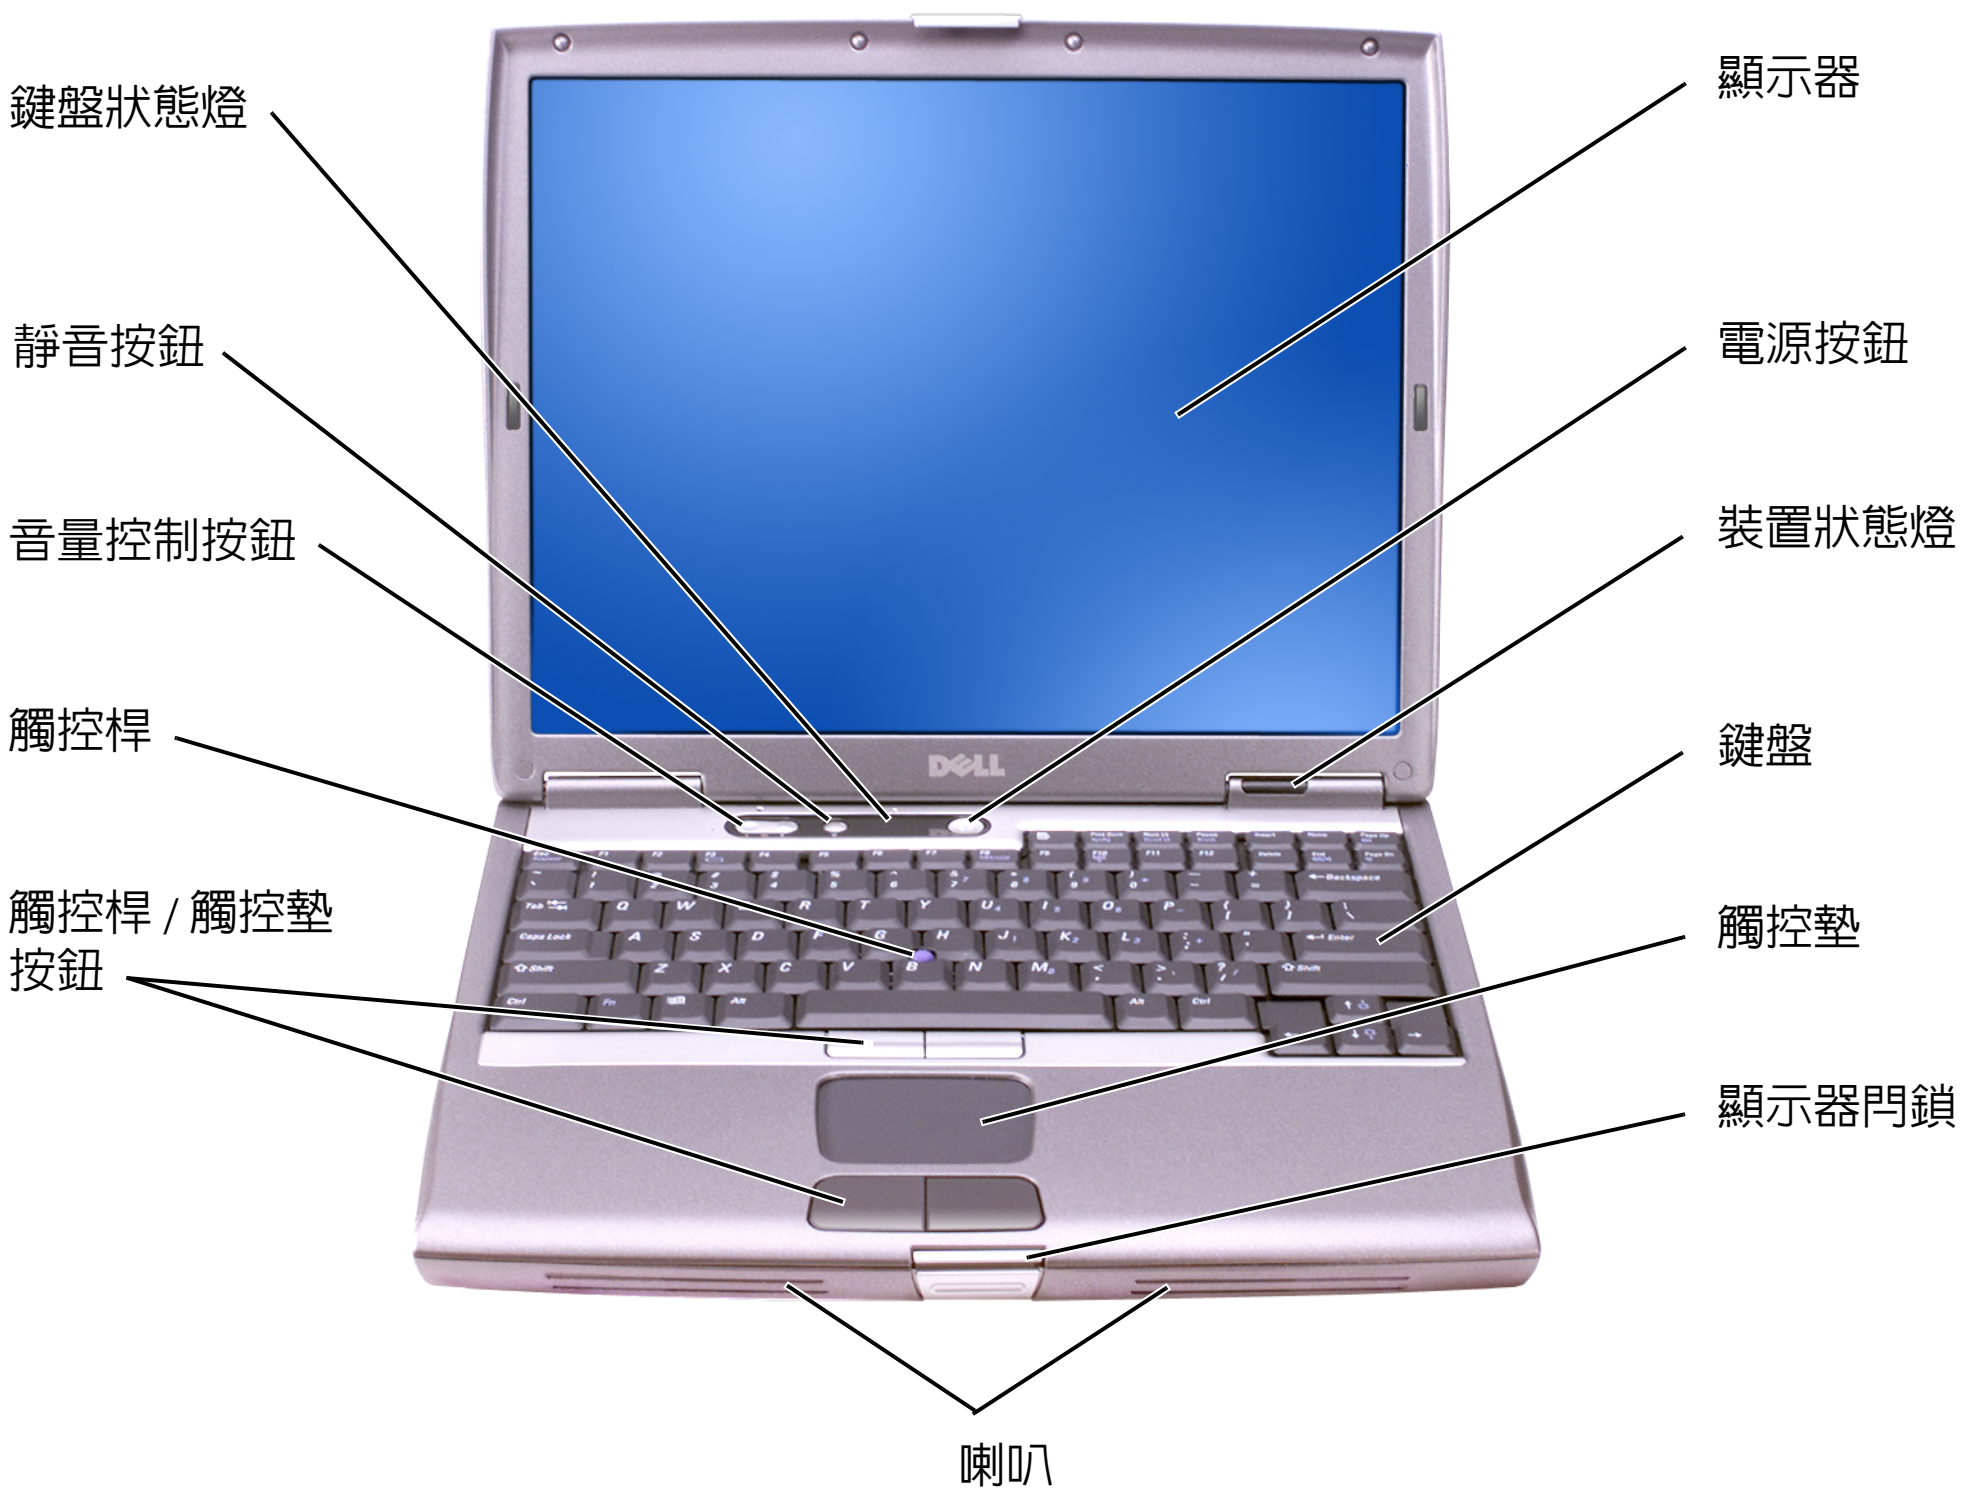

左側視圖

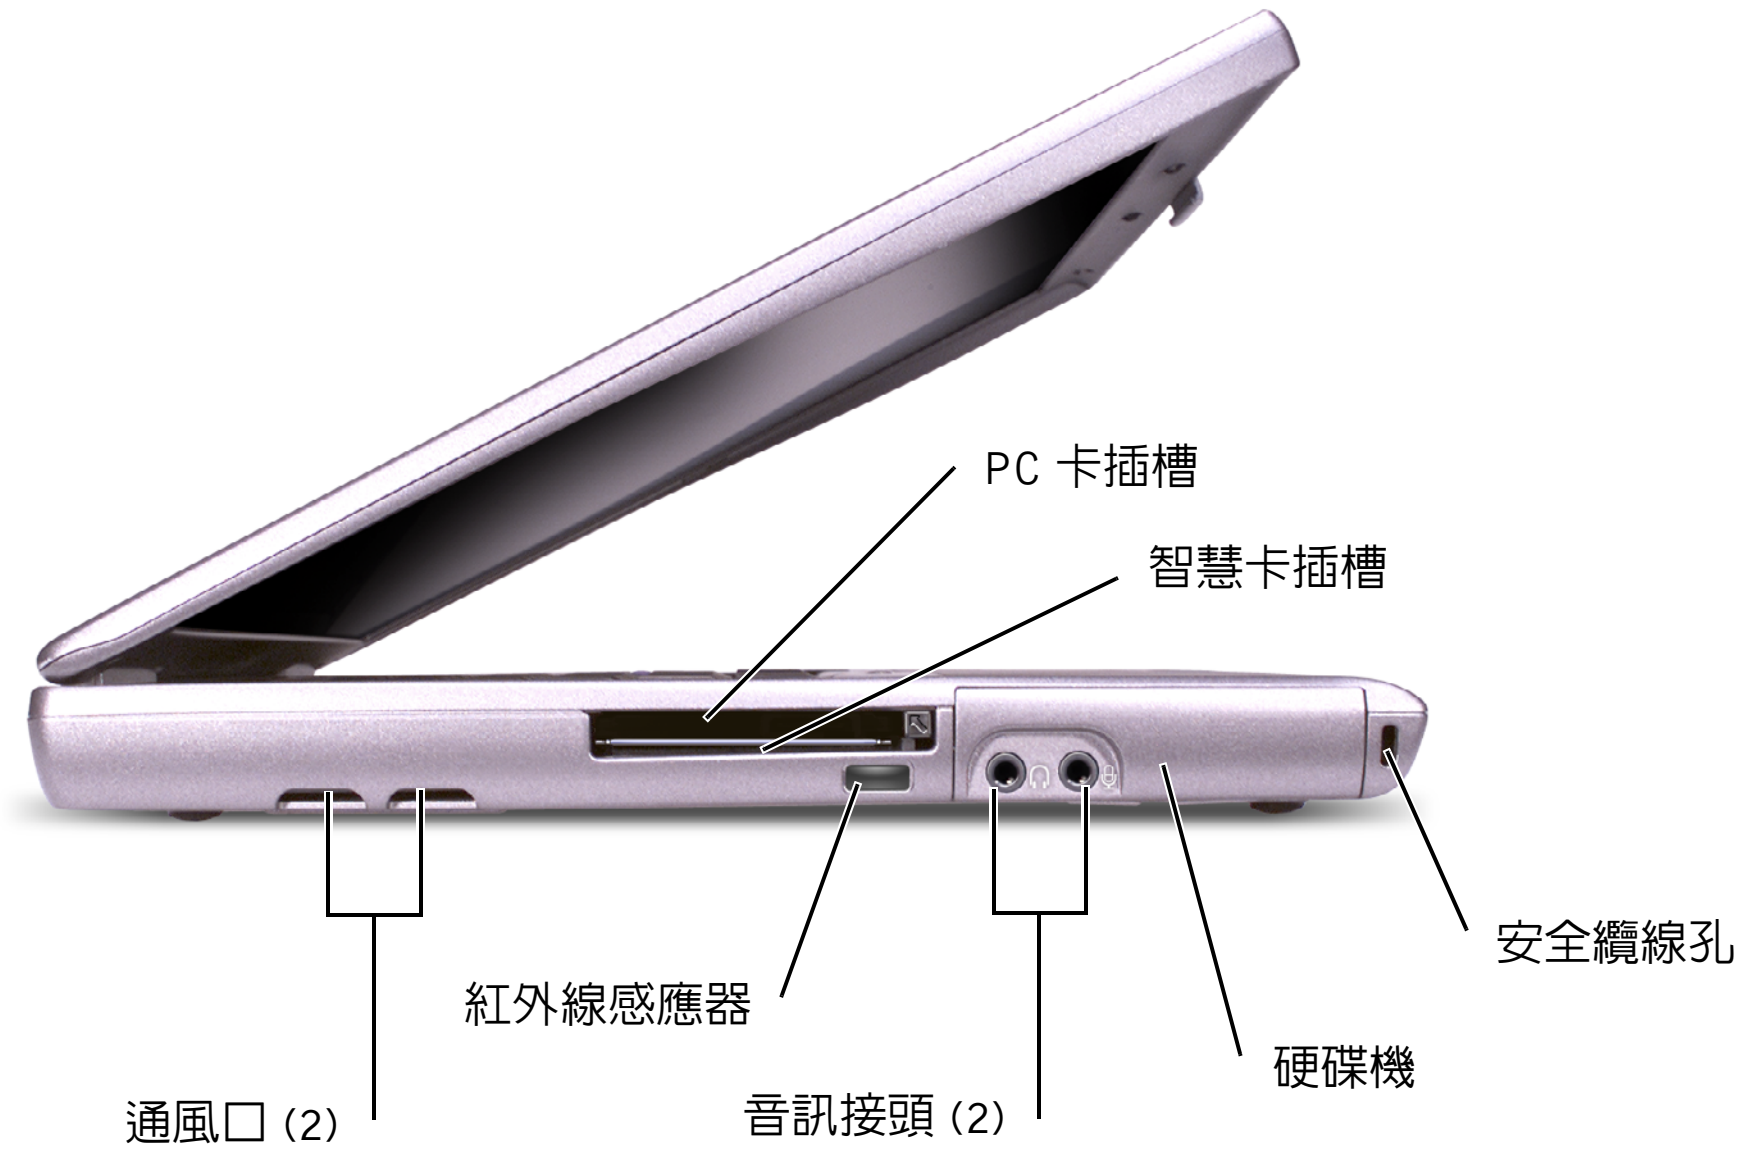

右側視圖

後視圖

注意事項：為避免損壞電腦，請於中斷外接式裝置的連接之前，關閉電腦電源並等待 5 秒鐘。

注意：請勿阻塞、將物件塞入或讓塵埃積聚在通風口。在電腦執行期間，切勿將其置於通風不好的環境中，例如密閉的箱子中。通風不好會損壞電腦或導致火災發生。

底視圖

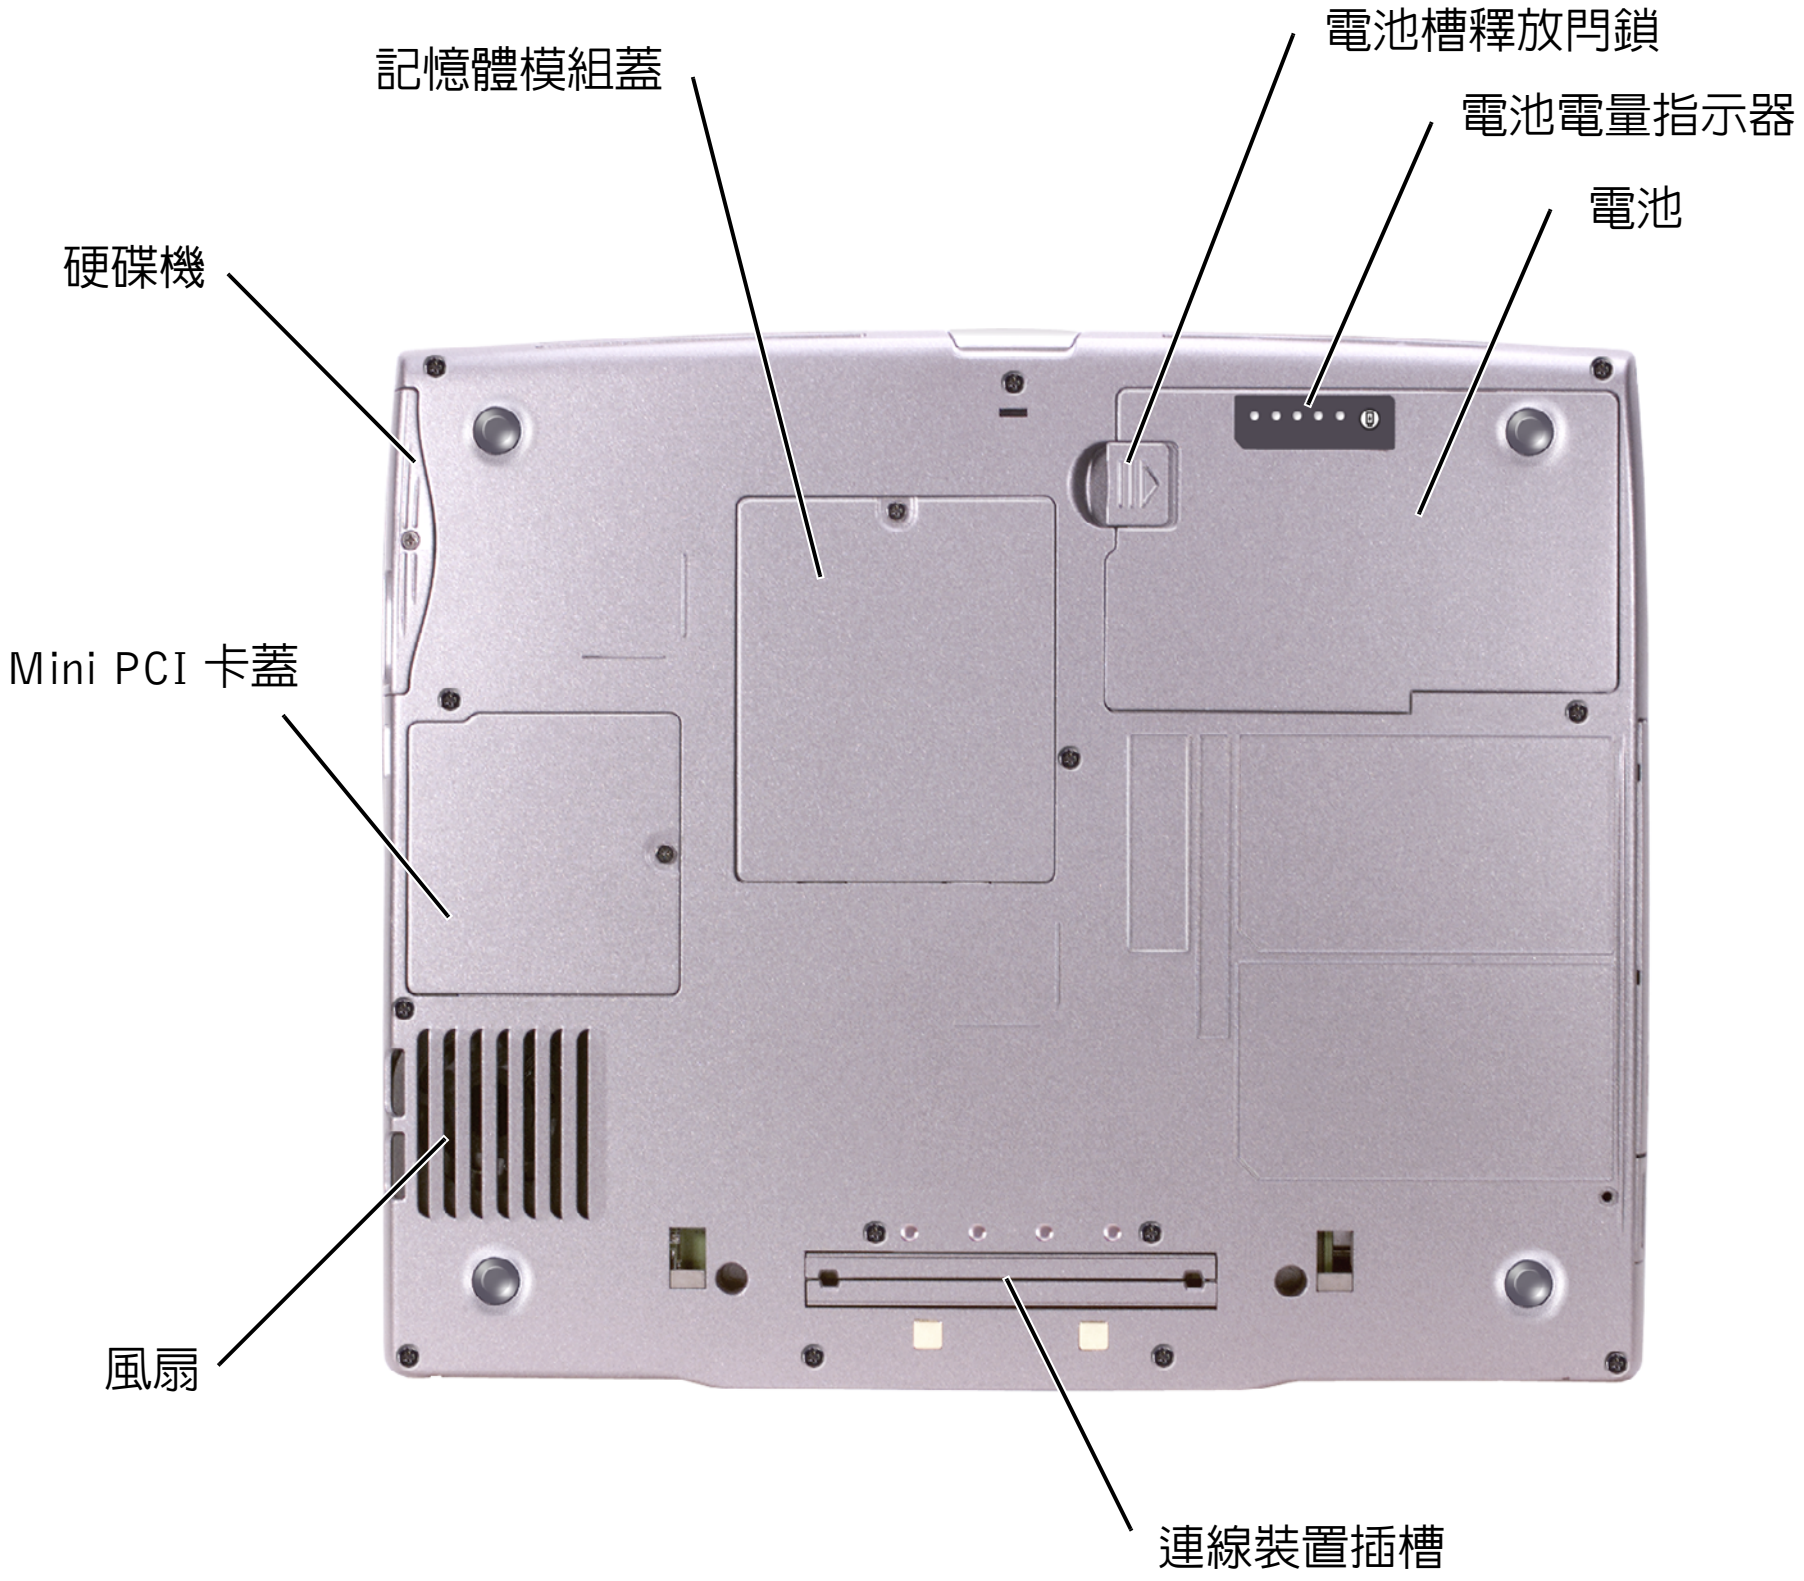

取出電池

若要獲得更多關於取出第二個電池的資訊，請參閱線上使用者指南中的使用模組槽。

注意：在執行這些程序之前，請先關閉電腦電源，然後從電源插座上拔除其電源線，並從牆上電話插孔中拔除數據機連接線。

注意事項：如果您選擇在電腦處於等候模式時更換電池，則您僅有 90 秒的時間來完成電池更換。如果超過此時間仍未完成電池更換，電腦將會關機，並且會遺失所有未儲存的資料。

1 確定電腦電源已關閉，然後從電源插座上拔除其電源線，並從牆上電話插孔中拔除連接線。

2 如果電腦已連接至連線裝置 (已連線)，請解除其連線。請參閱連線裝置隨附的說明文件以獲得說明。

3 按住並滑動電腦底部的電池槽釋放閂鎖，然後從凹槽中取出電池。

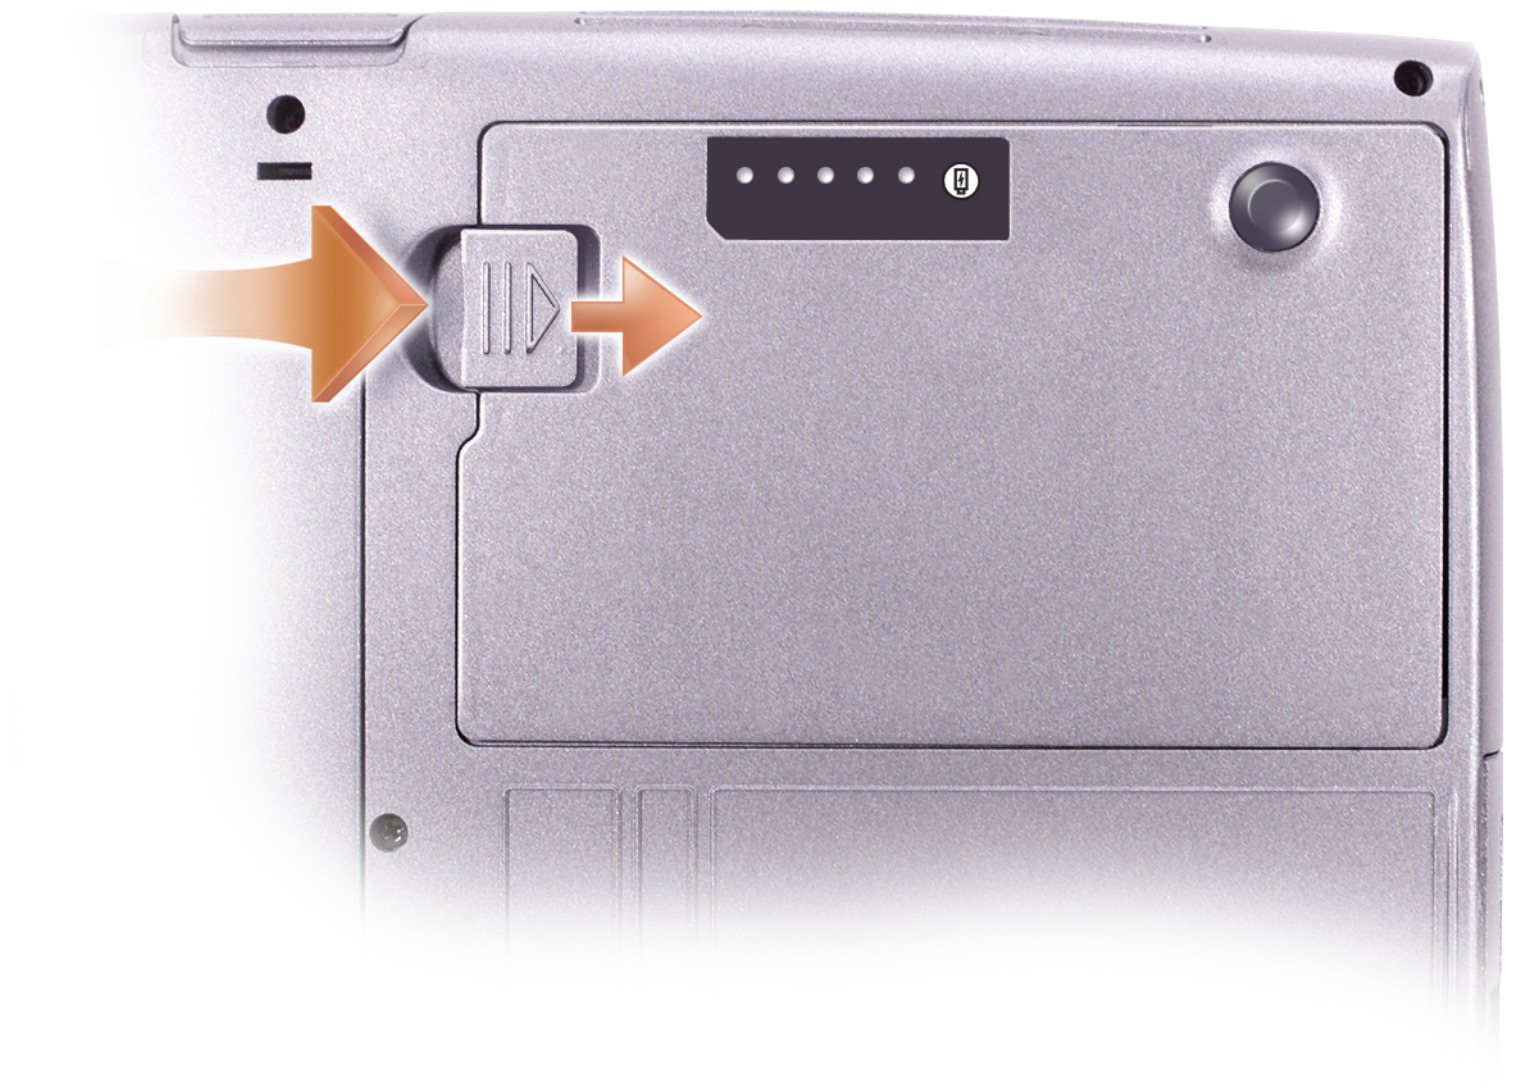

取出和安裝備用電池

1 取出電池。

2 卸下備用電池蓋。

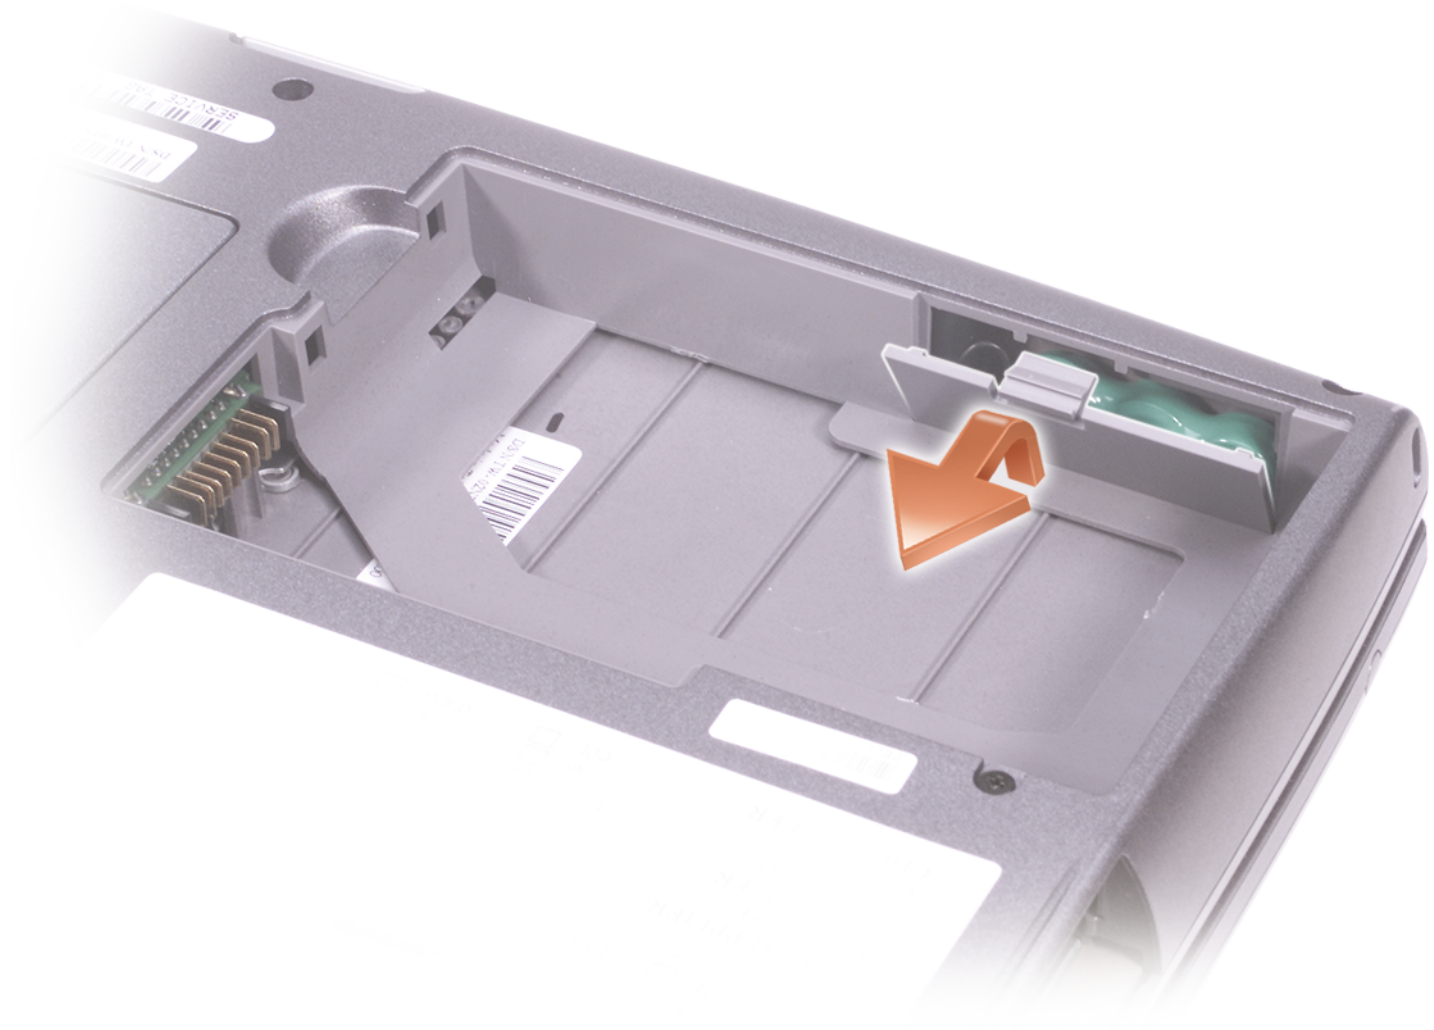

3 從電池盒中取出備用電池，然後從接頭上拔除纜線。

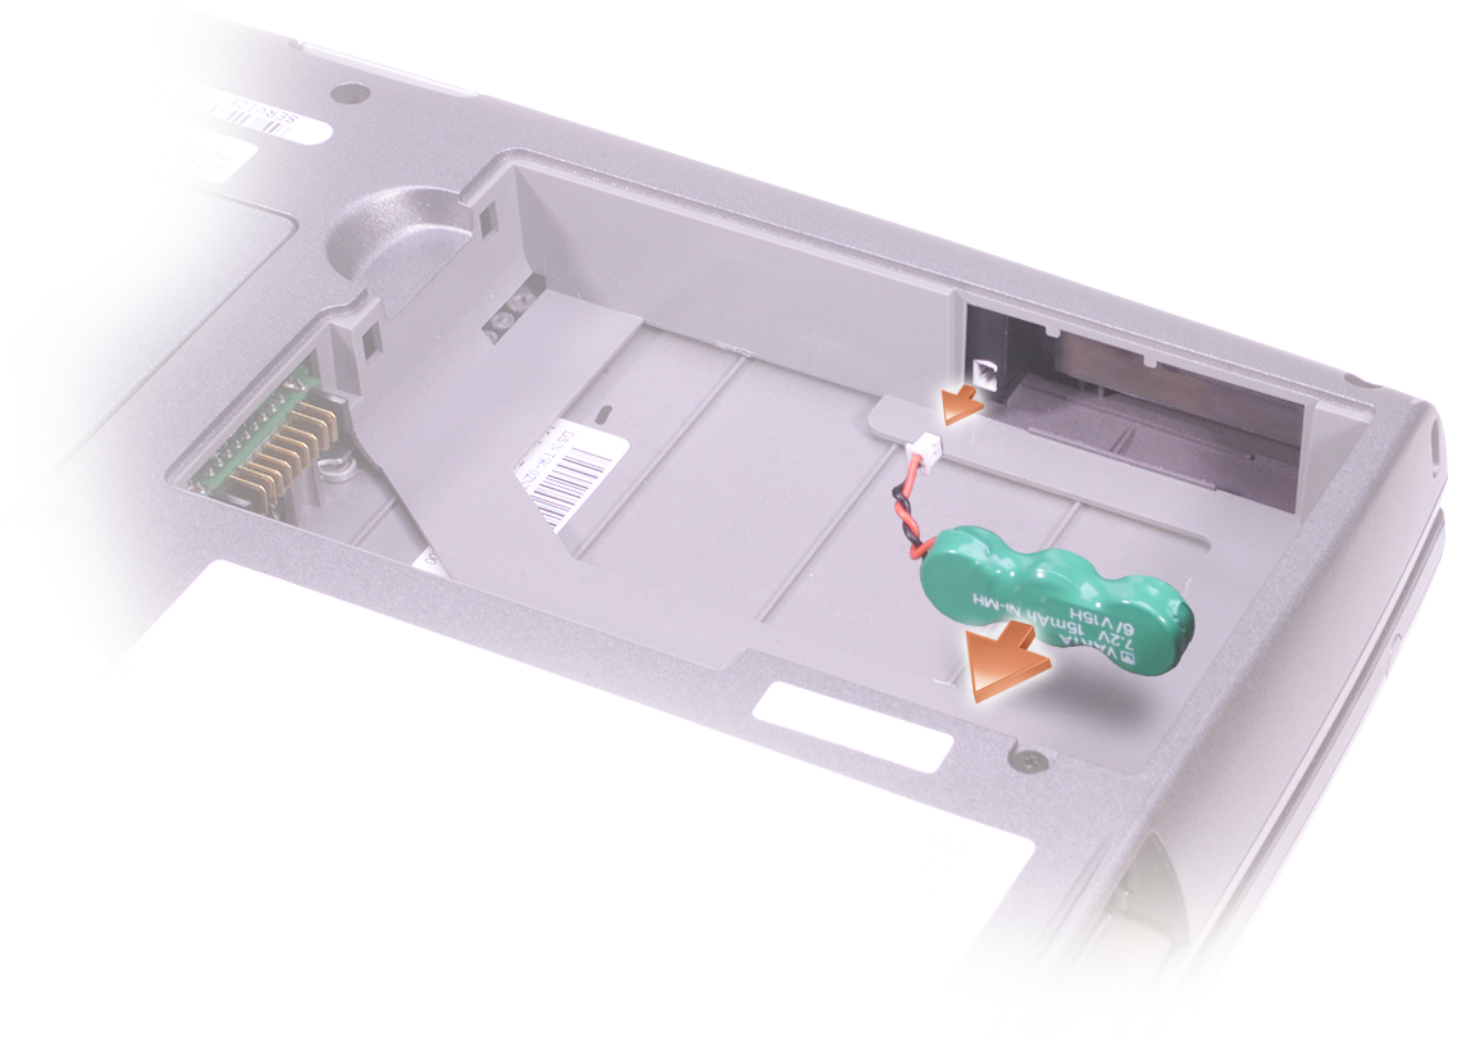

4 將備用電池纜線連接至備用電池盒中的接頭上。

5 將備用電池放入電池盒中，然後裝回備用電池蓋。

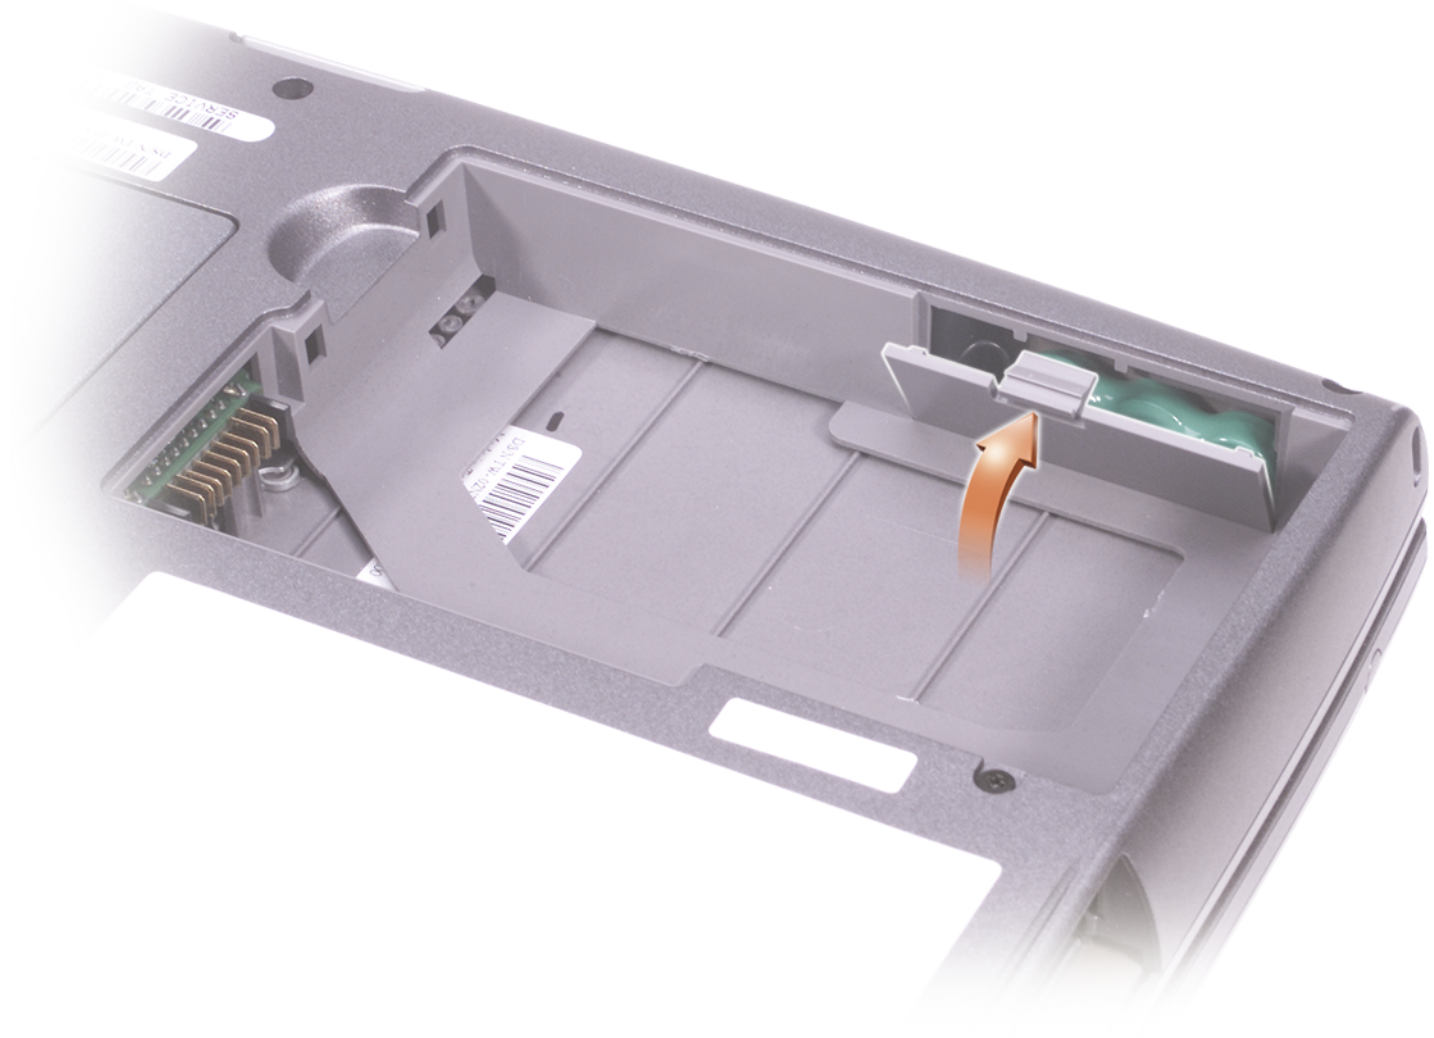

安裝電池

將電池滑入凹槽，直至釋放閂鎖卡入定位。

若要獲得關於安裝第二個電池的資訊，請參閱線上使用者指南中的使用模組槽。

執行 Dell 診斷程式

Dell 診斷程式位於硬碟機上的隱藏診斷公用程式分割區中。

註：如果您的電腦無法顯示螢幕影像，請與 Dell 公司聯絡 (請參閱使用者指南中的「獲得幫助」以獲得適當的聯絡資訊)。

註：如果您的顯示器上無任何顯示，您可以按住靜音按鈕並按下電源按鈕 (而不是 F12) 以開始執行 Dell 診斷程式。您無需反白顯示 **Diagnostics (診斷程式)** 並按下 [Enter]。電腦會自動執行啓動前系統評測 (Pre-boot System Assessment)。

1 關機。

2 如果電腦已連接至連線裝置 (已連線)，請解除其連線。請參閱連線裝置隨附的說明文件以獲得說明。

3 將電腦連接至電源插座。

4 開啓電腦電源。在螢幕上出現 DELL™ 標誌時立即按下 [F12]。如果您等待太久且螢幕上出現 Microsoft® Windows® 標誌，請繼續等待，直至您看到 Windows 桌面。然後關機並再試一次。

5 啓動裝置清單出現時，反白顯示 **Diagnostics** 並按下 [Enter]。

   電腦開始執行啓動前系統評測 (Pre-boot System Assessment) — 對主機板、鍵盤、硬碟機和顯示幕執行起始測試的一系列內嵌診斷程式。

   - 在評測期間，請回答畫面上出現的問題。
   - 如果偵測到某個元件發生故障，電腦會停止並發出 「嗶」聲。若要停止評測並重新啓動至作業系統，請按下 [N]；若要繼續下一個測試，請按下 [Y]；若要重新測試發生故障的元件，請按下 [R]。
   - 如果在啓動前系統評測期間偵測到任何故障，請記下錯誤代碼，然後在繼續執行 Dell 診斷程式之前與 Dell 公司聯絡 (請參閱使用者指南中的 「獲得幫助」以獲得適當的聯絡資訊)。

- 如果您收到一則訊息，表示未找到診斷公用程式分割區，則請按照螢幕上的指示進行，以執行驅動程式和公用程式 CD 上的 Dell 診斷程式。

如果啓動前系統評測順利完成，您將收到 `Booting Dell Diagnostic Utility Partition` (啓動 `Dell` 診斷公用程式分割區) 的訊息。按下任意鍵以繼續進行操作。

6 按下任意鍵以從硬碟機的診斷公用程式分割區啓動 Dell 診斷程式。

7 在 Dell 診斷程式載入且 **Main Menu** (**主功能表**) 螢幕出現後，按一下代表所需選項的按鈕。

註：您電腦的服務標籤將位於每個螢幕的頂部。

選項	**功能**
Express Test (快速測試)	快速測試裝置。本測試通常需要 10 至 20 分鐘，且無需使用者作出回應。請先執行 Express Test 以便能快速地找到問題。
Extended Test (全面測試)	全面檢查裝置。本測試通常需要一小時或更長時間，且需要您不時地回答問題。
Custom Test (自訂測試)	測試特定裝置。您可以自訂要執行的測試。
Symptom Tree (症狀樹)	可讓您根據所遇問題的症狀選擇測試類型。此選項列出了大多數常見症狀。

8 如果在測試時遇到問題，則會出現顯示錯誤代碼和問題說明的訊息。請記下錯誤代碼和問題說明，然後按照螢幕上的說明進行。如果您無法更正錯誤，請與 Dell 公司聯絡 (請參閱使用者指南中的「獲得幫助」以獲得適當的聯絡資訊)。

9 如果您是使用 **Custom Test** 或 **Symptom Tree** 選項執行測試，請按一下下表所述的適當標籤以獲得更多資訊。

標籤	**功能**
Results (結果)	顯示測試結果和所有遇到的錯誤狀況。
Errors (錯誤)	顯示遇到的錯誤狀況、錯誤代碼和問題說明。
Help (說明)	對測試進行說明，同時還可能會指明測試執行要求。

標籤	功能
Configuration (組態)	顯示所選裝置的硬體組態。 Dell 診斷程式會從系統設定程式、記憶體和各種內部測試中獲得所有裝置的組態資訊，並將其顯示在螢幕左窗格的裝置清單中。裝置清單可能不會顯示電腦中安裝的所有元件或連接至電腦的所有裝置之名稱。
Parameters (參數)	可讓您透過變更測試設定值來自訂測試。

10 在您執行完測試之後，請關閉螢幕並回到 **Main Menu** 螢幕。若要結束 Dell 診斷程式並重新啟動電腦，請關閉 **Main Menu** 螢幕。

管制通告

電磁干擾 (EMI) 是在周圍空間散發，或沿電源或訊號導線傳導的任何訊號或發射，它會危及無線導航或其他安全服務的操作，也會嚴重降低、妨礙或反覆中斷有執照的無線電通訊服務。無線電通訊服務包括但不侷限於 AM/FM 商業廣播、電視、蜂巢式服務、雷達、飛行控制、傳呼機和個人通訊服務 (PCS)。這些有執照的服務和非有意的發射體 (例如數位裝置，包括電腦) 共同產生了電磁環境。

電磁相容性 (EMC) 是指電子設備能夠在電子環境中正常運作的能力。儘管本電腦的設計符合管制機構對 EMI 的限制並已得到確定，但我們並不保證在個別的安裝中不會產生干擾。您可以透過關閉和開啓本設備來判斷它是否會對無線電通訊服務產生干擾；如果確實如此，我們建議您嘗試採取下列一種或多種措施來排除干擾：

- 重新調整天線的接收方向。
- 依接收器的位置，重新放置電腦。
- 將電腦移到遠離接收器的地方。
- 將電腦的電源線插入不同的電源插座，使電腦與接收器使用不同的分支電路。

如有必要，請向 Dell 技術支援代表或有經驗的無線電/電視技術人員諮詢，以獲得更多的建議。

若要獲得附加的管制資訊，請參閱線上使用者指南的附錄中之「管制通告」。每個管制機構的特定部分將提供特定國家的 EMC/EMI 或產品安全資訊。

Dell™ Latitude™ D600

システム情報ガイド

メモ、注意および警告

メモ：メモは、コンピュータを使いやすくするための重要な情報を説明しています。

注意：注意は、ハードウェアの損傷やデータの損失の可能性があることを示し、その危険を回避するための方法を説明しています。

警告：警告は、物的損害、けが、または死亡の原因となる可能性があることを示します。

略語について

本書で使用する略語の一覧については、『ユーザーズガイド』を参照してください。『ユーザーズガイド』を参照するには、お使いのオペレーティングシステムに応じて、デスクトップの**ユーザーズガイド** アイコンをダブルクリックするか、**スタート** ボタンをクリックし、**ヘルプとサポートセンター** をクリックして **ユーザーズガイドおよびシステムガイド** をクリックしてください。

Dell™ n シリーズコンピュータをお買い上げいただいた場合は、このマニュアルで参照する Microsoft® Windows® オペレーティングシステムについての記述は適用されません。

ここに記載されている内容は予告なく変更されることがあります。
© 2003 すべての著作権は Dell Computer Corporation にあります。

Dell Computer Corporation の書面による許可のない複写は、いかなる形態においても厳重に禁じられています。

本書で使用されている商標について：Dell、DELL のロゴ、Inspiron、Dell Precision、Dimension、OptiPlex、および Latitude は、Dell Computer Corporation の商標です。Intel、Pentium、および Celeron は、Intel Corporation の登録商標です。Microsoft および Windows は、Microsoft Corporation の登録商標です。EMC は、EMC Corporation の登録商標です。

本書では、必要に応じて上記記載以外の商標および会社名が使用されている場合がありますが、これらの商標や会社名は、一切 Dell Computer Corporation に所属するものではありません。

2003 年 1 月　P/N 1N788　Rev. A00

目次

警告：安全にお使いいただくために 97

一般規定 97

電源 98

バッテリ 99

飛行機での移動 100

EMC に関する注意 100

コンピュータを使用する際のご注意 101

人間工学に基づいたコンピュータの使用 102

コンピュータ内部の作業をする際の注意点 103

静電気障害への対処 103

バッテリの廃棄 104

お使いのコンピュータに関する情報の入手先 105

コンピュータのセットアップ手順 106

コンピュータの各部 107

正面図 109

左側面図 110

右側面図 110

背面図 111

底面図 112

バッテリの取り外し 113

予備バッテリの取り外しと取り付け 114

バッテリの取り付け 116

Dell 診断プログラムの実行 116

認可機関の情報 119

保証書およびサービスタグナンバー / エクスプレスサービスコードについて 120

お届け時の誤品・欠品・破損 121

登録内容の変更 122

技術情報の入手またはお問い合わせ 122

サポートサイト（WEB） 123
FAX 情報サービス 124
E- メールによるお問い合わせ 125
お電話によるお問い合わせ 126

デル製品の故障・修理依頼 126

デル製品の保証について 128

標準保証 128
オプションサービス 132
「ソフトウェア＆周辺機器」取扱製品の保証について 132
CFI （カスタム ファクトリー インテグレーション）仕様製品の保証について 133

保守サービスの対象について 134

保証規定について 135

⚠ 警告：安全にお使いいただくために

ご自身の身体の安全を守り、コンピュータおよび作業環境を保護するために、以下の安全に関するガイドラインに従ってください。

一般規定

- トレーニングを受けたサービス技術者以外の方は、ご自身でコンピュータを修理しないでください。各種機器の取り付けに関しては、それぞれの手順に必ず従ってください。
- AC アダプタと延長ケーブルを使用する場合は、延長ケーブルに接続する機器の定格電流の合計が、ケーブルの許容定格電流を超えないことを確認してください。
- コンピュータの通風孔や開口部に異物を押し込まないでください。開口部に異物を押し込むと、内部の部品がショートして、火災や感電の原因となる場合があります。
- キャリングケースの中など、空気の流れない密封された環境でコンピュータを動作させないでください。このような場所でコンピュータを使用すると、コンピュータが破損したり、火災の原因になる恐れがあります。
- 暖房器具や熱源の近くにコンピュータを設置しないでください。また、冷却用の通気孔を塞がないでください。コンピュータの下に紙を置いたり、コンピュータをキャビネット内、ベッド、ソファ、じゅうたんの上に設置しないでください。
- AC アダプタは通気の良い場所に設置してください。コンピュータに電源を供給したりバッテリを充電する場合、アダプタは机の上や床などに設置してください。紙や、冷却効果を妨げるもので AC アダプタを覆わないでください。また、AC アダプタをキャリングケースに入れて使用しないでください。
- AC アダプタは、コンピュータの通常操作時に熱くなることがあります。操作時または使用した直後にアダプタを扱う際は注意してください。
- ノートブックコンピュータの底部を露出した皮膚に直接載せた状態で、長時間コンピュータを使用しないでください。通常操作時でも（特に、AC 電源を接続している場合）、コンピュータ底部の表面が熱くなります。皮膚に触れたままにしておくと、皮膚に悪影響を及ぼし、火傷をする恐れがあります。
- 浴槽、洗面台、プールの近くや湿気の多い地下室など、湿気のある場所ではコンピュータを使用しないでください。
- ご使用のコンピュータに内蔵またはオプションの（PC カード）モデムが付属している場合は、まれに電話線を介して稲妻の電気的なショックが伝わる危険があるので、雷雨が近づいているときはモデムケーブルを取り外してください。

⚠ 警告：安全にお使いいただくために（続き）

- 雷雨の際は、感電の危険を避けるため、ケーブルの抜き差しや本製品の再設定は一切行わないでください。コンピュータからケーブルをすべて取り外してバッテリ電源で使用している場合を除き、雷雨の際はコンピュータを使用しないでください。
- ご使用のコンピュータにモデムが付属している場合は、モデムケーブルには最低 26 AWG（American Wire Gauge）で FCC 準拠の RJ-11 モジュラープラグがあるものをご使用ください。
- コンピュータ底部のメモリモジュール、ミニ PCI カード、またはモデムのカバーを開ける前に、すべてのケーブルを電源コンセントから外し、またモデムケーブルを外してください。
- コンピュータにモデムRJ-11 コネクタとネットーク RJ-45 コネクタの両方が付いている場合は、この二つのコネクタの形状が似ていますので間違えないように、モデムケーブルは必ず RJ-45 コネクタではなく、RJ-11 コネクタに接続してください。
- PC カードは通常動作時でも非常に熱くなります。PC カードを連続して使用した後で取り外すときは、注意してください。
- コンピュータを清掃する際は、電源コンセントからコンピュータを取り外してください。コンピュータの清掃には、水で湿らせたやわらかい布を使用してください。可燃性物質を含む可能性のある液体または噴霧状のクリーナを使用しないでください。

電源

- 専用のデルから提供された AC アダプタ以外はご使用にならないでください。その他の AC アダプタを使用すると、発火や破裂の恐れがあります。
- コンピュータを電源に接続する前に、AC アダプタの定格電圧が、使用する電源の定格電圧と周波数に適合していることを確認してください。
- コンピュータの電源を遮断するには、コンピュータの電源を切ってAC アダプタを電源コンセントから抜いて、バッテリパックを取り外してください。
- 感電の危険を避けるために、AC アダプタやデバイスの電源ケーブルは、正しくアースされている電源コンセントに接続してください。これらの電源ケーブルでは、正しくアースするために、三芯プラグが使用されていることがあります。アダプタプラグを使用したり、アース用のピンをケーブルから取り外したりしないでください。延長ケーブルを使用する場合は、AC アダプタ電源ケーブルに適合する 2 ピンもしくは 3 ピンタイプのものを使用してください。

⚠ 警告：安全にお使いいただくために（続き）

- AC アダプタの電源コードの上に物を載せないでください。また、人が踏んだりつまずいたりする恐れのある位置に設置しないでください。
- 複数のコンセントがある電源タップを使用する場合、AC アダプタの電源ケーブルを電源タップへ接続する際は、特に注意してください。電源タップによっては、プラグが正しく差し込まれていなくても、差し込めることがあります。電源プラグを正しく差し込まないと、ご使用のコンピュータが完全に損傷したり、感電したり発火する恐れがあります。電源プラグの接地芯が対応する電源タップの接地端子に挿入されていることを確認します。

バッテリ

- 専用の Dell™ バッテリモジュール以外はご使用にならないでください。その他のタイプのバッテリモジュールを使用すると、発火や破裂の恐れがあります。
- バッテリパックは、金属（車のキーやペーパークリップなど）がバッテリの端子をショートさせる可能性があるポケット、バッグ、または入れ物にいれて持ち運ばないでください。過剰な電流が流れ、バッテリが極めて高温になり、バッテリパックが損傷したり、発火や火傷の原因となる場合があります。
- バッテリは、不適切に取り扱うと、火傷を負う恐れがあります。バッテリは分解しないでください。損傷または液洩れしているバッテリパックは、特に注意して取り扱ってください。バッテリが損傷している場合、バッテリセルから電解液が漏れ、けがをする可能性があります。
- バッテリはお子様の手の届かないところに保管してください。
- コンピュータやバッテリパックは、ラジエータ、暖炉、ストーブ、ヒーターなどの熱源、またはその他の熱を発生する器具の近くに保管したり、放置しないでください。また、60℃ を超える熱にさらさないでください。高温になると、バッテリのセルが破裂したり、爆発して、発火する恐れがあります。
- バッテリは、焼却処分したり、家庭用のゴミと一緒に廃棄しないでください。バッテリのセルが破裂することがあります。使用済みのバッテリは、製造元の指示に従って破棄するか、廃棄方法を市役所などの行政機関へお問い合わせください。消耗または破損したバッテリはすみやかに廃棄してください

警告：安全にお使いいただくために（続き）

飛行機での移動

- 飛行機内で Dell コンピュータを使用する際に、米国連邦航空局の規制および各航空会社の制限が適用されることがあります。たとえば、機内で無線周波やその他の電磁信号を故意に発信する可能性のあるパーソナル電子機器（PED）の使用を禁止する規定 / 規制があります。
  - こうした制限を遵守するために、Dell TrueMobile™、またはその他の無線通信装置を装備した Dell ノートブックコンピュータでは、飛行機の搭乗前に Fn F2 を押してそのような装置を無効にし、航空機乗務員の指示に従ってください。
  - さらに、飛行機が離着陸などの重要な運航状態にある場合、ノートブックコンピュータなどの PED は、機内での使用を禁じられることがあります。機体が高度 3,050m 以下にある場合は常に重要な運航状態にあたると定めている航空会社もあり、PED の使用が許可される時期は各航空会社によって異なりますので、航空会社の指示に従ってください。

EMC に関する注意

目的とする環境に適した EMC 分類基準を満たすために、シールド付き信号ケーブルを使用してください。

静電気はコンピュータ内部の電子部品を損傷する恐れがあります。静電気による損傷を防ぐために、メモリモジュールなどのコンピュータの電子部品に触れる前に、身体から静電気を除去してください。コンピュータの I/O パネルの塗装されていない金属面に触れることによって、身体から静電気を除去できます。

コンピュータを使用する際のご注意

コンピュータの損傷を防ぐために、以下の安全に関するガイドラインに従ってください。

- コンピュータを設置して作業を行う際は、コンピュータを平らな面に設置してください。
- 旅行の際は、コンピュータを手荷物としてお取り扱いください。コンピュータは X 線セキュリティマシンには通せますが、金属探知機には絶対に通さないでください。係員によるコンピュータの検査が行われる場合がありますので、コンピュータに電源を入れられるように、充電済みのバッテリを用意しておいてください。
- 旅行中にハードドライブをコンピュータから取り外して運ぶ際は、布や紙など伝導性のない素材でドライブを包んでください。係員によるコンピュータの検査が行われる場合がありますので、コンピュータにドライブを取り付けられるよう準備しておいてください。ハードドライブは、X 線セキュリティマシンには通せますが、金属探知器には絶対に通さないでください。
- 旅行の際は、コンピュータを頭上のコンパートメントに入れないでください。コンピュータが内部で動いて破損する恐れがあります。コンピュータを落とすなど、衝撃を与えないでください。
- コンピュータ、バッテリ、ハードドライブは、土、ほこり、食品、液体などから保護してください。また、極端な温度や、過度に日光があたる環境に放置しないでください。
- 温度や湿度が大幅に異なる環境へコンピュータを移動させると、コンピュータの表面や内部に結露が発生することがあります。コンピュータの損傷を避けるため、コンピュータを使用する前に、結露が蒸発するまで充分な時間を置くようにしてください。

注意：寒い場所から暖かい場所へ、また暖かい場所から寒い場所へコンピュータを移動したときは、コンピュータを部屋の温度に慣らしてから電源を入れてください。

- ケーブルを外す際は、ケーブルそのものを引っ張らずに、コネクタやストレインリリーフループをつかんで抜いてください。コネクタを抜く際は、コネクタのピンを曲げないようにまっすぐに引き抜いてください。また、ケーブルを接続する前に、両方のコネクタの方向と位置が正しいかどうかを確認してください。
- 部品はていねいに取り扱ってください。メモリモジュールなどの部品を取り扱う際は、ピンには触れないで縁を持ってください。

コンピュータを使用する際のご注意（続き）

- メモリモジュールをシステム基板から取り外すときや、デバイスをコンピュータから取り外すときは、システム基板の損傷を避けるために、システムの電源を切って AC アダプタケーブルを取り外した後、5 秒間待ってから、メモリモジュールや機器を取り外してください。
- ディスプレイを掃除するには、水を使い、柔らかくきれいな布で拭き取ります。布に水をつけて、ディスプレイの上端から下端に向かって一定方向に拭きます。ディスプレイから水分をすばやく取り除き、ディスプレイを乾燥させます。長時間湿気を帯びたままにすると、ディスプレイが損傷することがあります。ディスプレイに市販のウィンドウクリーナを使用しないでください。
- コンピュータが濡れたり破損した場合は、『ユーザーズガイド』の「問題の解決」の手順に従ってください。それでもコンピュータが正しく動作しない場合は、デルまでお問い合わせください（連絡先に関する情報については、『ユーザーズガイド』の「困ったときは」を参照してください）。

人間工学に基づいたコンピュータの使用

⚠ **警告：無理な姿勢で長時間キーボードを使用すると、身体に悪影響を及ぼす可能性があります。**

⚠ **警告：ディスプレイや外付けモニタ画面を長時間見ていると、眼に負担がかかることがあります。**

コンピュータのセットアップおよび使用に際し、オンライン『ユーザーズガイド』の付録にある人間工学に関するガイドラインに従うと、快適で効率的に作業を進めることができます。

このノートブックコンピュータは、オフィス機器として恒常的に使用するようには設計されていません。オフィスで長時間ご使用になる場合は、外付けキーボードを接続することをお勧めします。

コンピュータを使用する際のご注意（続き）

コンピュータ内部の作業をする際の注意点

メモリモジュール、ミニ PCI カード、またはモデムの取り外しまたは取り付けを行う前に、次の操作を順に実行してください。

注意：コンピュータの内部に触れるのは、メモリモジュール、ミニ PCI カード、またはモデムを取り付けるときだけにしてください。

注意：システム基板の損傷を避けるために、コンピュータの電源を切ったあと 5 秒待ってから、デバイスやメモリモジュール、ミニ PCI カード、またはモデムの取り外しを行ってください。

1. コンピュータをシャットダウンして、接続しているデバイスの電源を切ります。
2. けがや感電の危険を避けるために、電源コンセントからコンピュータとデバイスを外します。また、電話回線またはモデムまたはネットワークケーブルもコンピュータから抜きます。
3. メインバッテリをバッテリベイから取り外します。必要に応じて、セカンドバッテリをモジュールベイから取り外します。
4. コンピュータ背面にある I/O パネルの塗装されていない金属面に触れて、静電気を身体から除去します。

   作業中も定期的に I/O パネルに触れて、内部部品を損傷する可能性のある静電気を除去してください。

静電気障害への対処

静電気はコンピュータ内部の電子部品を損傷する恐れがあります。静電気による損傷を防ぐために、メモリモジュールなどのコンピュータの電子部品に触れる前に、身体から静電気を除去してください。コンピュータの I/O パネルの塗装されていない金属面に触れることにより、静電気を除去することができます。

コンピュータ内部での作業を続ける間も定期的に I/O コネクタに触れて、身体に蓄積した静電気を除去してください。

コンピュータを使用する際のご注意（続き）

さらに、静電気（ESD）による損傷を防止するために、以下の手順を実行することもお勧めします。

- 静電気に敏感な部品を梱包箱から取り出す場合は、コンピュータに部品を取り付ける用意ができるまで、その部品を静電気防止梱包材から取り出さないでください。静電気防止パッケージを開梱する直前に、必ず身体から静電気を除去してください。
- 静電気に敏感な部品を運ぶ場合は、最初に静電気防止容器またはパッケージに入れてください。
- 静電気に敏感な部品の取り扱いは、静電気の発生しない場所で行ってください。静電気防止用のフロアパッドと作業用パッドをなるべく使用してください。



バッテリの廃棄

お使いのコンピュータでは、リチウムバッテリが使用されています。コンピュータのリチウムバッテリの交換手順については、このマニュアルで後述する「バッテリの取り外し」およびオンライン『ユーザーズガイド』の「バッテリの使い方」を参照してください。

家庭のゴミと一緒にバッテリを廃棄しないでください。最寄りのバッテリの廃棄場所の所在地については、市役所などの行政機関にお問い合わせください。

お使いのコンピュータに関する情報の入手先

参照したい情報	参照する情報
• コンピュータの診断プログラム • コンピュータのドライバ • コンピュータのマニュアル • デバイスのマニュアル	**『Drivers and Utilities CD』（ResourceCD とも呼びます）** マニュアルおよびドライバは、デルから出荷する際にコンピュータにすでにインストールされています。この CD は、ドライバを再インストールしたり、Dell 診断プログラムを実行したり、マニュアルにアクセスするときに使用します。 CD 内の Readme ファイルでは、コンピュータの技術的変更に関する最新のアップデートや、専門知識をお持ちのユーザーや技術者を対象とした高度な技術資料を参照できます。
• エクスプレスサービスコードおよびサービスタグ • Microsoft® Windows® ライセンスラベル	**エクスプレスサービスコードおよびプロダクトキー**  これらのラベルはコンピュータに貼付されています。
• コンピュータに対応したドライバ • テクニカルサービスやサポートに関する質問の答え • コンピュータのマニュアル	**デルサポート Web サイト** デルサポート Web サイトでは、下記のようなメニューが提供されています。 • ソリューション — トラブルシューティングのヒント、技術文書、オンラインコース • アップグレード — メモリ、ハードドライブ、およびオペレーティングシステムなどのコンポーネントに関するアップグレード情報 • ダウンロード — ドライバ、パッチ、ソフトウェアのアップデート • 参考資料 — コンピュータのマニュアル、製品仕様、ホワイトペーパー

参照したい情報	参照する情報
• Windows XP の使用方法 • コンピュータのマニュアル • デバイス（モデムなど）のマニュアル	**Windows XP ヘルプとサポートセンター** 1 **スタート** ボタンをクリックし、**ヘルプとサポート** をクリックします。 2 問題を説明する単語や語句を入力して、矢印のアイコンをクリックします。 3 問題を説明しているトピックをクリックします。 4 画面の指示に従います。
• オペレーティングシステムの再インストール方法	**『オペレーティングシステム CD』** 『オペレーティングシステム CD』を使用してオペレーティングシステムを再インストールした後は、コンピュータに付属の『Drivers and Utilities CD』を使用してデバイスのドライバを再インストールします。 オペレーティングシステムのプロダクトキーはコンピュータ上に貼付されています。

コンピュータのセットアップ手順

1 アクセサリボックスの梱包を開きます。

2 アクセサリボックスの中から、コンピュータのセットアップ完了に必要となるものを別に取っておきます。

アクセサリボックスには、この他にマニュアルが入っています。また、ご注文された場合には、ソフトウェアやオプションのハードウェア（PC カード、ドライブ、バッテリなど）が入っています。

3 AC アダプタを AC アダプタコネクタに接続し、コンセントに接続します。

注意：コンピュータの電源を入れたときに、コンピュータをシャットダウンしてメモリをアップグレードする必要があるというメッセージが表示されることがあります。メモリアップグレード手順については、デルサポート Web サイトをご覧下さい。

4 コンピュータの電源を入れるには、コンピュータディスプレイを開き、電源ボタンを押します。

メモ： コンピュータをドッキングステーションに接続する前に、最低 1 回はコンピュータの電源を入れて、切る操作を行ってください。

コンピュータの各部

お使いのコンピュータの詳細については、オンラインの『ユーザーズガイド』を参照してください。お使いのオペレーティングシステムに応じて、デスクトップの **ユーザーズガイド** アイコンをダブルクリックするか、あるいは **スタート** ボタンをクリックし、**ヘルプとサポートセンター** をクリックして **ユーザーズガイドおよびシステムガイド** をクリックします。次に、コンピュータについて一般的に寄せられる質問とその回答をいくつか示します。

- モデムとネットワークアダプタ：コンピュータに、v.92 56K モデムと 10/100/1000 Ethernet LOM ネットワークアダプタが搭載されている場合があります。各コネクタの位置については、後述の「右側面図」を参照してください。ポートおよびコネクタの詳細については、オンラインの『ユーザーズガイド』の「コンピュータについて」を参照してください。
- バッテリの寿命と使い方：コンピュータではさまざまなバッテリが使用できます。コンピュータに標準で付属する 4460 mAh バッテリ 1 つを完全に充電した状態で取り付けた場合、平均的な使用方法で約 3 ～ 4 時間ご利用頂けます。ワイヤレス操作などの特定の操作を長時間行うと、バッテリ寿命が極端に減少します。
  - バッテリのパフォーマンス、使い方および消費電力の節約の詳細については、『ユーザーズガイド』の「バッテリの使い方」および「電力の管理」を参照してください。
  - オプションのセカンドバッテリについては、『ユーザーズガイド』の「モジュールベイの使い方」を参照してください。
- モジュールベイデバイス：モジュールベイ、およびモジュールベイでサポートされるデバイスの詳細については、『ユーザーズガイド』の「モジュールベイの使い方」を参照してください。
- ドッキングデバイス：お使いのコンピュータでは、Dell D/Dock 拡張ステーションおよび Dell D/Port アドバンスポートリプリケータがサポートされます。
  - オプションのドッキングデバイスの詳細については、デバイスに付属するマニュアルを参照してください。
  - このコンピュータでドッキングデバイスを使用する場合に最適なパフォーマンスを得るための詳細については、『ユーザーズガイド』の「問題の解決」を参照してください。

メモ：ドッキングデバイスが入手できない国もあります。

正面図

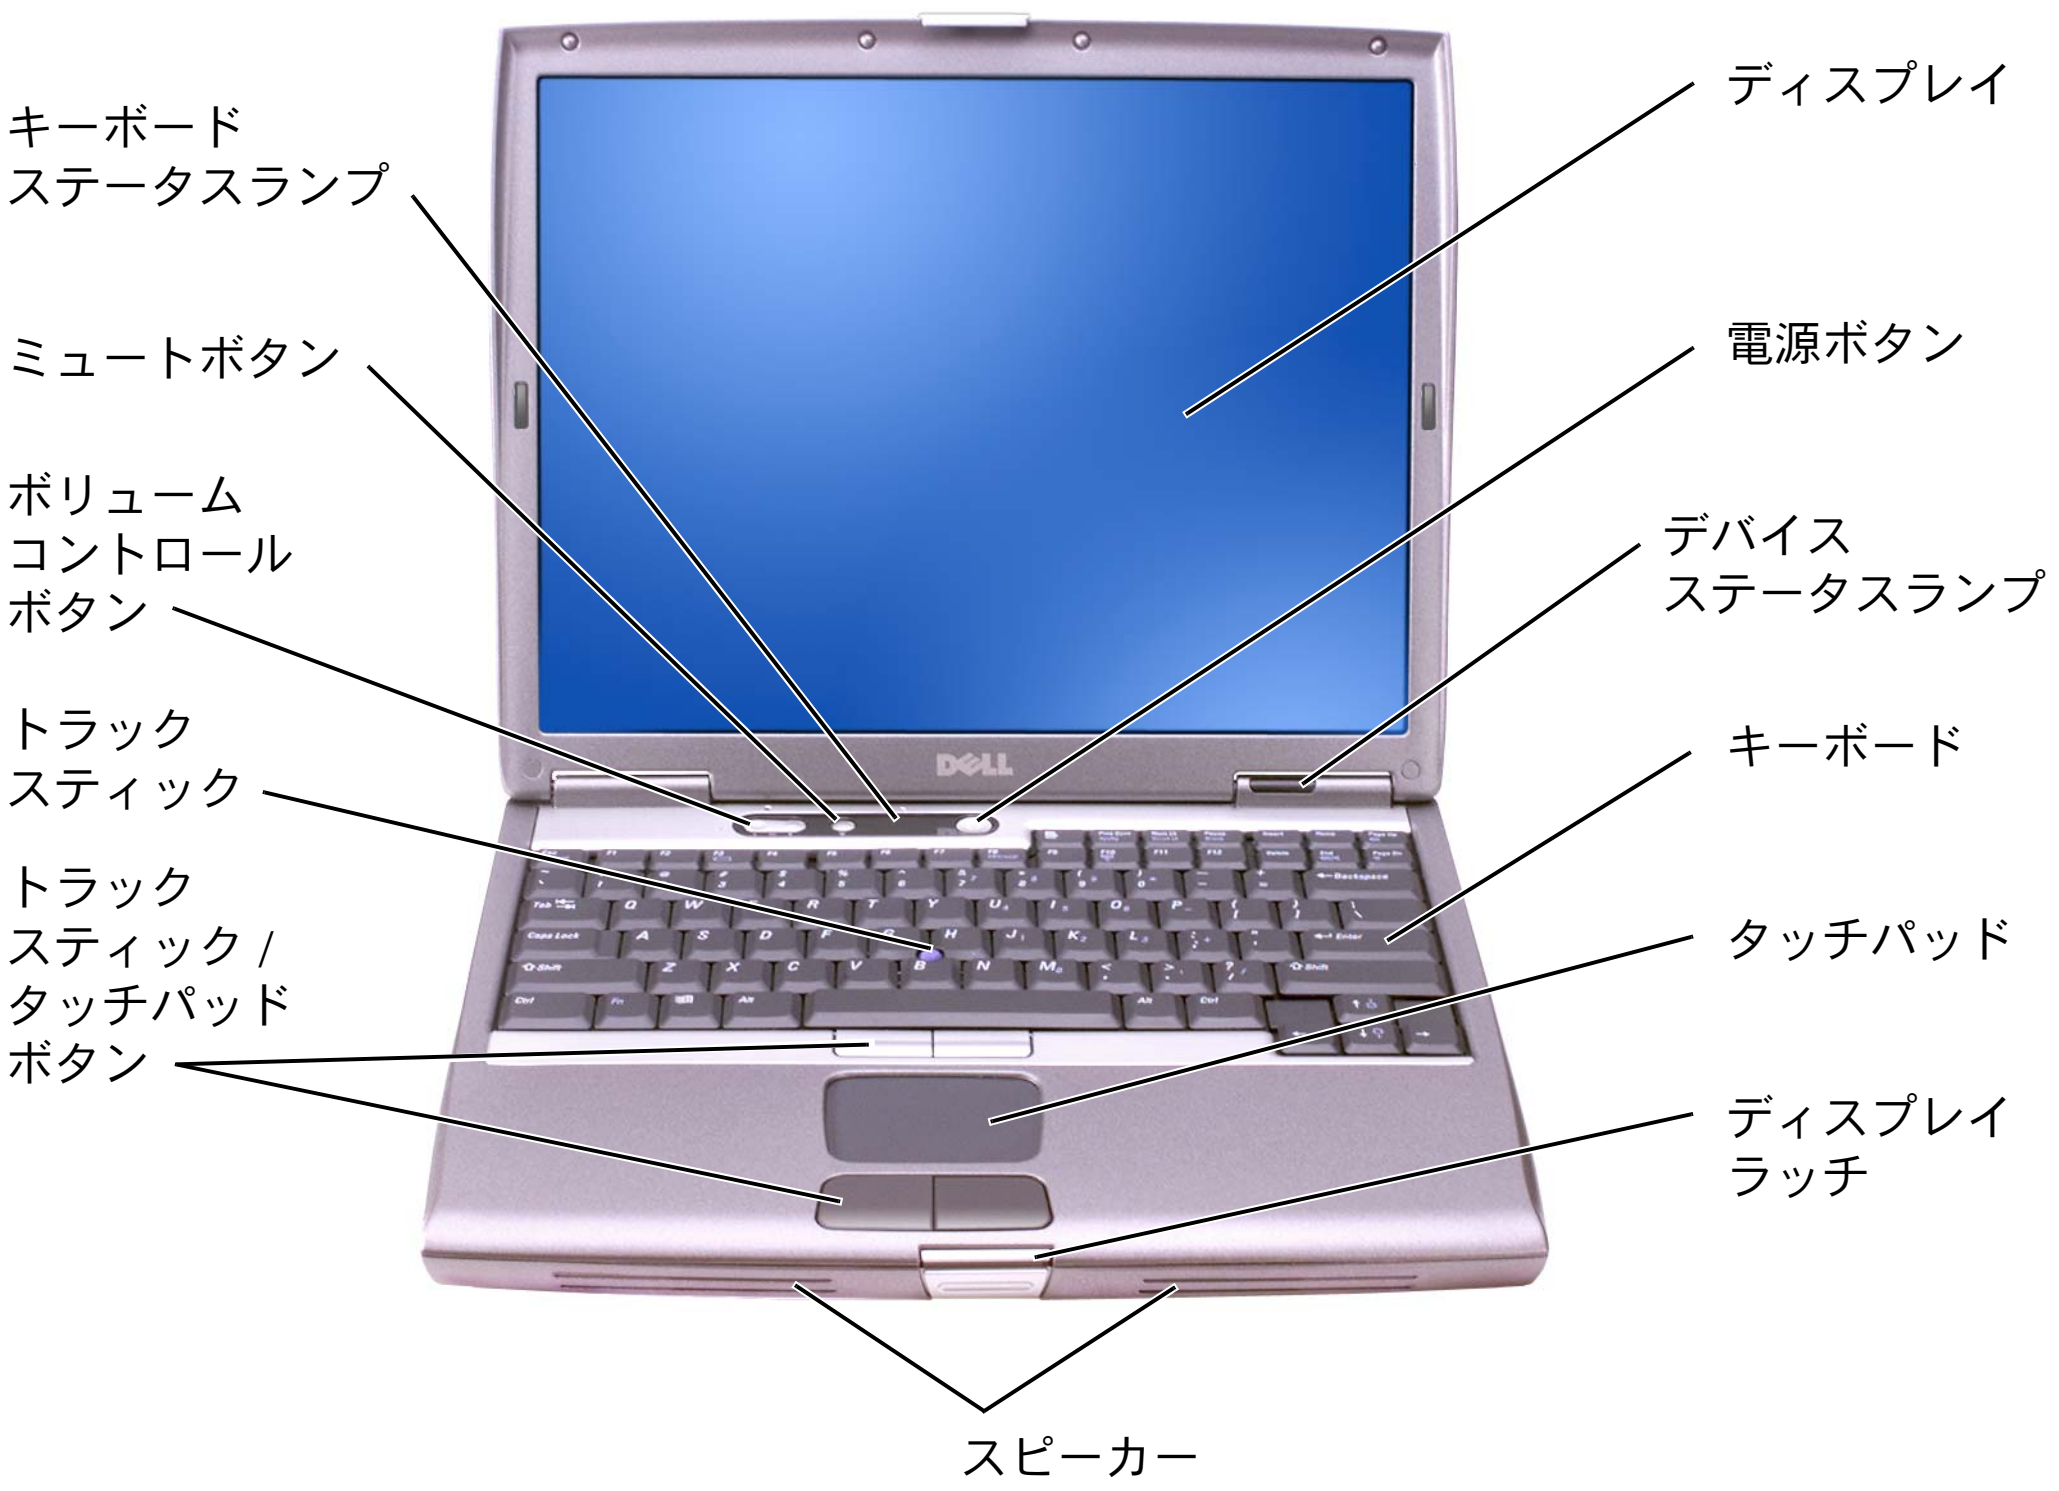
キーボード
ステータスランプ
ミュートボタン
ボリューム
コントロール
ボタン
トラック
スティック
トラック
スティック /
タッチパッド
ボタン
ディスプレイ
電源ボタン
デバイス
ステータスランプ
キーボード
タッチパッド
ディスプレイ
ラッチ
スピーカー

左側面図

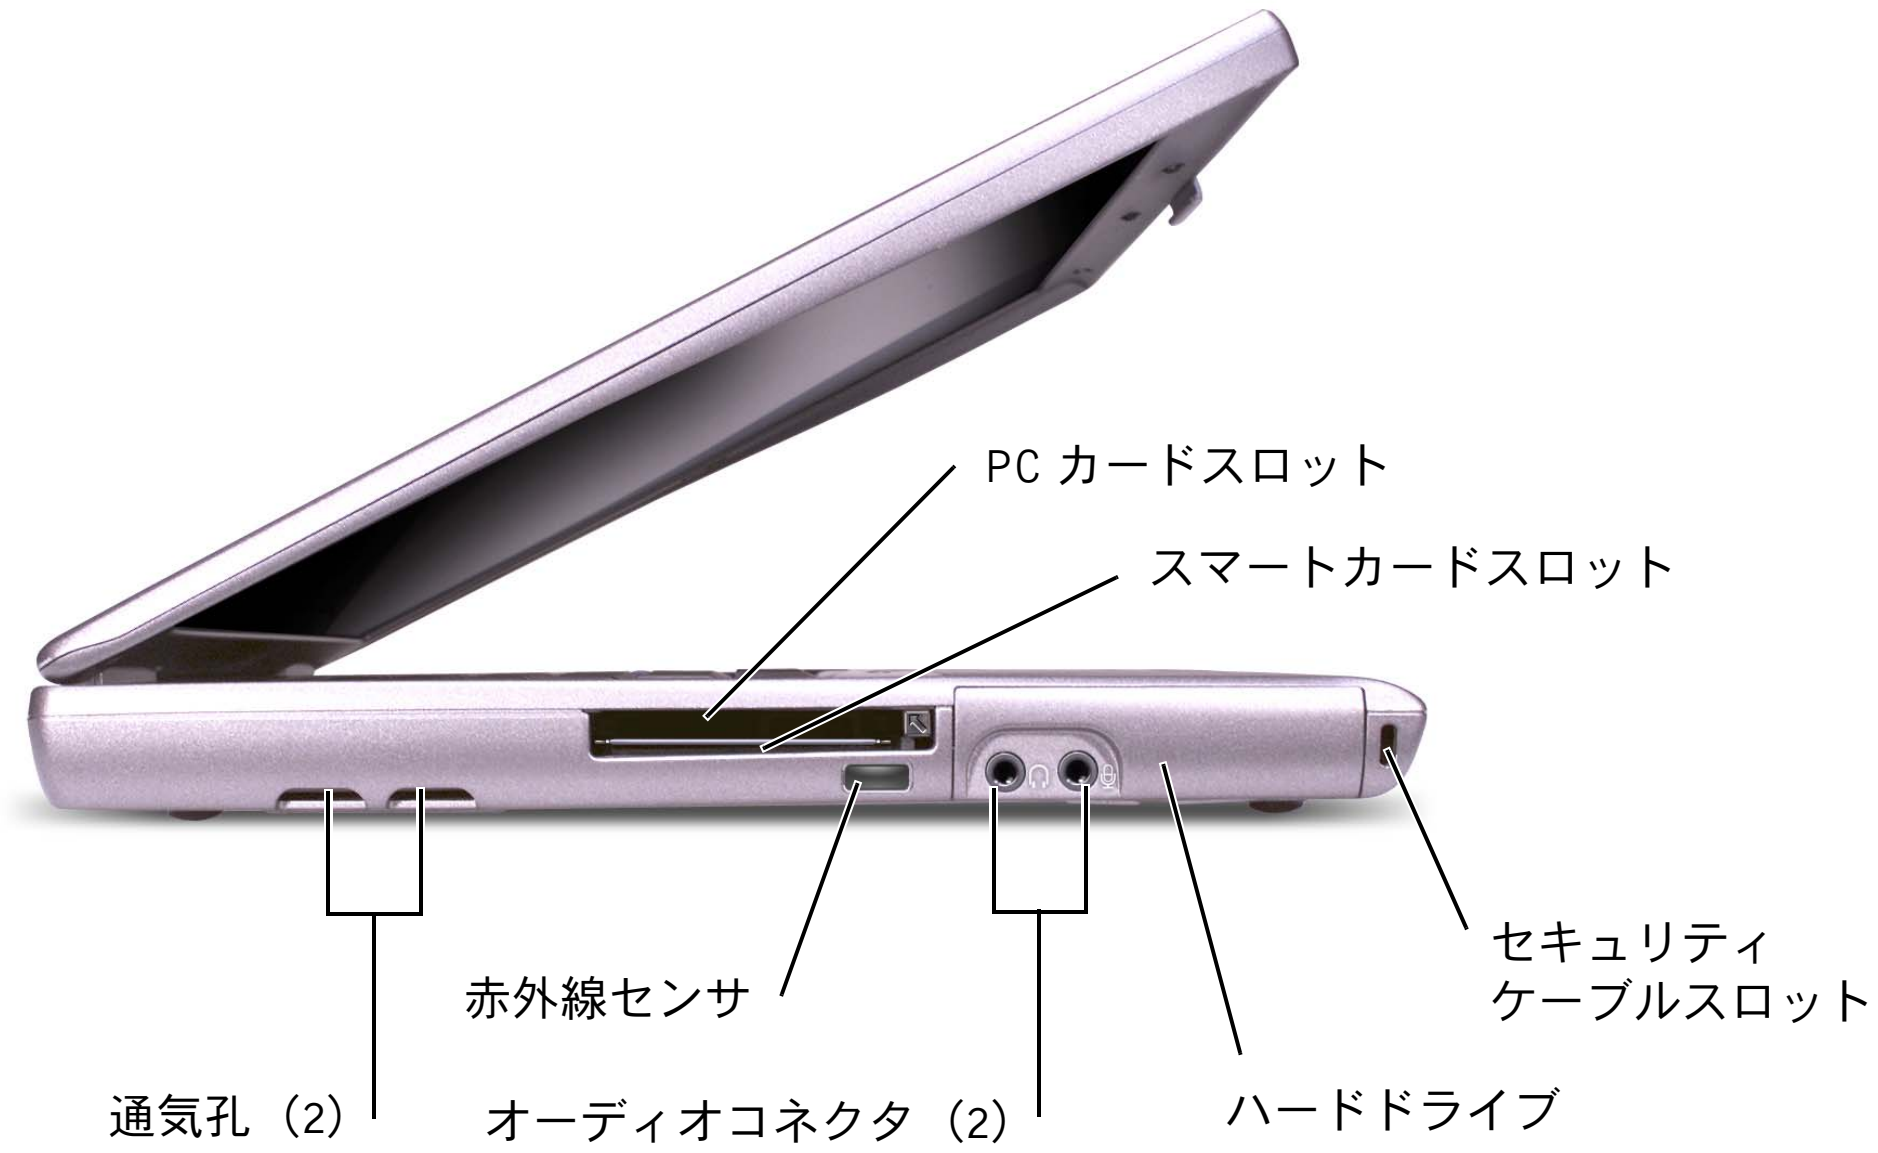
PC カードスロット
スマートカードスロット
セキュリティ
ケーブルスロット
赤外線センサ
通気孔（2）
オーディオコネクタ（2）
ハードドライブ

右側面図

モジュールベイ
セキュリティ
ケーブルスロット
デバイス
リリースラッチ

背面図

注意：コンピュータの損傷を避けるために、コンピュータの電源を切ったあと 5 秒待ってから、周辺機器を取り外してください。

警告：通気孔を塞いだり、異物を押し込まないでください。また、通気孔にほこりが吸い込まれないようにしてください。書類カバンの中など、空気の流れない密封された環境でコンピュータを動作させないでください。このような場所でコンピュータを使用すると、コンピュータが破損したり、火災の原因になる恐れがあります。

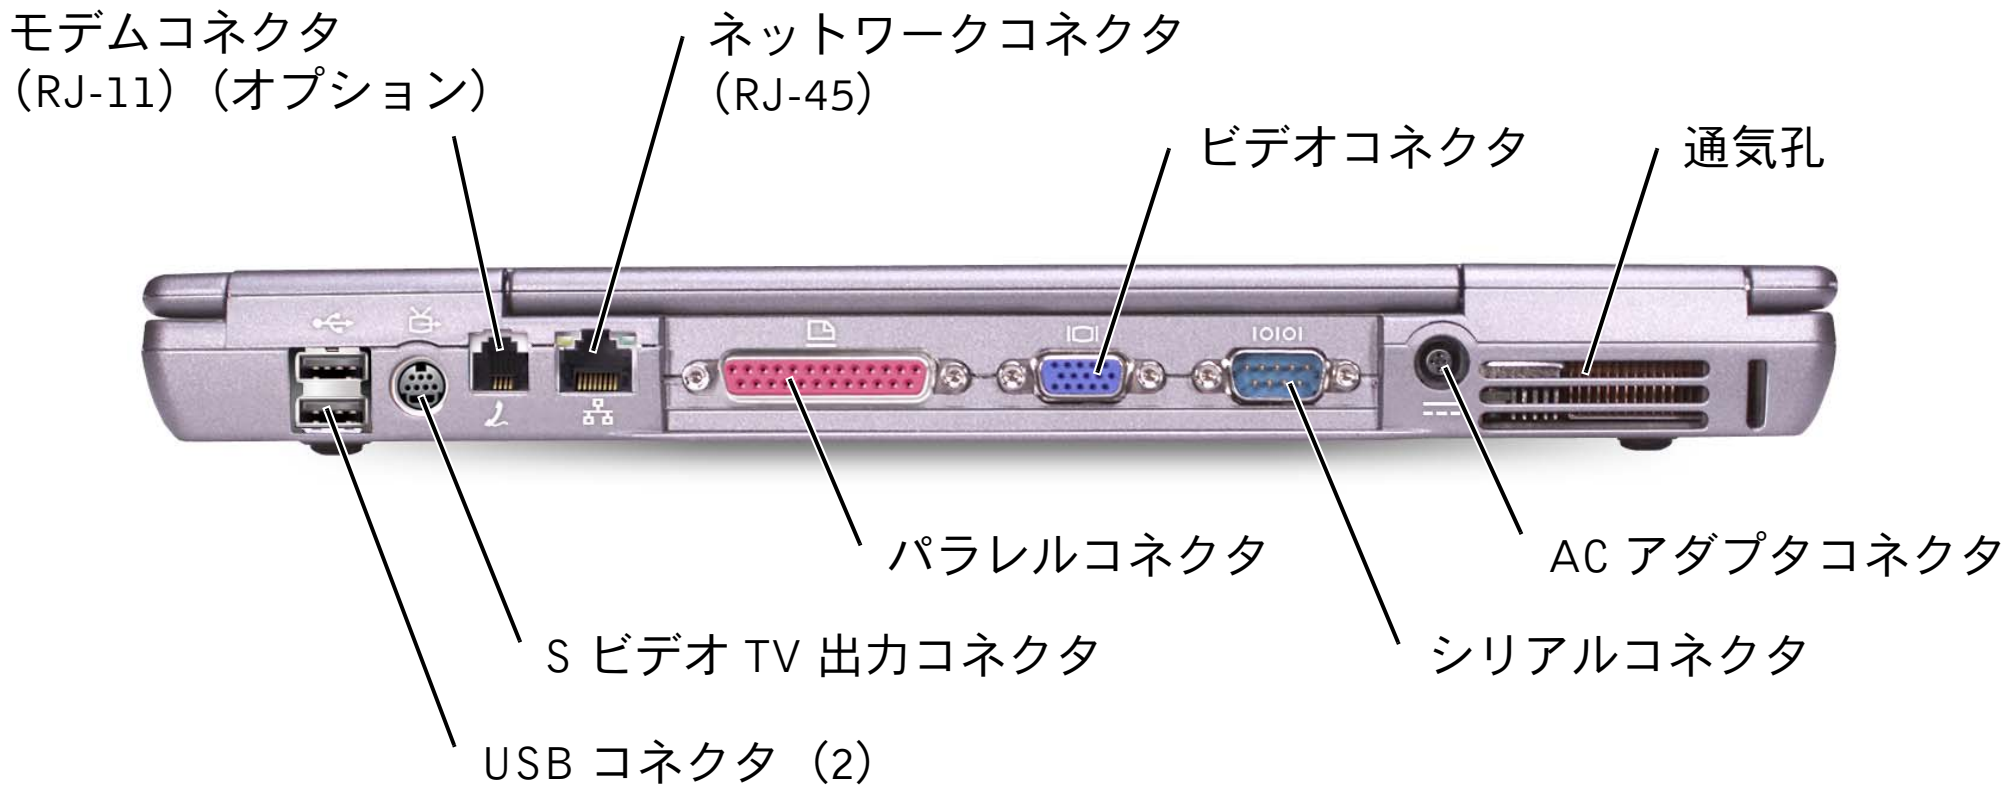

底面図

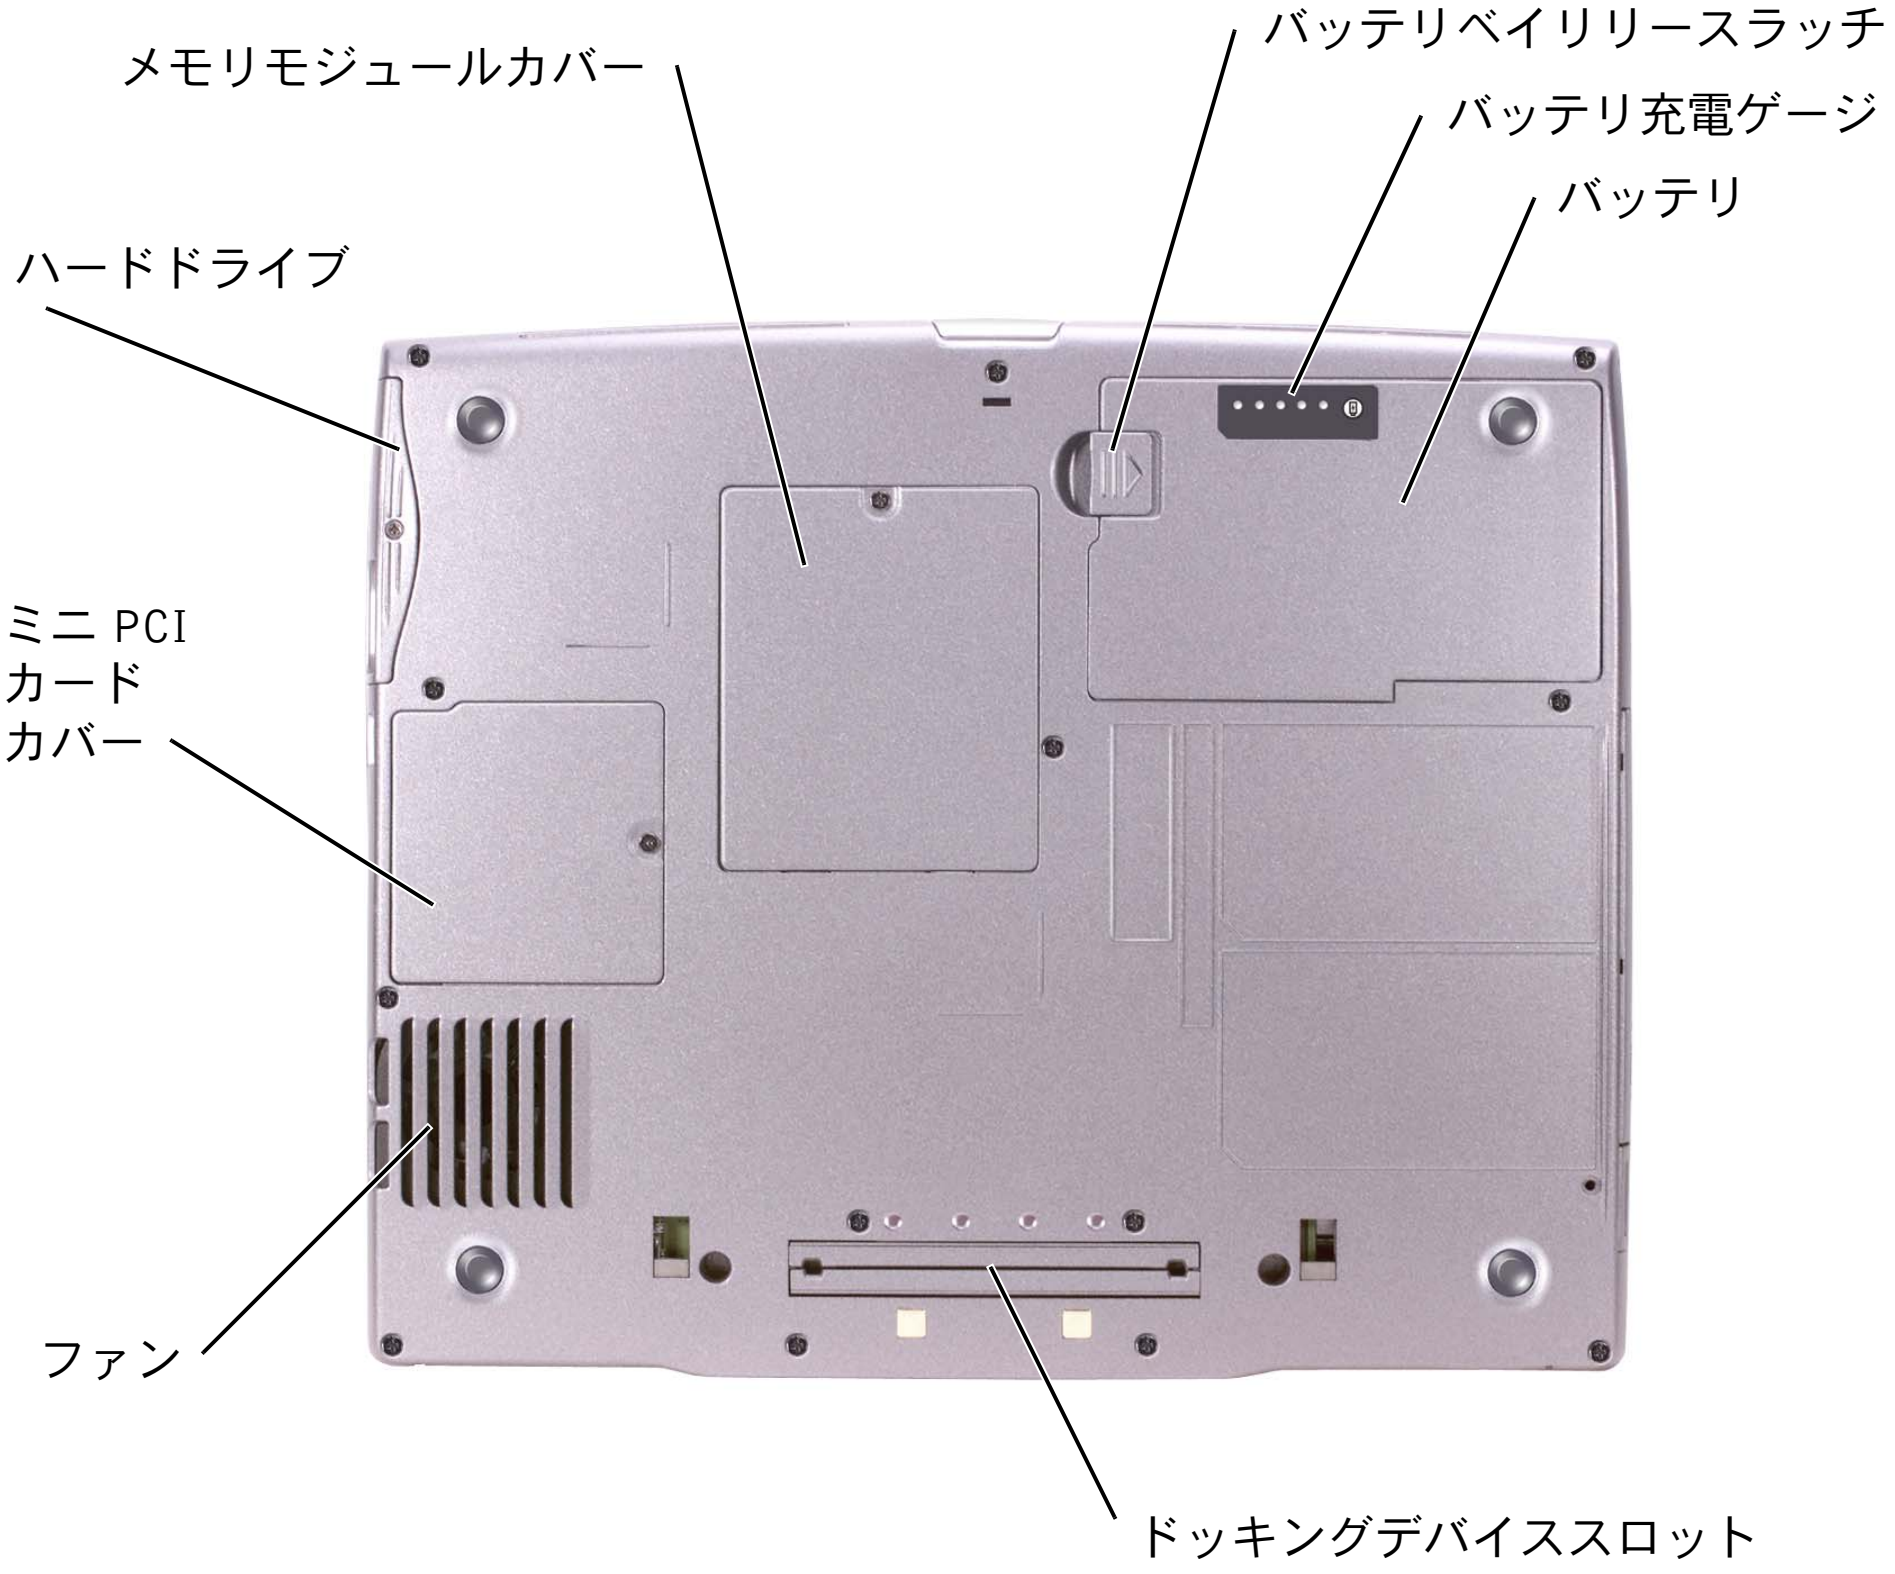
メモリモジュールカバー
バッテリベイリリースラッチ
バッテリ充電ゲージ
バッテリ
ハードドライブ
ミニ PCI
カード
カバー
ファン
ドッキングデバイススロット

バッテリの取り外し

セカンドバッテリの取り外し方の詳細については、オンラインの『ユーザーズガイド』の「モジュールベイの使い方」を参照してください。

警告：この手順を開始する前に、コンピュータの電源を切り、電源コンセントを抜いて、モデムを電話ジャックから取り外してください。

注意：コンピュータをスタンバイモードにしてバッテリを交換する場合は、90 秒以内にバッテリを交換してください。それ以上経過するとコンピュータがシャットダウンし、保存されていないデータは失われます。

1 コンピュータの電源が切れていること、またコンピュータが電源コンセントおよび電話ジャックから取り外されていることを確認します。

2 コンピュータがドッキングデバイスに接続（ドッキング）している場合は、ドッキング解除します。手順については、ドッキングデバイスに付属のマニュアルを参照してください。

3 コンピュータ底面のバッテリベイリリースラッチをスライドさせたまま、バッテリをベイから取り外します。

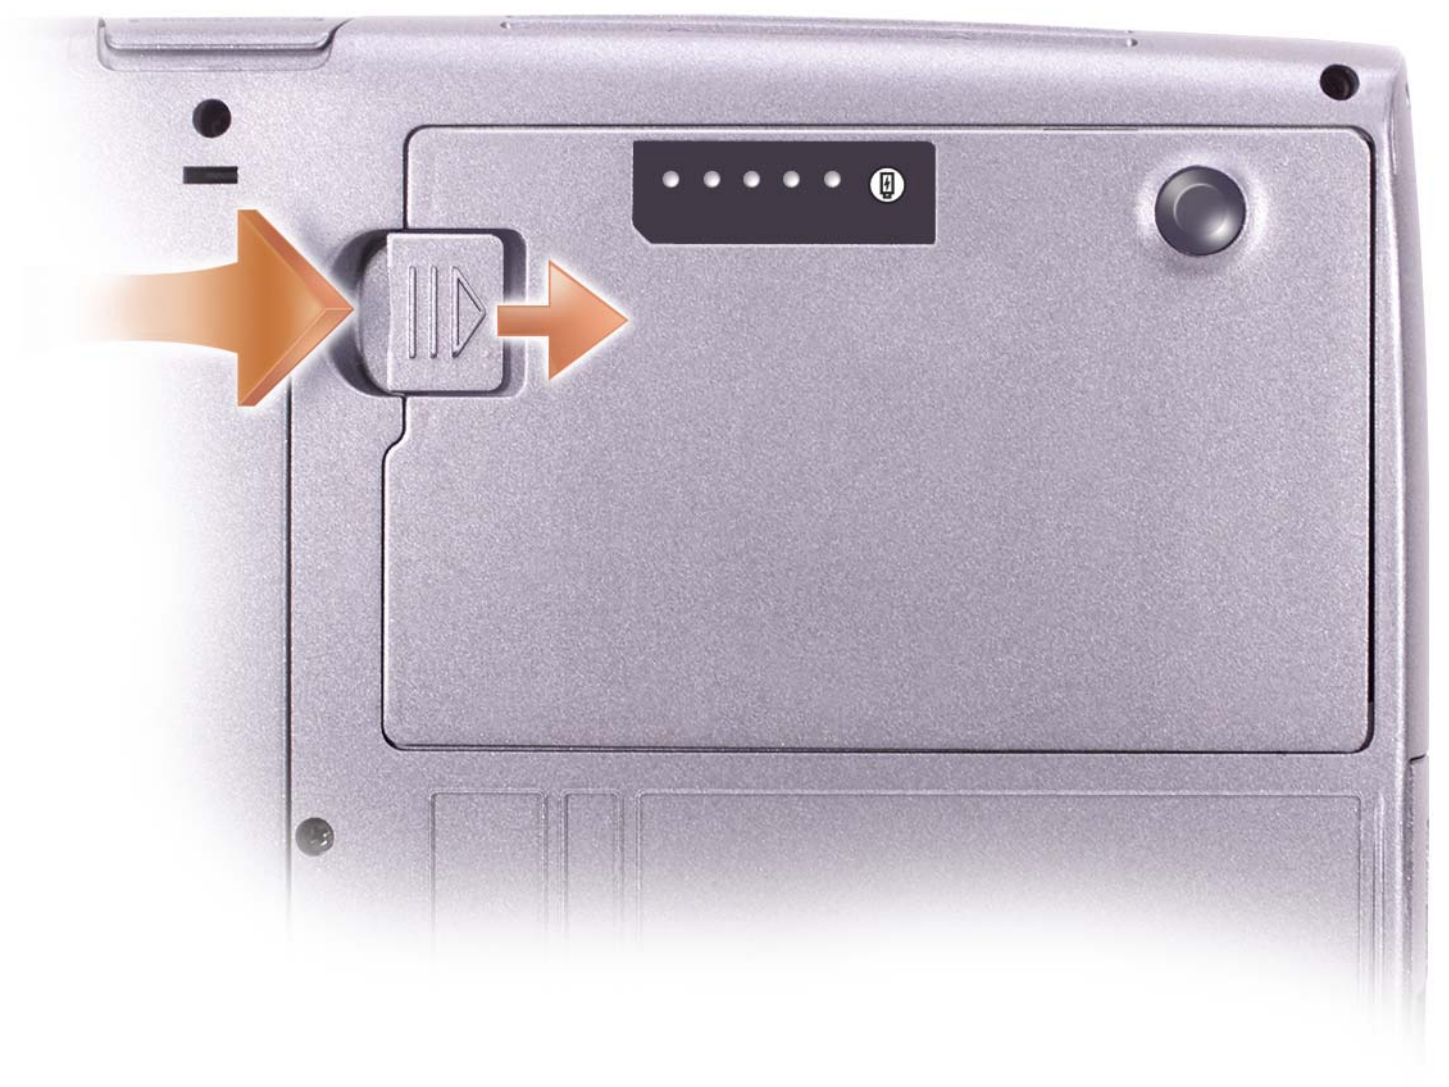

予備バッテリの取り外しと取り付け

1 バッテリを取り外します。

2 予備バッテリのカバーを取り外します。

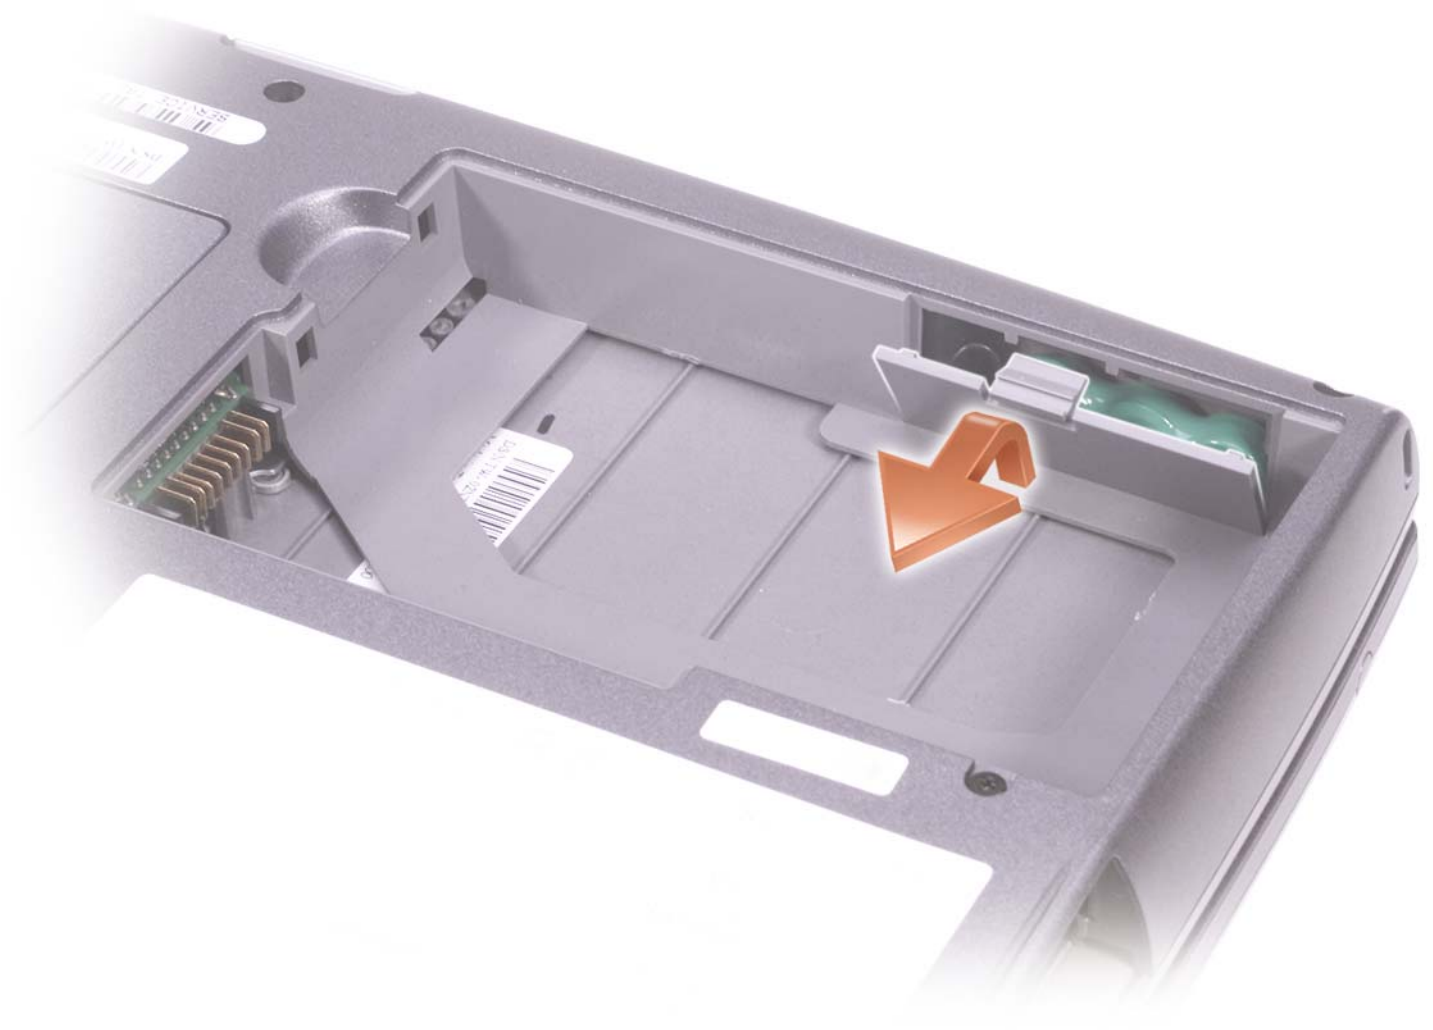

3 予備バッテリをバッテリ実装部から引き出し、コネクタからケーブルを取り外します。

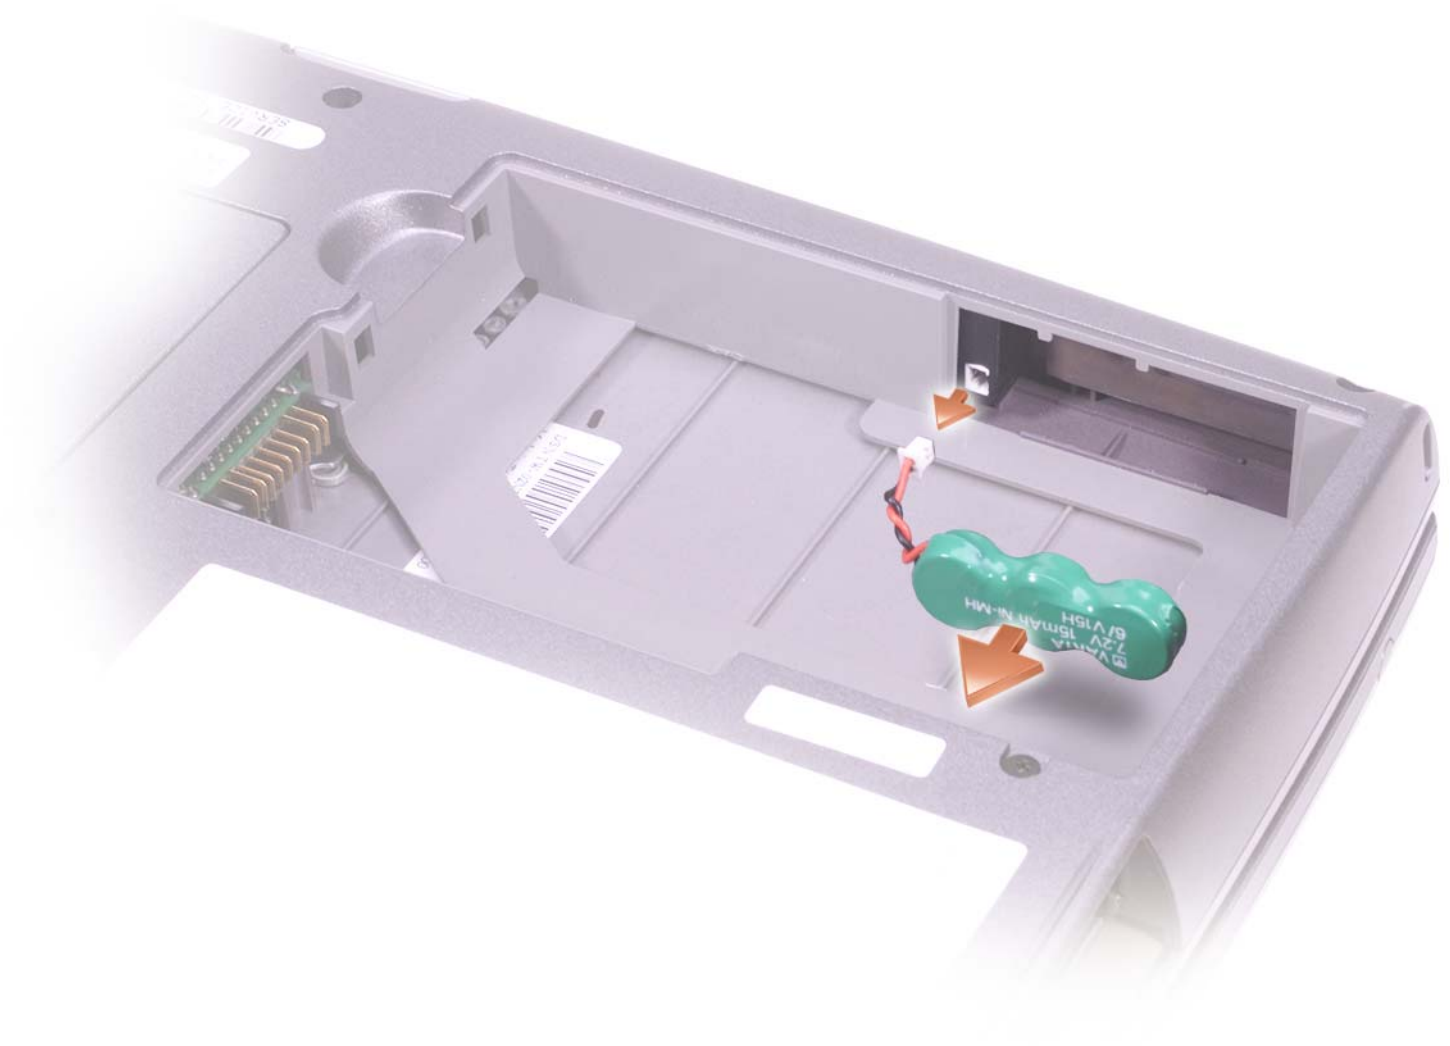

4 予備バッテリのケーブルを予備バッテリ実装部のコネクタに接続します。

5 予備バッテリを実装部に入れ、予備バッテリのカバーを取り付けます。

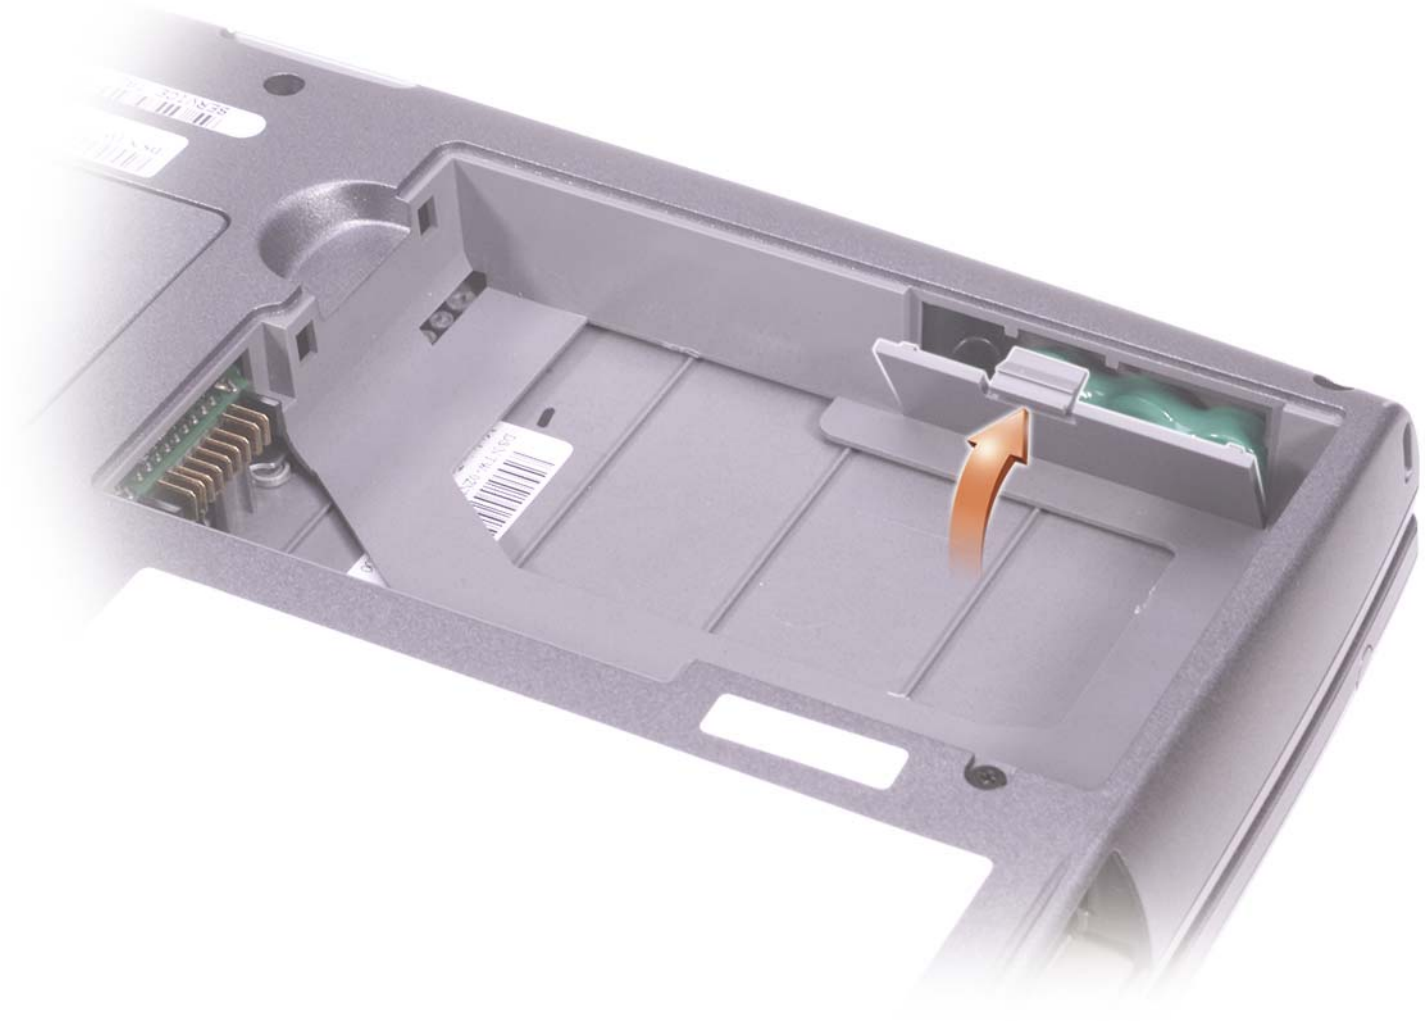

バッテリの取り付け

バッテリをベイに挿入します。完全に固定されると、リリースラッチがカチッとロックされます。

セカンドバッテリの取り付け方の詳細については、オンラインの『ユーザーズガイド』の「モジュールベイの使い方」を参照してください。

Dell 診断プログラムの実行

Dell 診断プログラムは、ハードディスクドライブの診断ユーティリティ用隠しパーティションに格納されています。

メモ：ディスプレイに何も表示されない場合は、F12 のかわりに、ミュートボタンを押しながら電源ボタンを押すと Dell 診断プログラムが開始します。**Diagnostics** をハイライト表示して Enter を押す必要はありません。コンピュータが自動的に起動前システムアセスメントを実行します。

メモ：コンピュータに画面イメージが表示されない場合は、デルまでお問い合わせください（連絡先に関する情報については、後述の「技術情報の入手またはお問い合わせ」のページを参照してください）。

1 コンピュータをシャットダウンします。
2 コンピュータがドッキングデバイスに接続（ドッキング）している場合は、ドッキング解除します。手順については、ドッキングデバイスに付属のマニュアルを参照してください。
3 コンピュータを電源コンセントに接続します。
4 コンピュータの電源を入れます。DELL™ ロゴが表示されたら、すぐに F12 を押します。キーを押すタイミングがあわず Microsoft® Windows® ロゴが表示されてしまったら、Windows デスクトップが表示されるまで待ちます。次にコンピュータをシャットダウンして、もう一度この操作を行います。
5 起動デバイス一覧が表示されたら、**Diagnostics** をハイライト表示して Enter を押します。

   コンピュータは起動前システムアセスメントの実行を開始します。起動前システムアセスメントは、システム基板、キーボード、ハードドライブ、およびディスプレイに対して初期テストを実行する一連の組み込み診断テストです。

   • 起動前システムアセスメントの実行中に表示されるすべての質問に答えます。

- いずれかのコンポーネントのテストに失敗すると、コンピュータはビープ音を出して停止します。起動前システムアセスメントを中止し、オペレーティングシステムを再起動する場合は、<N> を押します。継続して次のテストを実行する場合は、<Y> を押します。失敗したコンポーネントを再テストする場合は、<R> を押します。
- 起動前システムアセスメントのテストが失敗した場合は、Dell 診断プログラムの実行を継続する前に、そのエラーコードを書き留め、デルまでお問い合わせください（連絡先に関する情報については、後述の「技術情報の入手またはお問い合わせ」のページを参照してください）。
- 診断ユーティリィティパーティションが見つからないというメッセージが表示される場合は、画面の指示に従って『Drivers and Utilities CD』から Dell 診断プログラムを実行します。

起動前システムアセスメントのテストが正常に完了すると、「`Booting Dell Diagnostic Utility Partition. Press any key to continue`（Dell 診断プログラムユーティリティパーティションを起動中です。いずれかのキーを押してください。）」というメッセージが表示されます。

6 いずれかのキーを押すと、ハードドライブ上の診断プログラムユーティリィティパーティションから Dell 診断プログラムが起動します。

7 Dell 診断プログラムが読み込まれ、**Main Menu** 画面が表示されたら、目的のオプションを実行するボタンをクリックします。

メモ：各画面のタイトルバーには、コンピュータのサービスタグが表示されます。

オプション	機能
Express Test	デバイスのクイックテストを実行します。このテストは通常 10 ～ 20 分かかり、途中でユーザーが操作する必要はありません。すばやく問題を検出できる場合があるため、最初は Express Test を実行してください。
Extended Test	デバイスの全体的なチェックを実行します。このテストは通常 1 時間以上かかります。時々質問が表示され、ユーザーはそれらに対して回答する必要があります。
Custom Test	特定のデバイスをテストします。実行するテストをカスタマイズできます。
Symptom Tree	発生している問題の症状に基づいたテストを選択できます。オプションには最も一般的な症状が一覧表示されます。

8 テスト実行中に問題が検出されると、エラーコードと問題の説明を示したメッセージが表示されます。エラーコードと問題の説明を書き留め、画面の指示に従います。エラー状態を解決できない場合は、デルにお問い合わせください（連絡先に関する情報については、『ユーザーズガイド』の「困ったときは」を参照してください）。

9 **Custom Test** または **Symptom Tree** オプションからテストを実行した場合は、次の表の該当するタブをクリックして、詳細情報を参照します。

タブ	機能
Results	テストの結果と検出されたエラー状態が表示されます。
Errors	検出されたエラー状態、エラーコード、問題の説明が表示されます。
Help	テストの説明が表示されます。テスト実行の要件が表示される場合もあります。

タブ	機能
Configuration	選択したデバイスのハードウェア構成が表示されます。 Dell 診断プログラムでは、セットアップユーティリティ、メモリ、および各種内部テストからすべてのデバイスの構成情報を取得して、画面左のウィンドウのデバイスリストに表示します。デバイスリストには、コンピュータにインストールされているコンポーネント、またはコンピュータに接続されているデバイスの名前すべてが表示されるとはかぎりません。
Parameters	テスト設定を変更して、テストをカスタマイズできます。

10 テストの実行が終了したら、画面を閉じて **Main Menu** 画面に戻ります。**Dell** 診断プログラムを終了してコンピュータを再起動するには、**Main Menu** 画面を終了します。

認可機関の情報

電磁波障害（EMI: Electromagnetic Interference）とは、自由空間に放射または電源コードや信号線に伝導する信号または放射電磁波のことで、無線航海やその他の安全サービスを危険にさらしたり、認可された無線通信サービスの著しい質の低下、妨害、あるいは度重なる中断を発生させます。無線通信サービスとは、AM/FM の商業放送、テレビ、および携帯電話の各種サービス、レーダー、航空交通管制、ポケットベル、PCS（Personal Communication Services）などがありますが、これらに限定されません。これらの認可サービスは、コンピュータを含むデジタル装置などの電波放射を目的としない装置とともに、電磁環境に影響を与えます。

電磁整合性（EMC: Electromagnetic Compatibility）とは、多数の電子機器が同一の環境で共に正常に動作する能力のことです。本コンピュータは、認可機関の EMI に関する制限に準拠する設計がなされており、適合することが確認されていますが、特定の設置条件で干渉が発生しないという保証はありません。この装置が無線通信サービスに対して干渉するかどうかは、装置の電源をオン / オフすることによって判定できますので、以下の方法を 1 つ以上実施してみて干渉を防いでください。

- 受信アンテナの方向を変えてください。
- 受信機に対してコンピュータを再配置してください。
- 受信機からコンピュータを遠ざけてください。
- コンピュータを別の電源コンセントにつないで、コンピュータと受信機を別々の分岐回路上に置いてください。

必要があれば、デル テクニカルサポートまたはラジオ / テレビ専門技術者に相談してください。

その他の認可機関の情報については、オンラインの『ユーザーズガイド』の付録の「認可機関の情報」を参照してください。

保証書およびサービスタグナンバー / エクスプレスサービスコードについて

保証書

デル製品に保証書は添付されておりません。各製品はサービスタグナンバー / エクスプレスサービスコードという各製品固有の管理番号によって保証登録されています。

メモ：「ソフトウェア＆周辺機器」取扱製品は、デルによる保証の対象とはなりませんのでご注意ください。

サービスタグナンバー / エクスプレスサービスコード

サービスタグナンバー / エクスプレスサービスコードとは、コンピュータに貼られたシール上に記載された各製品固有の管理番号です。保証内容・期間、システム構成、お客様情報などサービスに関する情報はこの番号を元にデルのデータベースで一括管理されています。お問い合わせいただく際はこれらの番号が必ず必要となりますので下記に番号をお控えください。

[貼付位置とシールサンプル]

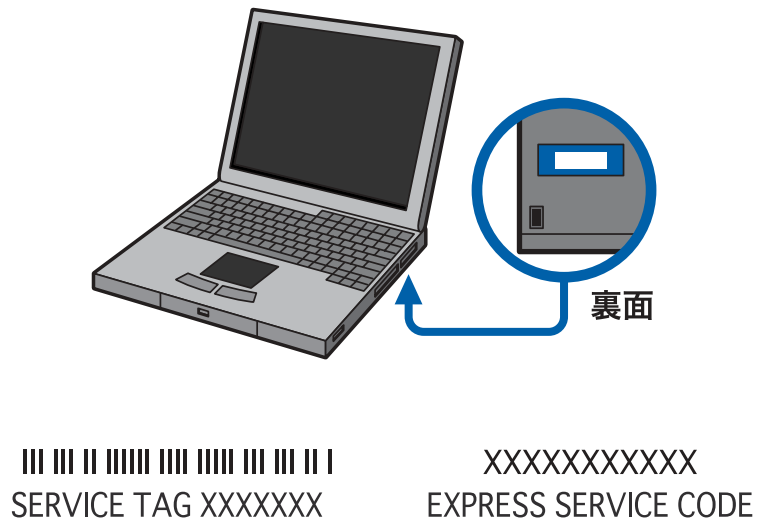

サービスタグナンバー：5 桁もしくは 7 桁の英数字混合の番号です。

エクスプレスサービスコード：最大 11 桁までの全桁数字の番号
です。

サービスタグナンバー	
エクスプレスサービスコード	

お届け時の誤品・欠品・破損

お届けした製品に下記に該当する問題が生じた場合は、お届けから 30 日以内にカスタマーケアまでご連絡ください。

ご注文された製品と違う製品が届いた場合（誤品）

初めて箱を開けたときにご注文された付属品が足りない場合（欠品）

お届けした製品（本体および本体付属品）に傷、ひび割れなどがあった場合（破損）

カスタマーケア：044-556-4240

受付時間：9：00 ～ 17：30（祝祭日および年末年始 12 月 30 日 ー 1 月 3 日を除く月曜日から金曜日）

お問い合わせの際は、注文請書・請求書・納品書の右上に記載された「19 ・・・」から始ま る 9 桁のオーダー No. をご用意ください。

メモ：お客様情報の登録は、製品ご購入時にデルにて行っております。新規に登録していただく必要はありません。変更の必要が生じた場合のみ、登録内容の変更をお願いいたします。

登録内容の変更

製品をご購入いただいた際に、お客様のご住所、お電話番号等の情報をデルデータベースに登録させていただいております。お客様の登録情報に変更が生じた場合は、サポートサイトにて登録内容の変更を行ってください。（インターネットへ接続されていない場合はカスタマーケアまでご連絡ください。）

サポートサイト（登録内容変更申込）

https://supportapp.jp.dell.com/jp/jp/emaildell/transfer_form.asp

技術情報の入手またはお問い合わせ

技術的な疑問を解決するための様々な方法をご用意しています。

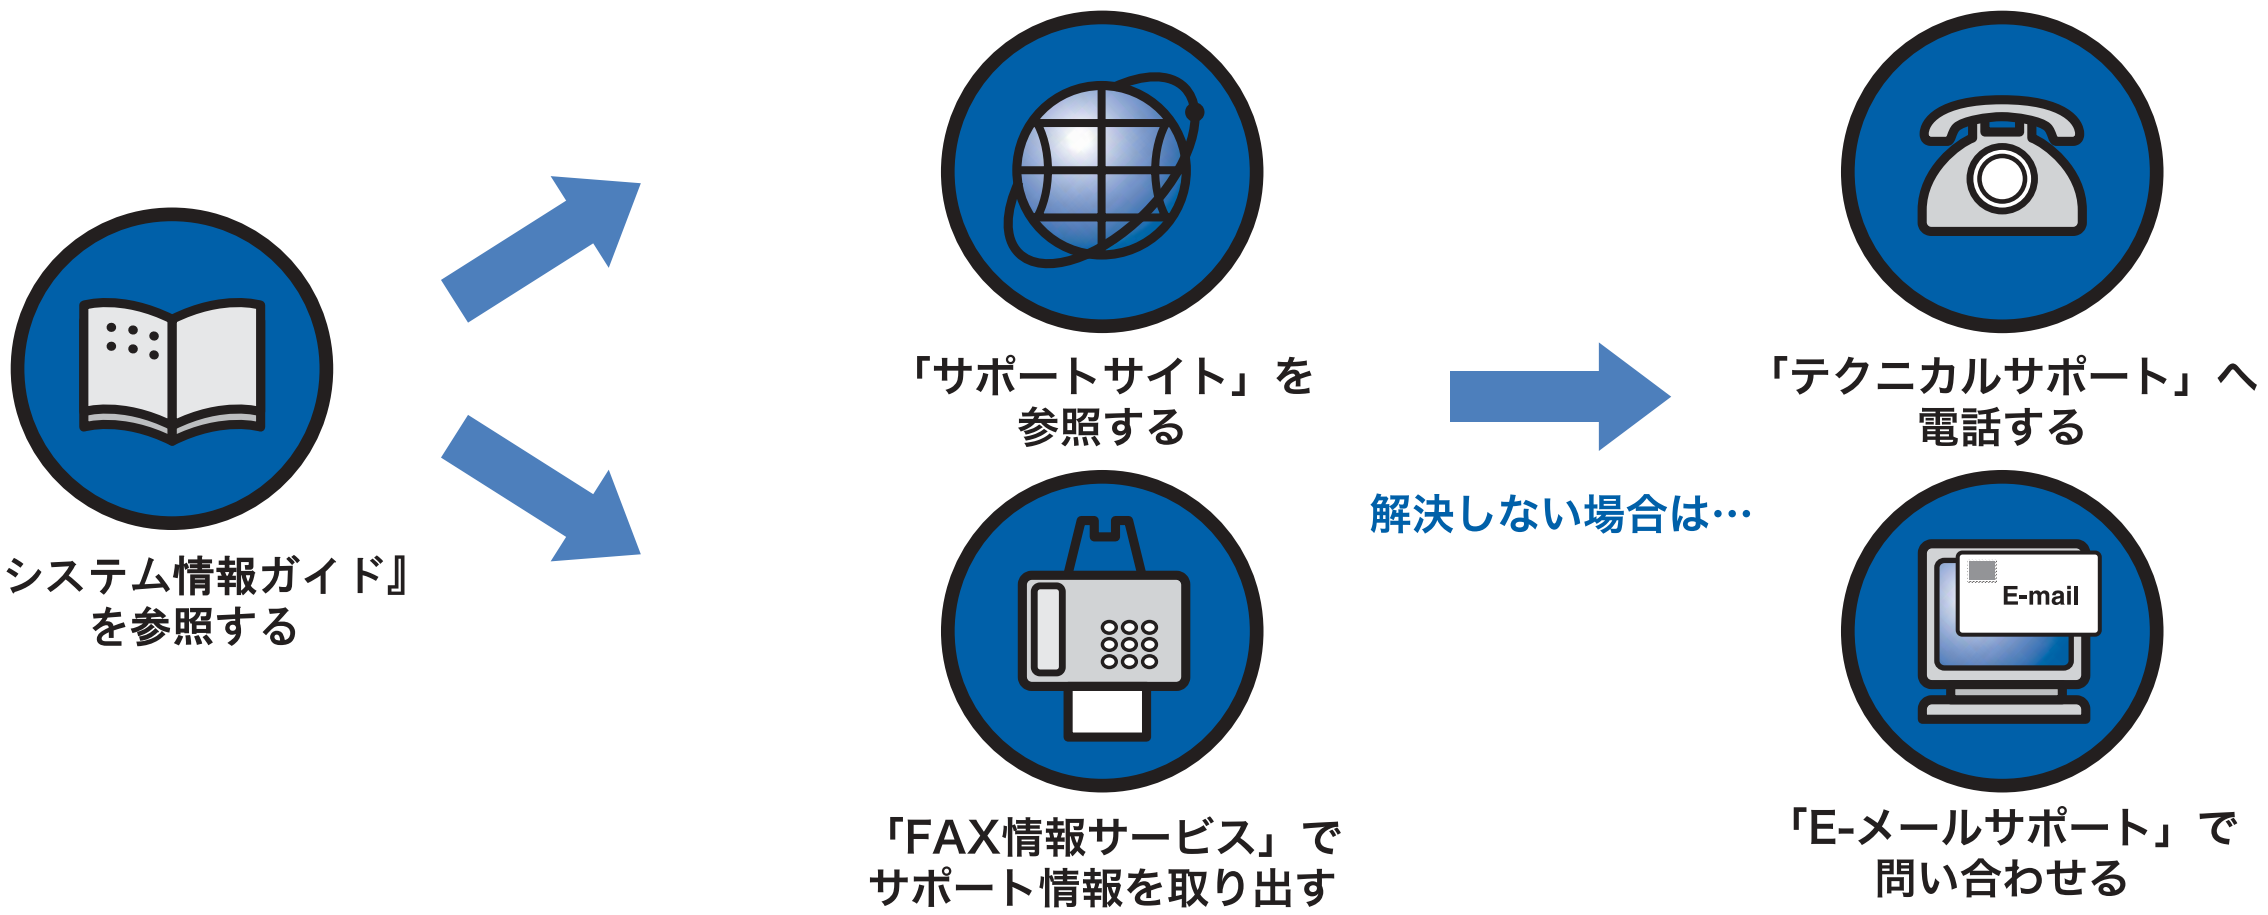

『システム情報ガイド』や、製品にインストールされているオンラインマニュアルをご利用ください。

「サポートサイト」、「FAX 情報サービス」をご利用ください。OS / デバイスドライバの再インストールガイドなど、役立つ情報を公開しています。

お電話でテクニカルサポートへお問い合わせください。E- メールによるお問い合わせも可能です。

サポートサイト（WEB）

サポートサイトでは、製品を快適にご使用いただく上で役立つ、OS やデバイスドライバの再インストール手順などの技術的な情報を公開しています。また、同サイトのファイルライブラリには、デバイスドライバや BIOS アップデートプログラムなどを収めています。

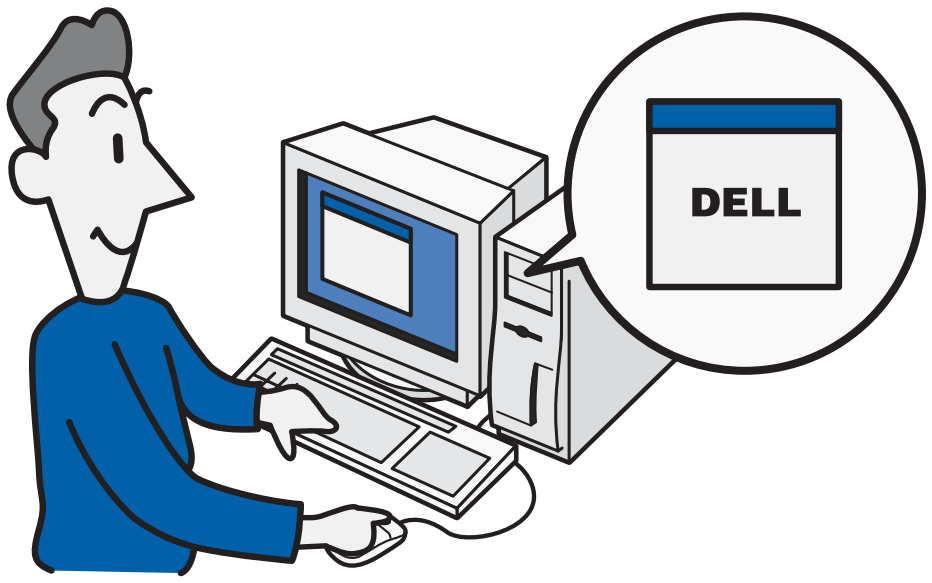

サポートサイト http://support.jp.dell.com

このような場合にご利用ください

- OS / デバイスドライバを再インストールしたい
  → インストールガイド
- よく寄せられるご質問と、解決方法
  → Q&A（お問合せ事例集）

  （例えば…）「セットアップユーティリティ（BIOS）の起動方法は？」
  「CD-ROM ドライブからコンピュータを起動したい。」
  「画面が表示されなくなった場合はどうすればいいのか？」
- デバイスドライバなどのファイルを入手したい
  → ファイルライブラリ
- ハードウェアの診断を行いたい
  → Diagnostics（診断プログラム）
- 製品の仕様、情報が知りたい
  → システムマニュアル、OS アップグレード情報
- サービス情報が知りたい
  → 保証情報の確認、サポート範囲について
- 直接サポートを受けたい
  → 受付電話番号の確認、E- メールサポート受付

メモ：お客様のサービスタグナンバー が登録されるまでに、少々お時間をいただくことがあります。サービスタグナンバー の入力に誤りがないにも関わらずエラーメッセージが表示される場合は、製品名でカスタマイズをおこない、日をおいてから改めてサービスタグナンバーでパーソナライズしてください。サービスタグナンバー によるパーソナライズをおこなっていない場合でも、インストールガイドやファイルライブラリなど、技術情報の参照に一切制限はございません。

メモ：サポートサイトから FAX 情報のリクエストを行うことも可能です。ダイヤル回線をご使用のお客様は音声で情報の入力を行っていただきますが、入力内容をシステムが認識できない場合があります。この場合はお手数ですが、ご使用の電話機でトーン信号を発信する設定をご確認いただいた上で、おかけ直しいただくようお願いいたします。

ご利用手順

1. **http://support.jp.dell.com** にアクセスします。
2. サービスタグナンバーを入力し、サポートサイトをパーソナライズします。

メモ：パーソナライズとは、サービスタグナンバーを入力することで、サポートサイトをお客様の製品にあわせてカスタマイズすることです。パーソナライズを実行すると、保証情報の確認、テクニカルサポート電話番号の参照、E- メールサポートの利用が可能になります。また、一度パーソナライズを実行すると、次回のアクセス以降はパーソナライズされたページが自動的に開きます。

FAX 情報サービス

OS やデバイスドライバの再インストール情報など、技術的なサポート資料をお手持ちの FAX にお届けするサービスです。入手したい情報 BOX 番号と、お客様の FAX 番号を指定するだけで、簡単にご利用いただけます。

FAX 情報サービス：044-556-3490

受付時間：24 時間 365 日

情報 BOX 番号一覧もこちらからご入手いただけます。また、デルサポートサイトでも情報 BOX 番号一覧を公開しています。

http://support.jp.dell.com/jp/jp/faxbox/index.asp

ご利用手順

1. お近くの FAX または電話から、**044-556-3490** に電話をかけます。
2. 音声案内に従い、ご希望の資料の情報BOX番号と #（シャープ）を押します。

   ご希望の資料の情報BOX番号が分からない場合は、BOX番号 1 と #（シャープ）を押してください。情報BOX番号一覧が取り出せます。

メモ：複数の情報を取り出すには、この操作を取り出したい情報の数だけ繰り返します。ダイヤル回線のお客様には、BOX 番号などを音声でお答えいただきます。入力を間違えても訂正できますので、電話を切らずに、音声案内に従ってください。

3　情報を受信する、お客様の FAX 番号を入力してください。

4　サポート情報がお客様ご指定の FAX に届きます。

E- メールによるお問い合わせ

E-メールによる技術的な質問についてのお問い合わせを承っております。サポートサイトの「E-メールサポート受付フォーム」よりご連絡ください。

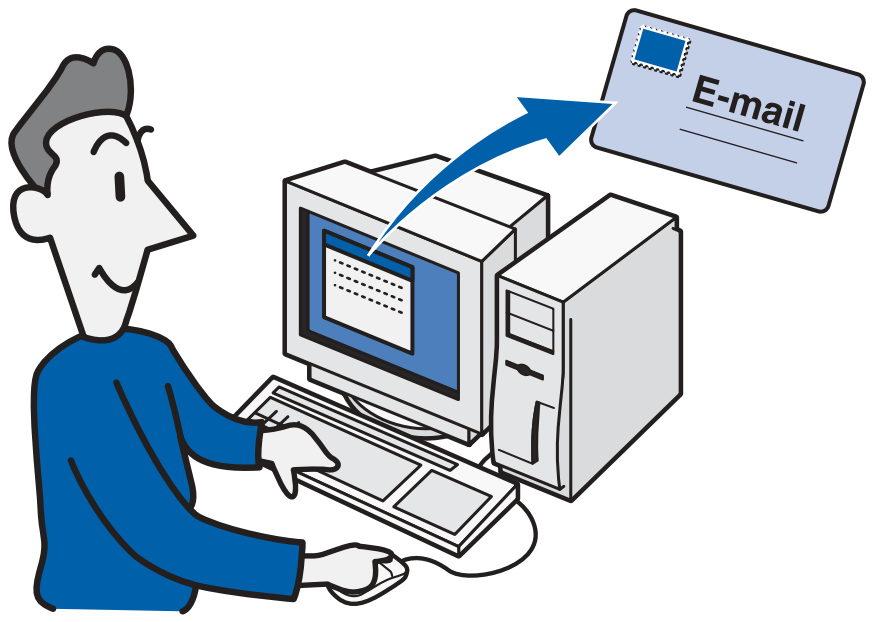

お問い合わせから回答まで

サポートサイトの受付フォームから質問を送ります。

サポートサイト URL：http://support.jp.dell.com

E- メールサポートをご利用になるには、ホームページをパーソナライズする必要があります。

▼

受付けをお知らせする E-メールが届きます。

お問い合わせの内容によっては回答を返信するまでにお時間をいただく場合もございます。

▼

ご質問に対する回答の E-メールが届きます。

▼

継続してご質問される場合

デルからの回答に対してご質問がある場合は、再度、受付フォームから送信してください。

メモ：E- メールソフトウェア（Outlook Express など）を使って E- メールを直接送信することはできません。デルからの回答に対して再度お問い合わせいただく場合も、専用の受付フォームをお使いください。E- メールの返信機能を利用して送信することはできません。

修理のご依頼、または明らかにハードウェアの故障と思われる場合は、迅速な対応をおこなうために、デルテクニカルサポートまでお電話でご連絡ください。

お電話によるお問い合わせ

テクニカルサポートでは、ハードウェアに関する技術的なご質問をお電話で承っております。サポートサイトや FAX 情報サービスを利用しても問題が解決しない場合は、エクスプレスサービスコードをご用意の上、本ガイド「デル製品の故障・修理依頼」に記載の「電話テクニカルサポート」までお電話ください。

OS / デバイスドライバ再インストールに際して

OS / デバイスドライバの再インストールを行われる際は、製品付属の CD-ROM を用意し、必ず事前にサポートサイトまたは FAX 情報サービスで、お客様の製品構成に合わせた手順の確認を行ってください。（OS / デバイスドライバの再インストールに必要な CD-ROM の情報は、サポートサイトおよび FAX 情報サービスでも確認いただけます。）

デル製品の故障・修理依頼

お電話にてテクニカルサポートへご連絡ください。テクニカルサポートへお電話いただきますと、自動音声で受付を行い、お客様のエクスプレスサービスコードなどの情報をもとに専門のスタッフにおつなぎします。

電話テクニカルサポート：0120-198433

国外からのお客様は 044-556-3894

ご利用手順

1 エクスプレスサービスコードをご用意ください。

(エクスプレスサービスコードについては P120 をご参照ください。)

2 テクニカルサポートへ電話し、自動音声に従ってエクスプレスサービスコードを入力してください。

(入力が認識されない場合は、音声でお答えください。)

デルからのお願い

- お電話でお問い合わせいただく前に

  お電話でお問い合わせいただく際、お客様のシステムの情報、お問い合わせ内容等をご用意いただくと、テクニカルサポートスタッフがトラブルの原因を迅速、かつ正確に判断することができます。下記の情報をご用意の上ご連絡ください。

  – エクスプレスサービスコード
  – 機種名 (OptiPlex, Dell Precision, Dimension, Latitude, Inspiron など)
  – お問い合わせ内容 (トラブルが発生した過程、エラーメッセージなど)

  ハードウェアの故障と思われる場合は、あらかじめ本体添付の CD-ROM に収録されている「Dell Diagnostics」(Dell 診断プログラム) でエラーの有無をお調べいただき、その結果を合わせてご連絡ください。

  (Diagnostics の実行方法については、「Dell 診断プログラムの実行」＜ P116 ＞を参照してください。)

- 自己診断 (トラブルシューティング) ご協力のお願い

  テクニカルサポートでは、お電話でトラブルの状況をおたずねし、できる限り原因を特定いたします。それぞれのトラブル解決に最も適した処置ができるよう努力しておりますので、お客様のご協力をお願い致します。

メモ：「ソフトウェア＆周辺機器」取扱製品に関しては、各メーカーへ直接お問い合わせください。

- データバックアップのお願い

  デル製品を使用してお客様が構築されましたシステムのデータ保全につきましては、お客様ご自身の責任においてバックアッププロセスなど必要な手段を取っていただいております。オンサイト修理サービスを実施するにあたりましても、事前にお客様ご自身で必要なデータバックアップを行っていただくようお願い致します。

- OS / デバイスドライバ再インストールご協力のお願い

  OS / デバイスドライバ再インストールのみ実施するためのオンサイト修理サービスの提供はいたしかねます。OS / デバイスドライバ再インストールはお客様ご自身で実施いただきますようお願い致します。

- ダイヤル回線のお電話をご利用のお客様

  電話テクニカルサポートでは、自動音声で受付を行い、電話トーン（プッシュ信号）を利用して専門のスタッフまでお電話をおつなぎしています。ダイヤル回線のお電話をお使いの場合、ご案内システムをご利用いただけない場合がありますので、お手数ですがトーン信号を発信できる設定をおこなった後、おかけいただくようお願い致します。

デル製品の保証について

本項目の内容は、各保守サービスおよび電話テクニカルサポートの契約条件(約款)の抜粋となっています。詳しい契約条件(約款)に関しては、デルサポートサイトの次のページをご覧下さい。

URL http://support.jp.dell.com/jp/jp/spm/contract/

ご提供サービスの情報は納品書または請求書に記載されていますので、ご確認の上保存してください。サービス内容がご不明の際は、サポートサイト不明の際は、サポートサイト（http://support.jp.dell.com）でサービスタグナンバーを入力していただくと、購入された製品の保証情報（サービスの種類や保証期間）をご確認いただけます。

標準保証

ご購入いただいた製品には以下のサポートサービスがついています。

メモ：各サービスの種類および期間は製品モデルやお客様のご選択内容によって異なることがあります。

- **24 時間電話テクニカルサポート**

  ご購入後のハードウェア障害や技術的なご質問はデルテクニカルサポートが直接承ります。万一の障害にもお客様とテクニカルサポートをダイレクトにつなぐことで、障害状況をより的確にスピーディにキャッチできるシステムです。

  受付時間：**24** 時間 **365** 日

- **パーツ保証**

  ご購入から 3 年以内に製品が故障した場合は、デルによる故障診断で特定されたシステムの復旧に必要な補修部品を無償でご提供致します。

  メモ：メインバッテリは、1 年間のみの保証となります。

  ご購入時と同等の補修部品が確保できない場合は、デルが判断した同等性能を有する補修部品をご提供させていただく場合があります。

- **修理サービス**

  標準で 3 年間の翌営業日対応オンサイト保守サービスが提供されます。

メモ：製品ご購入時にサービス期間の短縮（1 年間への変更）をご選択されている場合はこの限りではありません。

翌営業日対応オンサイト保守サービス

外部接続のモニタ、スピーカー、マウス、キーボードにつきましては、オンサイト保守サービスではなく良品を送付させていただく「部品送付サービス」となります。

メモ：外部接続のモニタ、スピーカー、マウス、キーボードにつきましては、オンサイト保守サービスではなく良品を送付させていただく「部品送付サービス」となります。

受付時間と訪問日

ご連絡をいただいた当日の 16：00 までに修理が必要とデルテクニカルサポートが判断した場合、当日を基準日とし、対象地域毎に右記の日を目安としてサービスマンが伺います。テクニカルサポートの判断が当日 16：00 までになされない場合は、その翌営業日が基準日となります。

訪問日の目安	地域
翌営業日サービス地域	本州全体、四国各県、札幌市、福岡市、沖縄本島
翌々営業日サービス地域	札幌市以外の北海道、福岡市以外の九州
お打ち合わせ後決定地域	離島

メモ：営業日とは、月曜日から金曜日（除祝祭日および年末年始 12 月 30 日 ー 1 月 3 日）となります。

メモ：交通事情・天候などにより、上記の日数通りに伺えない場合があります。

修理サービス提供時間

9：00 〜 17：00

（祝祭日・年末年始 **12** 月 **30** 日 ー **1** 月 **3** 日を除く月曜日から土曜日）

- **CompleteCare（コンプリート・ケア）**

  「盗難・火災・破損」などのいわゆる " 事故部分 " をカバーする有償サービスです。ご納品後 3 年の間に、お客様のシステムに「盗難・火災・破損」などの偶発的な 事故による損害が発生した場合、無料で「修理」もしくは「同等スペック PC とのお取り替え」を実施します。詳しくは製品に同梱されている「CompleteCare（コンプリート・ケア）のご案内」をご参照ください。

  ※ 製品ご購入後の本サービス単体販売は致しておりません。

メモ：本サービスは、機器本体を 3 年間の翌営業日もしくは当日対応のオンサイト保守サービス付きで購入された場合、機器の納品日より 3 年間のサービス期間内において無償提供されます。

- **インターナショナル・サービス**

  海外で製品をご使用中にトラブルが発生した場合、日本のテクニカルサポートにご連絡いただくだけでデル現地テクニカルサポートが修理をご提供するサポートプログラムです。

  – サービスの流れ

    インターナショナル・サービス付きのデル製品を海外でご使用中に不具合が生じた場合は、滞在先から日本のデルテクニカルサポートにご連絡下さい。

国番号を含む詳細：81-44-556-3894

お客様の製品情報は日本のデータベースに保管されておりますので、お電話で状況をお伺いしながら障害原因を特定いたします。その結果、お客様の機器に修理が必要であると判断された場合、日本のテクニカルサポートがお客様に代わって現地テクニカルサポートに修理依頼を致します。原則として、現地サポート時間内でのオンサイト保守サービス（出張サービス）が提供されます。修理の日時に関しては、滞在先のテクニカルサポートとお客様との間でご決定いただきます。

– サービス対象国

  WEB サポートサイトにてご確認ください。

  http://support.jp.dell.com/jp/jp/guide/intl_serv.asp

– サービスの制限

  AC アダプタ等、取り外しが簡単な部品が故障した場合には、部品発送をもってオンサイトサービスに代えさせて頂く場合がございます。また滞在期間との関係で、交換部品は滞在国で調達可能な範囲に限定させていただきますのであらかじめご了承ください。

  本サービスはデル製造上の不具合に起因する故障に限定させて頂き、次の項目に該当する場合には本サービスの適用となりませんのでご了承下さい。

  - ソフトウェアに起因する故障
  - お客様御自身による改造、調整、またデル認定サービス会社以外による修理に起因する故障
  - 電源電圧事情による故障、事故、不適切な取り扱い（水濡れ、周辺機器との相性に起因する故障、取り扱い指示内容を逸脱した操作等）に起因する故障
  - 落雷、洪水、竜巻、地震、台風等天災による故障

メモ：GCP（Global CustomerPrograms）のお客様の場合、サポート内容が異なることがございます。詳しくは営業担当までお問い合せください。

オプションサービス

- **延長保守契約サービス**

  修理サービス期間を、ご希望によりご購入日から最大で 5 年間まで延長することができます。

  対象はパソコン本体のみとなっています。ただし途中で増設したデル純正機器も対象とさせていただきますが、外部接続モニタは対象外ですのでご注意ください。

  無償保証期間終了後に延長保守契約サービスにご加入いただく場合は、別途検査費用が発生しますのでご了承ください。

- **当日対応オンサイト保守サービス**

  標準保証でご提供の翌営業日対応オンサイト保守サービスを当日対応オンサイト保守サービスにアップグレード可能です。

  当日修理対応受付時間

  月～金　9:00 ～ 16:00　(祝祭日、年末年始 12 月 30 日 -1 月 3 日を除く)

  ※ 1　16:00 以降の受け付け分は翌営業日の対応となります。

  ※ 2　電話サポートは 24 時間 365 日です。

  ※ 3　本サービスはサービス対象となる部品および地域が設定されています。

「ソフトウェア＆周辺機器」取扱製品の保証について

「ソフトウェア＆周辺機器」として販売される製品の保証については、デルによるサポートサービスの対象とはなりませんのでご注意ください。

製品に関するお問い合わせ・ご意見は

「ソフトウェア＆周辺機器」製品に関する各種設定、使用方法およびご購入後における技術的なご質問に関しては、各メーカーのテクニカルサポートに直接お問い合わせください。（各メーカーの問い合わせ先は、各「ソフトウェア＆周辺機器」製品をご確認ください。）

製品不良について

初期不良（到着後10 日以内）やデルの発送ミスの場合は交換させていただきます。なお、初期不良で限定商品（キャンペーン商品）や売り切れ商品につきましては、同製品に交換できない場合があります。その場合には、各メーカーにて修理対応とさせていただくか、デルによるお引き取りにて対応させていただきます。

下記の場合には返品をお受けいたしかねますのでご了承ください。

- 製品到着後、11 日以上経過してからのご返品
- 開封、もしくはご使用になられた場合
- 商品の性質上、デル製品との相性を理由とした返品
- ソフトウェア、消耗品
- お客様のお手元で破損等が生じた場合

CFI （カスタム ファクトリー インテグレーション）仕様製品の保証について

マスターイメージ復旧サービス

デル製システムの保証期間内にHDD の交換が必要になった場合、新しいHDD にCFI で出荷時にインストールしたマスターイメージをインストールした上でお客様にお届けするサービスをご提供いたします。
（個別設定パラメータの復旧はおこないません。）

なお、このサービスはCFI ソフトウエアインテグレーションサービスをご利用いただいたお客様のみが対象になります。

パーツ交換サービス

CFI でお客様が指定されたデル標準製品外サードパーティー製ハードウエア製品に不良・不具合が発生した場合、CFI プロジェクト契約時にお客様とデルとであらかじめ設定した数量内で、パーツ交換サービスを行います。

- デルが作成した、またはお客様が供給された資産管理タグ、および資産管理レポートの再発行は致しません。
- 保証期間・サービス形態はお買い上げ頂いたデル標準製品の保証期間・サービス形態と同一となります。

- CFI でお客様が指定されたデル標準製品外のサードパーティー製ソフトウェア製品に関する保証は、それぞれの製品供給元の保証に準じ各メーカーでの保証となります。
- CFI でお客様が指定されたデル標準製品外のサードパーティー製ハードウェア製品に関するテクニカルサポートや修理などのサービスは行っておりませんが、デルよりパーツ交換サービスをご提供いたします。

保守サービスの対象について

本サービスの対象となる製品は「デル製システムユニット」および「デル製システムユニットに接続されているデル製装置」に限られます。以下の種類別のサービスの条件をご参照ください。

- オンサイト修理サービスの対象となる製品は、デル製システムユニット、および付属品（部品送付サービス対象品を除く）
- 部品送付サービスの対象となる製品は、外部接続 CRT または液晶モニタ・外部接続キーボード、マウス、メインバッテリ、パワーコード、AC アダプタ、その他の部品です。

  また、保証適用外になる可能性やお客様の安全を守る為にも、お客様側での本体解体は一切行わないでください。デルでは、お客様側で本体解体が必要となる部品の送付は行っておりませんのでご了承ください。
- 供給メーカーによるサービス対象となる製品は、UPS、「ソフトウェア&周辺機器」 製品

保守サービス対象外の障害について、あらかじめ以下の事項をご了承ください。

上述にかかわらず、発生した障害が以下のいずれかに該当する場合は保守サービスの対象外とさせていただきます。

- デル製システムユニットに組み込まれたデル製品以外の装置に起因してデル製品に生じた障害、および損傷
- デル製品に添付されている取扱説明書に記載された使用方法、および注意事項を逸脱した取り扱いにより発生した故障、または損傷に起因するデル製品の不良

- 改造、またはご使用上の責任に帰して生じた故障や損傷に起因するデル製品の不良
- デルに認定されていない方が作業をした事により発生した故障または損傷に起因するデル製品の不良
- 直接的または間接的に天災、戦争、暴動、内乱、その他不可抗力を原因とする故障、または損傷に起因するデル製品の不良
- 納品後、輸送や振動、落下、衝撃などを原因とする故障、または損傷に起因するデル製品の不良
- 使用環境を原因とする故障、または損傷に起因するデル製品の不良

  コンピュータ製品は電磁気、温度、振動、有毒ガス、塵埃などにより正常に作動しなくなる場合もございますので、適切な使用環境を整備していただくようにお願いいたします。
- 記憶装置に記録されたプログラムおよびデータの損害

  デルの修理サービスの履行によって記憶媒体内のデータが万一、消去または変更された場合でもデルは一切の責任を負いかねますのでご了承ください。修理に際しましては、お客様ご自身により事前にデータバックアップが実施されているものといたします。

修理サービスまたは部品送付サービスにより交換された部品の故障が原因となった障害については、修理または部品送付後 3 ヶ月間は無償修理サービスの対象となります。

保証規定について

保証機器の確認

デル製品に保証書は添付されておりません。お客様にお買い上げいただいた製品は出荷時点からサービスタグナンバー / エクスプレスサービスコードをデルのデータベースに登録させていただいており、これに基づいてお客様の製品は保証されています。サービスタグナンバー / エクスプレスサービスコードが不明な場合には、サービスを致しかねる事がありますのであらかじめご了承ください。（サービスタグナンバー / エクスプレスサービスコードについては 120 ページをご参照ください。）

追加購入品の扱い

保証期間の途中で付属品として追加購入されたデル製品、および部品の保証期間につきましては、本体の保証期間に準じるものと致します。ただし、追加購入されたデル製品にサービスタグナンバー / エクスプレスサービスコードがある場合は、その製品の保証期間が優先されます。

トラブルシュート

デルテクニカルサポートスタッフがお電話でお客様より障害の状況を伺い、原因特定後にエンジニアを派遣します。

技術・作業料金

デル製品に万一障害が発生した場合は、納品書または請求書に記載されております製品保証内容に基づいて修理サービスを提供させていただきます。保証期間が切れている場合は、修理にかかる技術・作業に関し実費をご負担いただきます。

部品保証

デル製品を構成している各部品に万一障害が発生した場合は、納品書または請求書に記載されております製品保証内容に基づき補修部品をご提供致します。ただし、メインバッテリ等の消耗品の保証期間は 1 年間を限度とさせていただきます。修理サービスにより交換された補修部品の保証期間は修理サービス実施より 3 ヶ月間とさせていただきます。

※ UPS 、「ソフトウェア&周辺機器」については、それぞれの製品供給元の保証に準じ上記の範疇外となります。

交換部品の所有権

修理サービスの履行に伴って交換されたすべての部品の所有権は、デルに帰属するものと致します。有償修理時の交換部品もデルに帰属するものと致します。お客様事由により、交換部品がデルに返却されない場合、その部品代金を実費でお客様にご負担いただきます。

責任限度額

万一、お客様が購入されたデル製品（ハードウェア）の故障またはデルがご提供した保守サービス（オンサイト修理）により、お客様に損害が生じた場合には、その損害がデルの故意または過失によるものである場合に限り、お客様が当該デル製品の購入に際してお支払いになった金額を上限として、デルはお客様に対して、損害賠償責任を負うものとさせていただきます。ただし、いかなる場合にも、当該デル製品の故障またはデルが提供させていただいた前記保守サービスにより、お客様に生じた損害のうち、直接間接に発生する可能性のある逸失利益、第三者からお客様に対してなされた賠償責任に基づく損害、オペレーティングシステム、データその他一切のソフトウェアの破損または消滅および間接損害については、デルは責任を負わないものと致します。

誤品、欠品、破損について

万一、お客様が購入されたデル製品に、誤品、欠品、破損が発生した場合、その製品が使用できないことによって、お客様に生じた損害のうち逸失利益、営業損害、その他の派生的損害、特別損害、間接的な損害に対する責任、または第三者からお客様に対してなされた賠償責任に基づく損害について、デルは責任を一切負わないものと致します。

ソフトウェアの保証について

デル製品にインストールされている各社のソフトウェアは、供給元の保証に準じ各メーカーでの保証となります。万一ソフトウェアの不具合によってお客様に逸失利益、営業損害、その他あらゆる損害が生じた場合、デルは一切責任を負わないものと致します。

製品のご解約、ご返品について

エンド・ユーザーとしてのお客様がデルから直接購入する契約製品は、デルの製品返却制度に従い、納品日から1０日以内であればデルに返却することができます。購入代金は払い戻されます。但し、「ソフトウエア＆周辺機器」製品に関しては、別途の返品制度が適用されます。
133 ページの『「ソフトウェア＆周辺機器」取扱製品の保証について』をご覧下さい。なお、お客様のご都合による返品の場合は、返品時の送料およびご入金時のお振込み手数料はお客様ご負担とさせていただきます。

サービスのご解約について

原則としてサービス契約の解約は致しかねます。但し、製品本体と同時にサービス契約をお申込みの場合で製品を返品（納入日から 10 日以内）された場合にはサービス契約分の解約が可能です。

譲渡の制限

お客様はサービスおよびサポートを受ける権利を第三者に譲渡しないものとします。製品の転売、贈与等の場合で表記のお客様と所有者が異なる場合、保守サービスの対象外となる場合がございます。ただし、デルが別途同意する場合はこの限りではありません。

本保守サービスの対象・保証規定は予告なく変更される場合があります。最新の内容はデルサポートサイトをご参照ください。

サポートサイト（保守サービスおよび電話テクニカルサポートについて）

http://support.jp.dell.com/jp/jp/spm/

保守サービスおよび電話テクニカルサポート条件（約款）のページをご覧ください。

Dell™ Latitude™ D600

시스템 정보 설명서

주, 주의사항 및 주의

주: 주는 컴퓨터를 보다 효율적으로 사용할 수 있는 중요 정보를 제공합니다.

주의사항: 주의사항은 하드웨어의 손상 또는 데이타 유실 위험을 설명하며, 이러한 문제를 방지할 수 있는 방법을 알려줍니다.

주의: 주의는 위험한 상황, 심각한 부상 또는 사망할 우려가 있음을 알려줍니다.

약어 및 머리글자

약어 및 머리글자의 모든 목록은 ≪사용 설명서≫를 참조하십시오 (운영 체제에 따라 바탕 화면의 **사용 설명서**를 더블 클릭하거나 **시작** 단추를 클릭하고 **도움말 및 지원 센터**를 클릭한 다음 **사용 및 시스템 설명서**를 클릭하십시오).

Dell™ n Series 컴퓨터를 구입한 경우, 본 설명서에 설명된 Microsoft® Windows® 운영 체제와 관련된 사항들은 적용되지 않습니다.

본 설명서에 수록된 정보는 사전 통보 없이 변경될 수 있습니다.
© 2003 Dell Computer Corporation. 저작권 본사 소유.

Dell Computer Corporation의 서면 승인 없이 어떠한 방법으로도 무단 복제하는 것을 엄격히 금합니다.

본 설명서에 사용된 상표: Dell, DELL 로고, Inspiron, Dell Precision, Dimension, OptiPlex 및 Latitude는 Dell Computer Corporation의 상표입니다. Intel, Pentium, 및 Celeron은 Intel Corporation의 등록 상표입니다. Microsoft 및 Windows는 Microsoft Corporation의 등록 상표입니다. EMC는 EMC Corporation의 등록 상표입니다.

본 설명서에서 특정 회사의 표시나 제품 이름을 지칭하기 위해 기타 상표나 상호를 사용할 수도 있습니다. Dell Computer Corporation은 자사가 소유하고 있는 것 이외의 다른 모든 등록 상표 및 상표명에 대한 어떠한 소유권도 없음을 알려 드립니다.

2003년 1월 P/N 1N788 Rev. A00

차례

주의: 안전 지침 143

일반 143

전원 144

전지 145

항공 여행시 146

EMC 규정 146

컴퓨터 사용시 147

인체 공학적 컴퓨터 사용 습관 148

컴퓨터 내부 작업시 148

정전기 방전 방지 149

전지 폐기 149

컴퓨터 정보 찾기 150

컴퓨터 설치 151

컴퓨터 정보 152

컴퓨터 전면 154

컴퓨터 좌측 155

컴퓨터 우측 156

컴퓨터 후면 157

컴퓨터 밑면 158

전지 분리 159

예비 전지 분리 및 설치 160

전지 설치 162

Dell 진단 프로그램 실행 162

규정사항 165

⚠ 주의: 안전 지침

시스템이 손상되지 않도록 보호하고 사용자의 안전을 위해 다음 안전 지침을 따르십시오.

일반

- 숙련된 서비스 기술자만 컴퓨터를 수리해야 하며 사용자 임의대로 컴퓨터를 다루지 마십시오. 반드시 설치 지침을 따르십시오.
- AC 어댑터와 함께 연장 전원 케이블을 사용하는 경우, 연장 전원 케이블에 연결된 제품의 전체 암페어 등급이 연장 케이블의 암페어 등급을 초과하지 않는지 점검하십시오.
- 컴퓨터에 있는 구멍이나 환기구에 이물질을 넣지 마십시오. 이물질를 넣으면 내부 구성요소가 단락되어 화재나 감전 사고가 발생할 수 있습니다.
- 컴퓨터를 작동시킨 상태에서 운반 케이스 또는 밀폐된 가방에 넣어 보관하지 마십시오. 공기를 차단할 경우 컴퓨터가 손상되거나 화재가 발생할 수 있습니다.
- 컴퓨터를 직사광선이나 열에서 멀리 떨어진 곳에 보관하십시오. 시스템의 냉각 구멍을 막지 마십시오. 컴퓨터 밑에 종이를 놓아두지 말고 컴퓨터를 사방이 막혀 있는 곳이나 침대, 소파, 카페트 위에 놓지 마십시오.
- 컴퓨터를 사용하거나 전지를 교체할 때에는 책상 위나 바닥과 같이 환기가 잘 되는 곳에 AC 어댑터를 두십시오. AC 어댑터를 종이 또는 바람이 잘 통하지 않는 물질로 덮어두지 마십시오. 운반 케이스 안에 AC 어댑터를 넣고 사용하지 마십시오.
- AC 어댑터는 정상적인 컴퓨터 작동 시 매우 뜨거워질 수 있습니다. 작동하는 동안이나 작동이 끝난 직후 어댑터를 만질 경우, 주의하십시오.
- 휴대용 컴퓨터를 장시간 동안 맨살 위에 직접 대고 사용하지 마십시오. 정상으로 작동하는 동안에도 컴퓨터 받침대의 표면 온도가 상승할 수 있습니다(특히 AC 전원을 사용하는 경우). 맨살에 놓고 계속 사용하면 불편함을 느끼게 되고 심하면 화상을 입을 수도 있습니다.
- 욕실, 싱크대, 수영장, 지하실과 같이 습기가 많은 곳에서는 컴퓨터를 사용하지 마십시오.
- 컴퓨터에 내장형 또는 모뎀 옵션(PC 카드)이 설치되어 있는 경우, 모뎀 케이블을 분리하여 뇌우 발생시 전화선을 통해 입을 수 있는 번개로 인한 전기 충격을 방지하십시오.

⚠ 주의: 안전 지침 (계속)

- 뇌우시 전기 충격을 받지 않으려면 케이블을 연결하고 분리하거나, 제품 유지보수 및 재구성 작업을 하지 마십시오. 뇌우시 컴퓨터의 모든 케이블이 분리되어 있고 전지 전력으로 작동하는 경우에만 컴퓨터를 사용하십시오.
- 컴퓨터에 모뎀이 설치되어 있는 경우, 모뎀에 사용된 케이블은 최소 크기의 26AWG (American Wire Gauge) 전선 및 FCC 준수 RJ-11 모듈식 플러그로 제작된 것이어야 합니다.
- 컴퓨터 밑면의 메모리 모듈/미니 PCI 카드/모뎀 덮개를 열기 전에 모든 케이블을 해당 전원 콘센트에서 분리하고 전화 케이블을 분리하십시오.
- 컴퓨터에 모뎀 RJ-11 커넥터와 네트워크 RJ-45 커넥터가 있는 경우, 전화 케이블은 RJ-45 커넥터가 아닌 RJ-11 커넥터에 끼우십시오.
- PC 카드는 정상적으로 작동하는 동안에도 과열될 수 있습니다. PC 카드를 장시간 사용한 후 분리할 때 조심하십시오.
- 컴퓨터를 청소하기 전에 전원 콘센트에서 컴퓨터를 분리하십시오. 물기있는 부드러운 천을 사용하여 컴퓨터를 청소하십시오. 인화성 물질이 포함된 액체 세제나 에어졸 클리너를 사용하지 마십시오.

전원

- 이 컴퓨터에 사용하도록 Dell에서 승인하여 제공된 AC 어댑터만 사용하십시오. 다른 AC 어댑터를 사용하면 화재 또는 폭발의 위험이 있습니다.
- 컴퓨터를 전원 콘센트에 연결하기 전에 AC 어댑터 전압 등급을 조사하여 사용 전원에 맞는 전압 및 주파수인지 확인하십시오.
- 컴퓨터의 전원을 모두 분리하려면, 컴퓨터의 전원을 끄고 전지 팩을 분리한 다음 전원 콘센트에서 AC 어댑터를 분리하십시오.
- 전기 충격을 방지하려면 올바르게 접지된 전원에 AC 어댑터와 장치 전원 케이블을 연결하십시오. 이 전원 케이블에는 접지할 수 있는 3구 플러그가 달려있습니다. 어댑터 플러그를 사용하지 마십시오. 또는 전원 케이블 플러그에서 접지 끝부분을 제거하지 마십시오. 전원 연장 케이블을 사용하는 경우에는 해당 AC 어댑터 전원 케이블에 맞는 2구 또는 3구 플러그를 사용하십시오.
- AC 어댑터 전원 케이블 위에 아무 것도 놓지 말고, 밟거나 겹칠 수 있는 곳에 케이블을 두지 마십시오.

- 여러 개의 전원을 꽂을 수 있는 파워 스트립을 사용하는 경우, 파워 스트립에 AC 어댑터 전원 케이블 연결시 주의하십시오. 일부 파워 스트립은 해당 위치가 아닌 곳이라도 끼워 넣을 수 있습니다. 전원 플러그를 잘못 끼우면 전기 충격이나 화재 위험 뿐만 아니라 컴퓨터에 영구적인 손상을 입힐 수 있습니다. 전원 플러그의 접지구와 파워 스트립의 접지면이 제대로 끼워졌는지 확인하십시오.

전지

- 이 컴퓨터와 함께 사용하도록 승인된 Dell™ 전지 모듈만 사용하십시오. 다른 종류를 사용하면 화재 발생 또는 폭발의 위험이 높아집니다.
- 전지를 단락시킬 수 있는 금속 물체(예: 자동차 키, 클립)와 함께 주머니, 지갑 또는 기타 상자 등에 휴대하지 마십시오. 과도한 전류가 흐르게 되면 온도가 급격히 상승하여 전지가 손상되거나 화재 또는 화상을 입을 위험이 있습니다.
- 전지를 잘못 다룰 경우, 타버릴 위험이 있습니다. 전지를 분해하지 마십시오. 손상되거나 전해질이 새어 나오는 전지는 매우 조심해서 다루어야 합니다. 전지가 손상되면 전해질이 유출되어 상처를 입을 수도 있습니다.
- 아이들의 손이 닿지 않는 곳에 전지를 보관하십시오.
- 컴퓨터 또는 전지 팩을 난방기구, 벽난로, 난로, 전열기 등 기타 열을 발산하는 장치 근처나 60ºC (140ºF)가 넘는 곳에 두지 마십시오. 과도한 열로 인해 전지의 온도가 올라가면 화재 위험을 유발하여 폭발하거나 구멍이 날 수 있습니다.
- 컴퓨터의 전지를 일반 가정 쓰레기와 함께 버리거나 불속에 넣지 마십시오. 전지가 파열될 수 있습니다. 다 쓴 전지는 제조업체에서 지시한 대로 폐기하거나 지역 쓰레기 처리반에 문의하여 폐기 지침을 따르십시오. 다 쓴 전지나 파손된 전지는 즉시 폐기 처분하십시오.

⚠ 주의: 안전 지침 (계속)

항공 여행시

- 항공기에 탑승한 경우 일부 연방 항공 관리국 규정 및 항공사에서 지정한 제한에 따라 Dell 컴퓨터를 작동할 수 없는 경우가 있습니다. 예를 들면, 항공기 운행 도중 무선 주파수 또는 기타 전자기 신호를 전송하는 기능이 있는 개인 PED (Personal Electronic Device)의 사용을 금지하는 규정/제약이 있습니다.
  - Dell 휴대용 컴퓨터에 Dell TrueMobile™ 또는 일부 기타 무선 통신 장치가 내장되어 있는 경우, 이러한 제한사항을 잘 준수할 수 있도록 항공기에 탑승하기 전에 Fn F2 를 눌러 장치를 끄고 항공사에서 지정한 지침에 따르시기 바랍니다.
  - 특히, 휴대용 컴퓨터와 같은 PED는 항공기 이착륙과 같은 중요한 비행 상황에서 사용이 금지됩니다. 앞으로 일부 항공사에서는 3,050m (10,000ft) 고도 이하에서 비행할 경우, 이를 중요한 비행 상황으로 정할 것입니다. PED를 사용하도록 허용되었을 때에는 항공사에서 지정한 지침을 따르십시오.

EMC 규정

해당 국가에 적용되는 해당 EMC 등급을 준수하기 위해 피복된 신호 케이블을 사용하십시오. 병렬 프린터의 경우 Dell에서 공급하는 케이블을 사용하십시오. 필요한 경우 Dell 월드 와이드 웹 사이트 **www.dell.com**에서 케이블을 주문할 수 있습니다.

정전기는 컴퓨터 내부의 전자 부품에 손상을 줄 수 있습니다. 정전기로 인한 손상을 방지하려면, 메모리 모듈과 같은 시스템의 전자 부품을 만지기 전에 사용자의 몸에 있는 정전기를 없애야 합니다. 컴퓨터 I/O 패널의 도색되어 있지 않은 금속 표면을 만지면 정전기를 없앨 수 있습니다.

컴퓨터 사용시

컴퓨터의 손상을 방지하려면 다음 안전 지침을 따르십시오:

- 작업을 위해 컴퓨터를 설치하는 경우 평평한 장소에 설치하십시오.
- 컴퓨터를 운반할 때에는 수하물로 신고하지 마십시오. X-레이 보안 장치에는 컴퓨터를 통과시켜도 되지만, 금속 탐지기에는 절대 통과시키면 안됩니다. 컴퓨터를 직접 검사할 경우, 컴퓨터 작동을 요청받을 수 있으므로 전지가 충전되어 있는지 확인하십시오.
- 하드 디스크를 컴퓨터에서 분리하여 이동하는 경우, 전기가 통하지 않는 물질(옷 또는 종이)로 드라이브를 포장하십시오. 컴퓨터를 직접 검사할 경우, 컴퓨터에 드라이브를 설치할 수 있도록 준비하십시오. X 레이 보안 장치에는 하드 드라이브를 통과시켜도 되지만 금속 탐지기에는 절대 통과시키면 안됩니다.
- 컴퓨터를 이동할 때에는 미끄러져 떨어질 수 있는 높은 곳에 컴퓨터를 두지 마십시오. 컴퓨터를 떨어뜨리지 말고 컴퓨터에 기계적 충격이 가해지지 않도록 조심하십시오.
- 컴퓨터, 전지, 하드 드라이브를 먼지, 음식물, 액체, 급격한 기온 변화, 직사 광선과 같은 유해 환경으로부터 보호하십시오.
- 온도 및 습도 차이가 큰 환경에 컴퓨터를 두면, 컴퓨터 표면이나 내부에 응축 현상으로 수분이 생길 수 있습니다. 컴퓨터가 손상되지 않도록 충분히 수분을 증발시킨 다음 사용하십시오.

주의사항: 컴퓨터를 낮은 온도에서 높은 온도, 또는 높은 온도에서 낮은 온도로 이동할 경우, 컴퓨터가 이동한 장소의 온도에 적응될 때까지 기다렸다가 사용하십시오.

- 케이블을 분리할 때는 케이블을 직접 잡아 당기지 말고 커넥터나 당김 안전 끈을 잡고 분리하십시오. 커넥터를 뽑을 때에는 커넥터 핀이 구부러지지 않도록 평평하게 하십시오. 또한, 케이블을 연결하기 전에 두 커넥터의 방향이 제대로 일치하는지 확인하십시오.
- 구성요소는 조심해서 다루십시오. 메모리 모듈과 같은 구성요소는 핀을 잡지 말고 가장자리를 잡으십시오.
- 메모리 모듈을 시스템 보드에서 분리하거나 장치를 컴퓨터에서 분리하려는 경우, 컴퓨터의 전원을 끄고 AC 어댑터 케이블을 분리한 다음 시스템 보드의 손상을 방지하기 위해 5초 정도 기다리십시오.

컴퓨터 사용시 (계속)

- 디스플레이는 부드럽고 깨끗한 천에 물을 묻혀 닦으십시오. 천에 물을 적신 다음 디스플레이를 한 방향으로 위에서 아래로 닦으십시오. 디스플레이에 묻은 물기를 재빨리 없애고 건조시키십시오. 디스플레이를 장시간 동안 습한 곳에 두면 손상될 수 있습니다. 시중에서 판매되는 유리 세정제를 사용하여 디스플레이를 닦지 마십시오.
- 컴퓨터에 습기가 차거나 손상된 경우, ≪사용 설명서≫의 「문제 해결」절차를 수행하십시오. 이 과정을 수행한 후에도 컴퓨터가 제대로 작동되지 않을 경우에는 Dell에 문의하십시오(해당 연락처 정보는 ≪사용 설명서≫의 「도움말 얻기」참조).

인체 공학적 컴퓨터 사용 습관

⚠ **주의: 키보드를 올바르지 않은 자세로 장시간 사용하면 인체에 해로울 수 있습니다.**

⚠ **주의: 디스플레이 또는 외장형 모니터 화면을 장시간 보면 눈이 피로해질 수 있습니다.**

시스템을 설치하고 사용할 때 온라인 ≪사용 설명서≫ 부록에서 인체 공학적 지침을 준수하면 매우 편안하고 효율적으로 사용할 수 있습니다:

이 휴대용 컴퓨터는 사무실용 장비로 계속 사용하도록 고안되지는 않았습니다. 사무실에서 장기적으로 사용하려면 외장형 키보드를 장착할 것을 권장합니다.

컴퓨터 내부 작업시

메모리 모듈, 미니 PCI 카드 또는 모뎀을 분리하거나 설치하기 전에 다음 단계를 차례대로 수행하십시오.

주의사항: 메모리 모듈, 미니 PCI 카드 또는 모뎀을 설치하는 경우에만 컴퓨터 내부에 액세스하십시오.

주의사항: 시스템 보드가 손상되지 않도록 방지하기 위해 메모리 모듈, 미니 PCI 또는 모뎀을 분리하거나 장치를 분리하기 전에 컴퓨터를 끄고 5초 정도 기다리십시오.

1. 컴퓨터를 종료한 다음 연결되어 있는 장치의 전원을 모두 끄십시오.
2. 부상의 위험이나 전기 충격을 가급적 줄이기 위해 전원 콘센트에서 컴퓨터와 장치를 분리하십시오. 전화선과 통신선도 컴퓨터에서 분리하십시오.
3. 전지 베이에서 기본 전지를 분리하고 필요하면 모듈 베이에서 보조 전지도 분리하십시오.
4. 컴퓨터 후면 I/O 패널의 도색되지 않은 금속 표면을 만지면 정전기가 제거됩니다.

   컴퓨터 작업시에도 주기적으로 도색되어 있지 않은 금속 표면을 만지면 내부 구성 요소에 손상을 줄 수 있는 정전기가 제거됩니다.

컴퓨터 사용시 (계속)

정전기 방전 방지

정전기는 컴퓨터 내부의 전자 부품에 손상을 줄 수 있습니다. 정전기로 인한 손상을 방지하려면, 메모리 모듈과 같은 시스템의 전자 부품을 만지기 전에 사용자의 몸에 있는 정전기를 없애야 합니다. 컴퓨터 I/O 패널의 도색되어 있지 않은 금속 표면을 만지면 정전기가 제거됩니다.

컴퓨터 내부 작업시에도 주기적으로 I/O 커넥터를 만져 몸에 축적된 정전기를 없애십시오.

다음 단계를 수행하여 ESD (ElectroStatic Discharge)로 인한 손상을 방지하십시오:

- 정전기에 민감한 구성요소의 포장을 푸는 경우, 설치 준비가 되기 전까지는 해당 구성요소의 정전기 방지 포장을 풀지 마십시오. 정전기 방지 포장을 벗기기 전에 사용자 몸에 있는 정전기를 없애십시오.
- 손상되기 쉬운 구성요소를 운송하는 경우, 정전기 방지 상자나 포장재로 포장하십시오.
- 모든 구성요소는 정전기가 발생하지 않는 장소에서 다루십시오. 가능하면 정전기 방지용 바닥 깔개나 작업대 깔개를 사용하십시오.



전지 폐기

컴퓨터에는 리튬 이온 전지를 사용합니다. 컴퓨터에서 리튬 이온 전지 교체 지침은 본 설명서 뒷부분에 나오는 「전지 분리」와 온라인 ≪사용 설명서≫의 「전지 사용」을 참조하십시오.

전지를 일반 가정용 쓰레기와 함께 처리하지 마십시오. 해당 지역의 폐기물 처리 기관에 문의하여 가까운 전지 폐기 처리소에 폐기하십시오.

컴퓨터 정보 찾기

<table>
<tr><th>찾는 정보</th><th>찾을 위치</th></tr>
<tr><td>

• 내 컴퓨터 진단 프로그램
• 내 컴퓨터 드라이버
• 내 컴퓨터 설명서
• 내 장치 설명서

</td><td>

드라이버 및 유틸리티 CD (ResourceCD라고도 함)

Dell에서 구입한 컴퓨터에는 이미 설명서와 드라이버가 설치되어 있습니다. CD를 사용하여 드라이버 재설치, Dell 진단 프로그램 실행 또는 설명서에 액세스할 수 있습니다.

CD에 포함된 Readme 파일은 컴퓨터의 기술 변경사항과 관련된 최신 정보가 수록되어 있으며, 숙련가와 전문가를 대상으로 한 고급 기술 참조 자료입니다.

</td></tr>
<tr><td>

• 특급 서비스 코드 및 서비스 태그 순서
• Microsoft® Windows® 라이센스 레이블

</td><td>

특급 서비스 코드 및 제품 키



이 레이블은 컴퓨터에 있습니다.

</td></tr>
<tr><td>

• 내 컴퓨터 최신 드라이버
• 기술 서비스 및 지원 물음에 대한 답변
• 다른 사용자와 기술 지원 온라인 토론
• 내 컴퓨터 설명서

</td><td>

Dell 지원 웹사이트

Dell 지원 웹사이트에는 다음과 같은 여러 온라인 서비스가 제공됩니다:

• Solutions — 참조 및 추가 정보, 기술 관련 기사 및 온라인 강좌
• Community Forum — 다른 Dell 고객과 온라인 토론
• Upgrades — 메모리, 하드 드라이브, 운영 체제와 같은 구성요소 정보 업그레이드
• Customer Care — 연락처 정보, 주문 상태, 보증, 수리 정보
• Downloads — 드라이버, 패치, 소프트웨어 업데이트
• Reference — 컴퓨터 설명서, 제품 사양, 백서

</td></tr>
</table>

찾는 정보	찾을 위치
• Windows XP 사용 방법 • 내 컴퓨터 설명서 • 장치 설명서(예를 들어, 모뎀)	**Windows 도움말 및 지원 센터** 1 **시작** 단추를 클릭한 다음 **도움말 및 지원**을 클릭하십시오. 2 문제를 설명해주는 단어나 문장을 입력한 다음, 화살표 아이콘을 클릭하십시오. 3 문제를 설명하는 항목을 클릭하십시오. 4 화면의 지시사항을 따르십시오.
• 내 운영 체제 재설치 방법	**운영 체제 CD** 운영 체제를 다시 설치하는 경우, 드라이버 및 유틸리티 CD를 사용하여 컴퓨터와 함께 제공된 장치에 맞는 드라이버를 다시 설치하십시오. 운영 체제를 위한 제품 키는 컴퓨터에 있습니다.

컴퓨터 설치

1 부속품 상자의 포장을 벗기십시오.

2 부속품 상자의 내용물을 준비하십시오. 컴퓨터 설치 과정에 필요할 수 있습니다.

부속품 상자에는 사용 설명서와 주문한 모든 소프트웨어 또는 추가 하드웨어(예를 들어, PC 카드, 드라이브, 전지)가 포함되어 있습니다.

3 AC 어댑터 커넥터와 전원 콘센트에 AC 어댑터를 연결하십시오.

주의사항: 컴퓨터를 처음 켤 때 컴퓨터를 종료하고 컴퓨터 메모리를 업그레이드하라는 메시지가 나타날 수 있습니다. 이러한 메시지가 나타나는 경우에는 Dell 지원 웹사이트(support.dell.com)의 사용 설명서에서 컴퓨터 메모리 업그레이드에 대한 지침을 참조하십시오.

4 컴퓨터 디스플레이를 열고 전원 단추를 눌러 컴퓨터를 켜십시오.

주: 컴퓨터를 한 번 이상 켜고 종료한 후에 컴퓨터를 도킹해야 합니다.

컴퓨터 정보

컴퓨터에 대한 자세한 내용은 온라인 ≪사용 설명서≫를 참조하십시오. 운영 체제에 따라 바탕 화면의 **사용 설명서** 아이콘을 더블 클릭하거나 **시작** 단추를 클릭하고 **도움말 및 지원 센터**를 클릭한 다음 **사용 및 시스템 설명서**를 클릭하십시오. 다음 항목은 컴퓨터에 관한 몇 가지의 일반 질문을 다룹니다.

- 모뎀 및 네트워크 어댑터: 컴퓨터에는 v.92 56K 모뎀과 10/100/1000 Ethernet LOM 네트워크 어댑터가 모두 포함되어 있을 수 있습니다. 커넥터 위치는 본 설명서 뒷부분의 「컴퓨터 우측」을 참조하십시오. 포트 및 커넥터에 대한 자세한 내용은 온라인 ≪사용 설명서≫에서 「컴퓨터 정보」를 참조하십시오.

- 전지 수명 및 사용: 다양한 전지를 컴퓨터에 사용할 수 있습니다. 컴퓨터에 기본으로 제공되는 4460-mAh 전지를 사용하면 완전히 충전된 단일 전지를 사용할 때 평균 작동 시간은 3~4시간 정도 입니다. 장시간 무선 작동과 같은 특정 유형의 작동을 수행할 경우 전지 수명이 현저하게 단축될 수 있습니다.
  - 전지 사용 방법 및 전원 절약에 대한 자세한 내용은 ≪사용 설명서≫에서 「전지 사용」및 「전원 관리」를 참조하십시오.
  - 옵션 보조 전지에 대한 내용은 ≪사용 설명서≫에서 「모듈 베이 사용」을 참조하십시오.
- 모듈 베이 장치: 모듈 베이 및 지원 장치에 대한 내용은 ≪사용 설명서≫에서 「모듈 베이 사용」을 참조하십시오.
- 도킹 장치: 본 컴퓨터는 Dell D/Dock 확장 스테이션 및 Dell D/Port 고급 포트 복제기를 지원합니다.
  - 도킹 장치 옵션에 대한 내용은 장치와 함께 제공된 설명서를 참조하십시오.
  - 본 컴퓨터와 도킹 장치를 사용할 경우 최적의 성능을 이용하는 방법은 ≪사용 설명서≫에서 「문제 해결」을 참조하십시오.

주: 일부 국가에서는 도킹 장치를 사용할 수 없습니다.

컴퓨터 전면

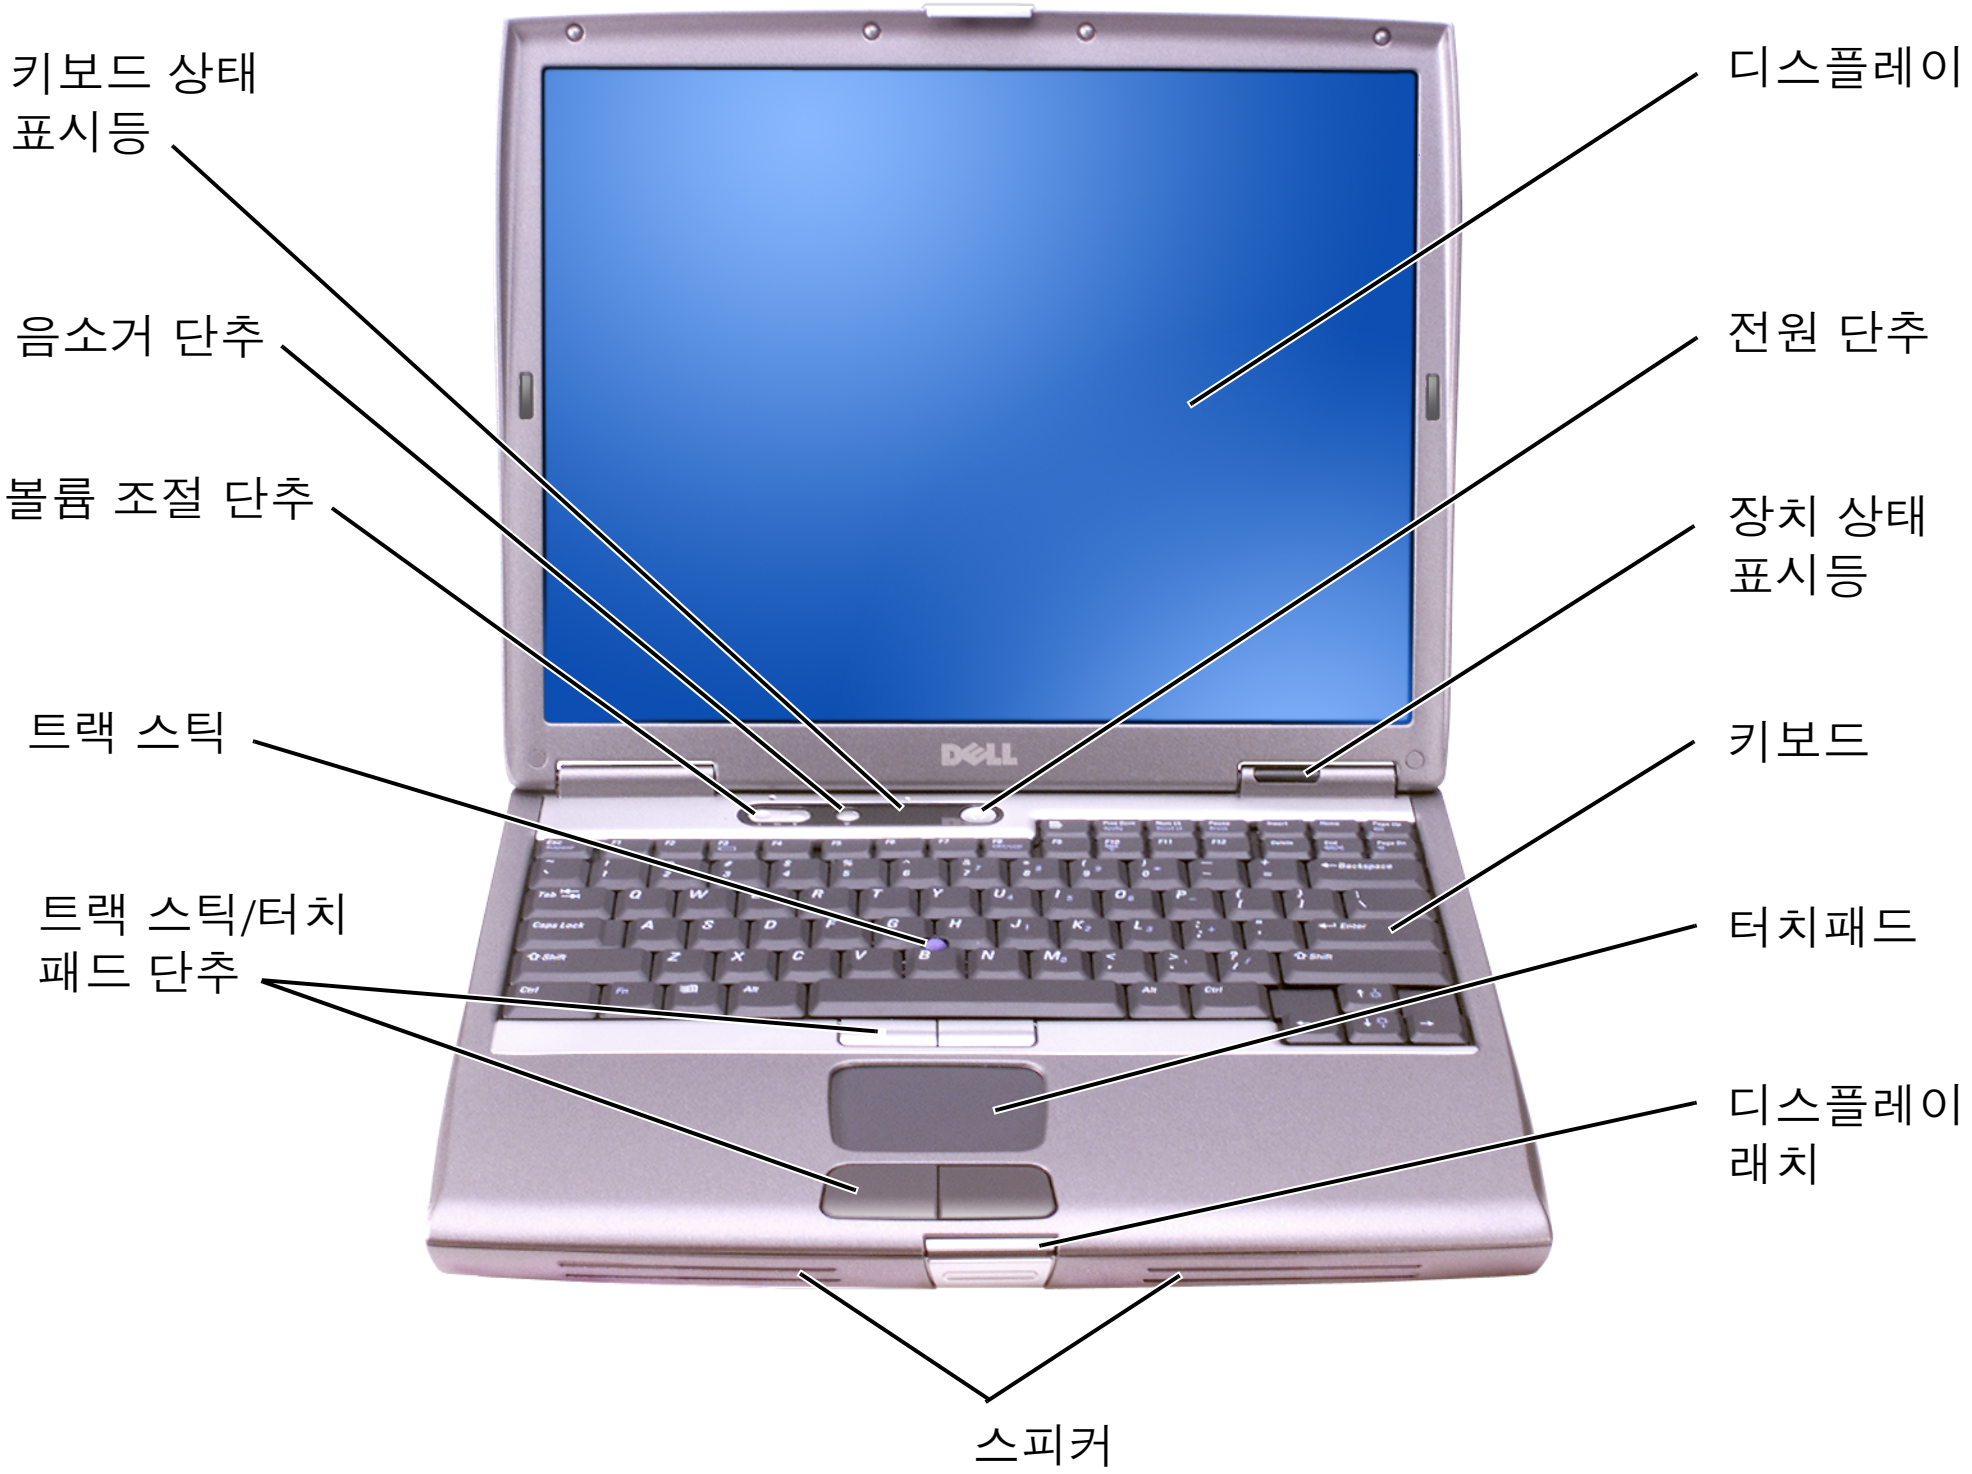
키보드 상태 표시등
음소거 단추
볼륨 조절 단추
트랙 스틱
트랙 스틱/터치 패드 단추
디스플레이
전원 단추
장치 상태 표시등
키보드
터치패드
디스플레이 래치
스피커

컴퓨터 좌측

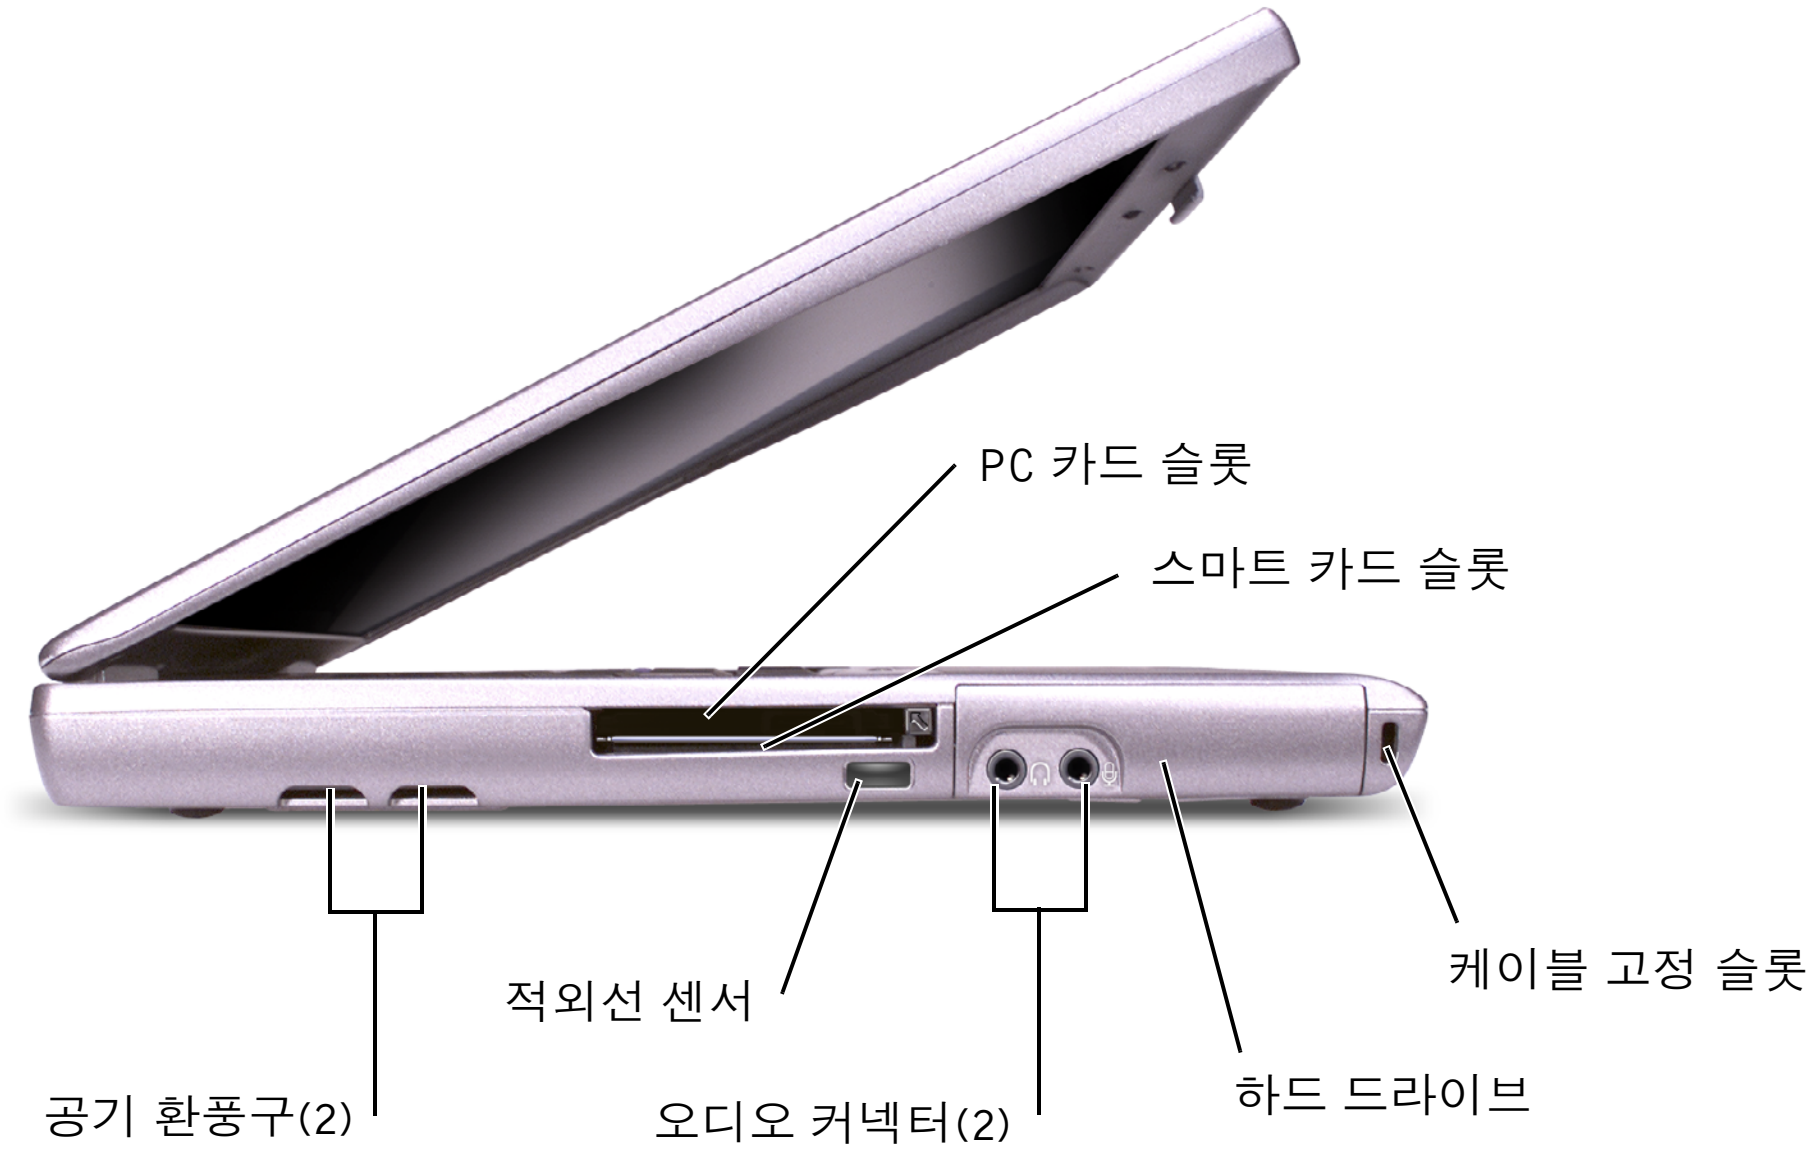

컴퓨터 우측

컴퓨터 후면

주의사항: 컴퓨터가 손상되지 않도록 방지하려면 컴퓨터를 끄고 5초 정도 기다렸다가 외장형 장치를 분리하십시오.

주의: 공기 환기구를 막거나 물체를 넣지 말고 먼지가 들어가지 않도록 조심하십시오. 컴퓨터를 작동시킨 상태에서 가방에 넣어 두면 공기가 차단 되므로컴퓨터가 손상되거나 화재가 발생할 수 있습니다.

컴퓨터 밑면

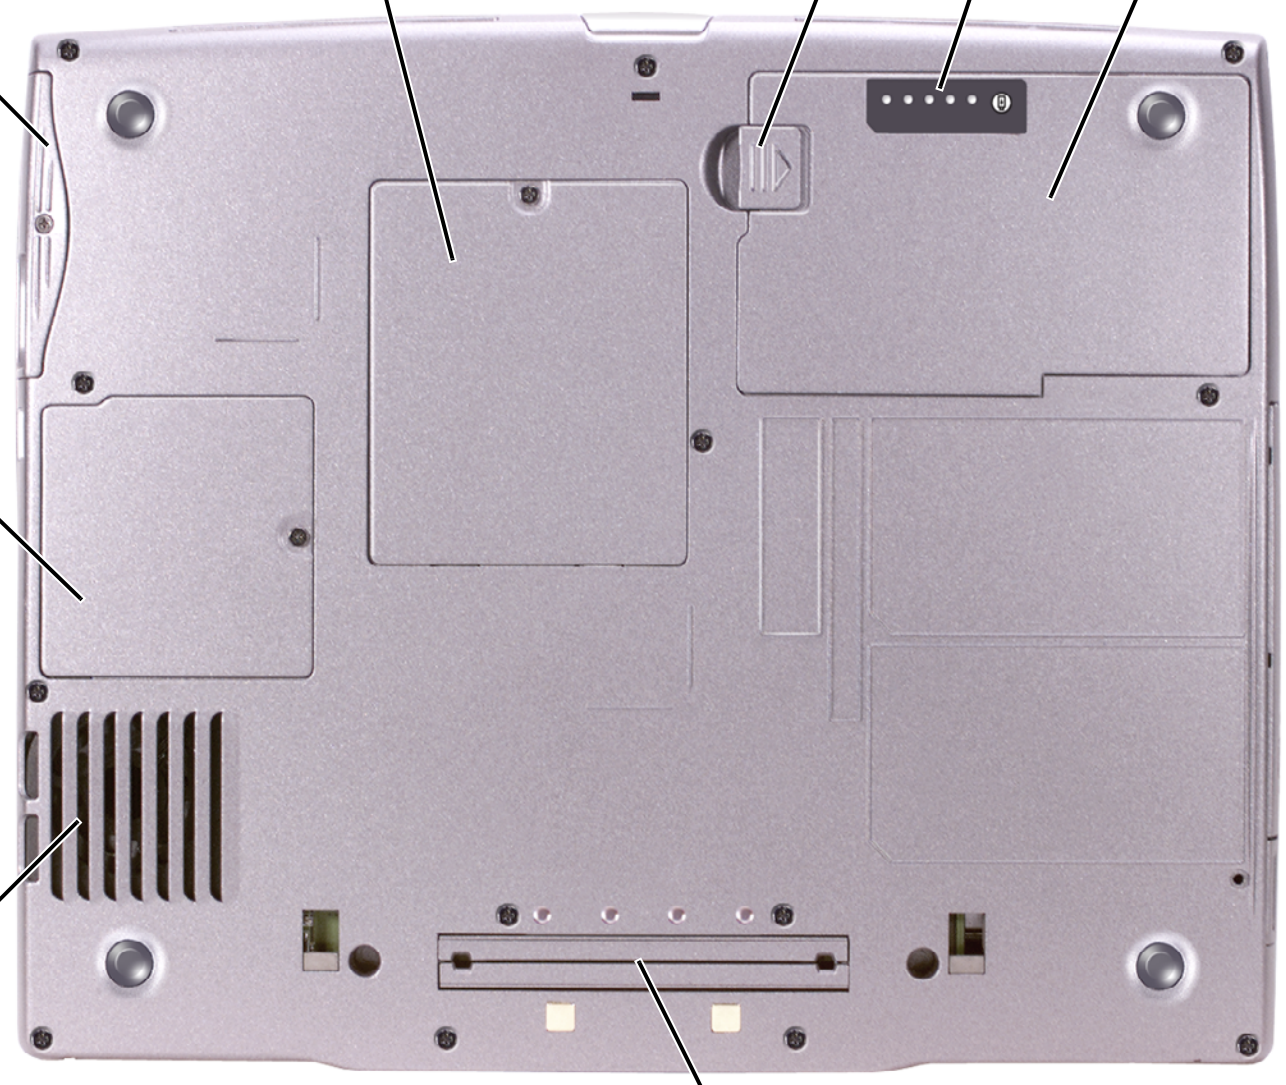

전지 분리

보조 전지 분리에 대한 자세한 내용은 온라인 ≪사용 설명서≫에서 「모듈 베이 사용」을 참조하십시오.

주의: 이 절차를 수행하기 전에 컴퓨터의 전원을 끄고 전원 콘센트에서 분리한 다음 전화 벽 잭에서 모뎀을 분리하십시오.

주의사항: 대기 모드일 때 컴퓨터에 설치된 전지를 교체하도록 선택한 경우, 컴퓨터를 종료하기 전에 90초 이내에 전지를 교체하지 않으면 저장되지 않은 데이타가 모두 유실됩니다.

1 컴퓨터의 전원이 꺼져 있고 전원 콘센트와 전화 벽 잭에서 분리되어 있는지 확인하십시오.

2 컴퓨터가 도킹 장치에 연결(도킹)되어 있으면 도킹을 해제하십시오. 자세한 내용은 도킹 장치와 함께 제공된 설명서를 참조하십시오.

3 컴퓨터 밑면에 있는 전지 베이 분리 래치를 민 다음 베이에서 전지를 꺼내십시오.

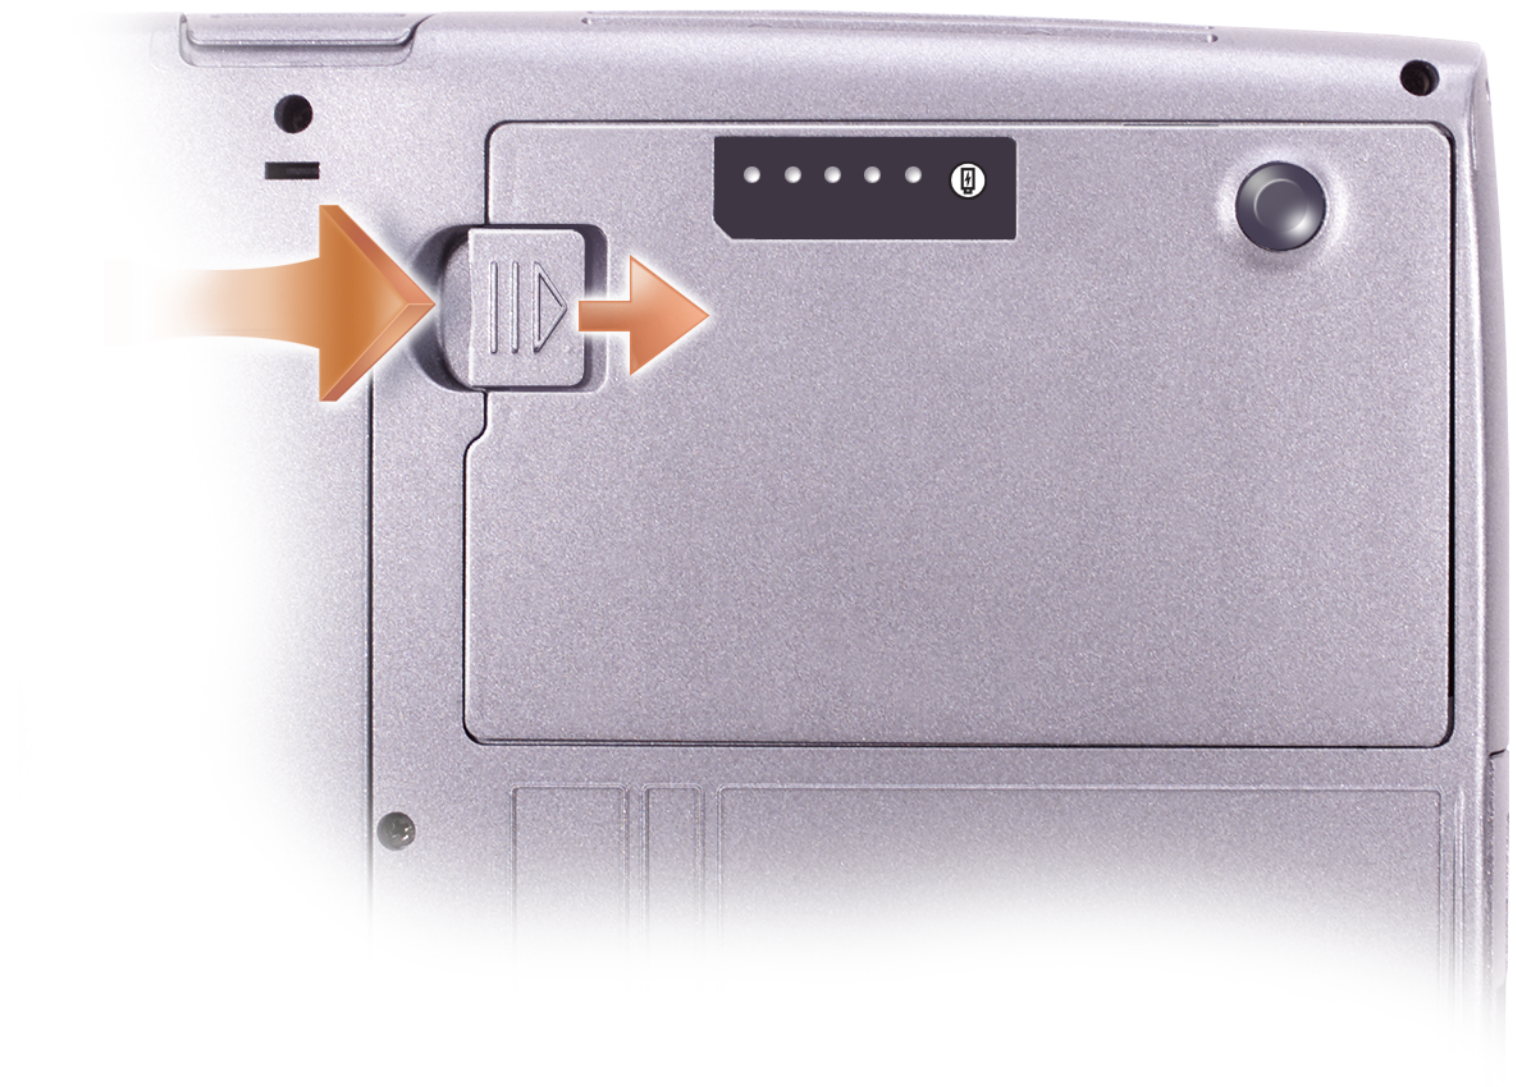

예비 전지 분리 및 설치

1 전지를 꺼내십시오.

2 예비 전지 덮개를 분리하십시오.

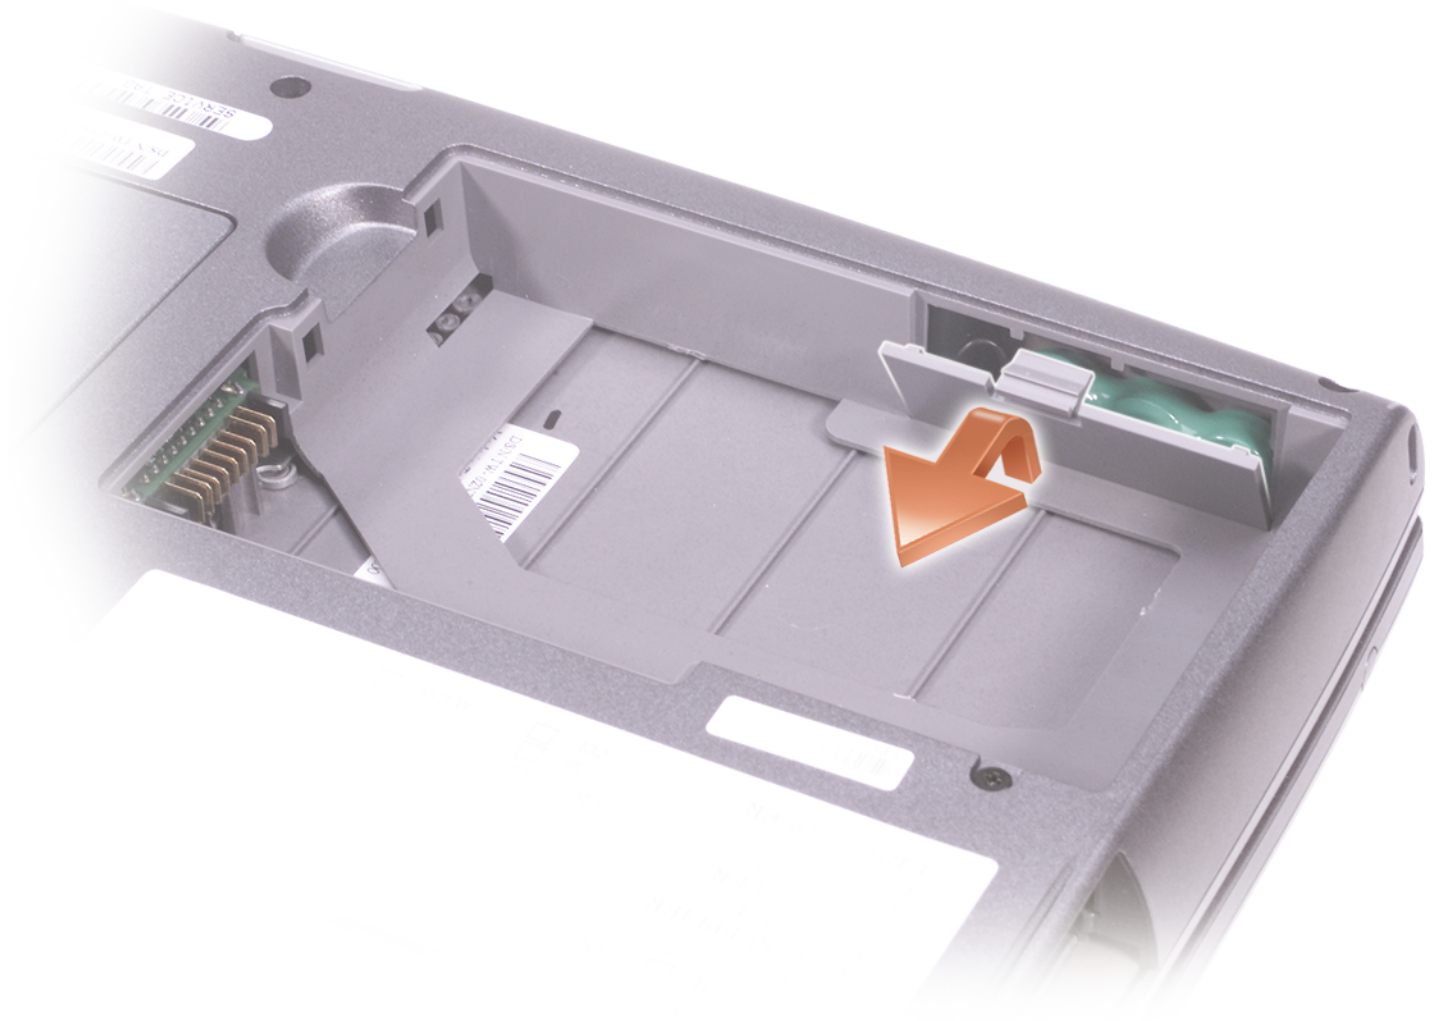

3 예비 전지를 꺼내고 커넥터에서 케이블을 분리하십시오.

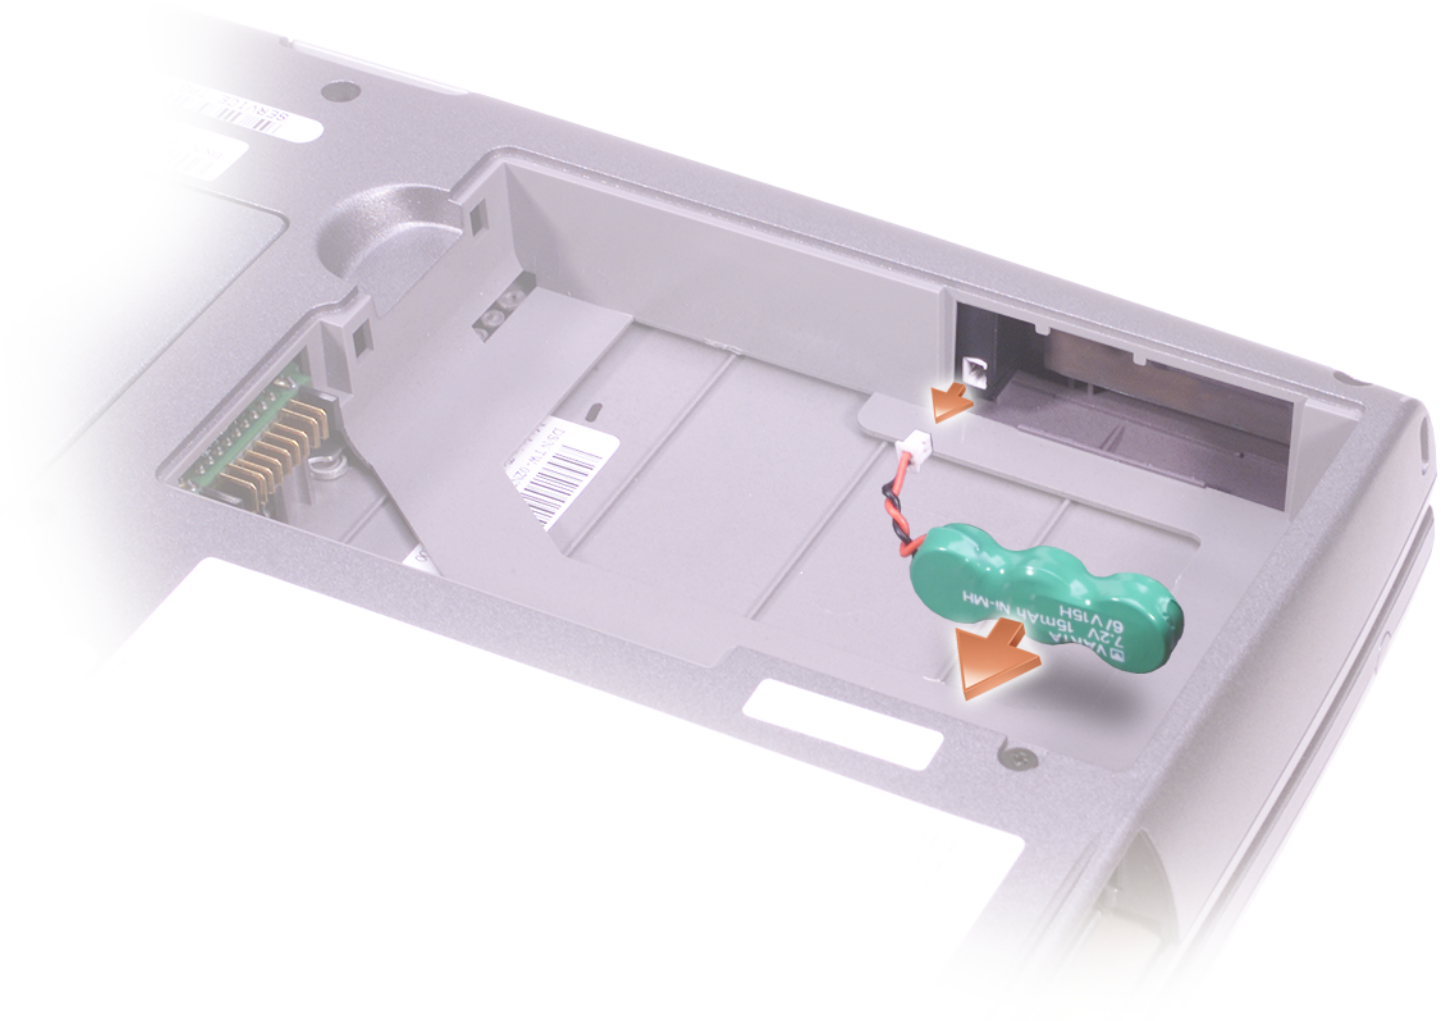

4 예비 전지 케이블을 예비 전지를 설치할 위치의 커넥터에 연결하십시오.

5 예비 전지를 설치할 위치에 놓고 예비 전지 덮개를 다시 끼우십시오.

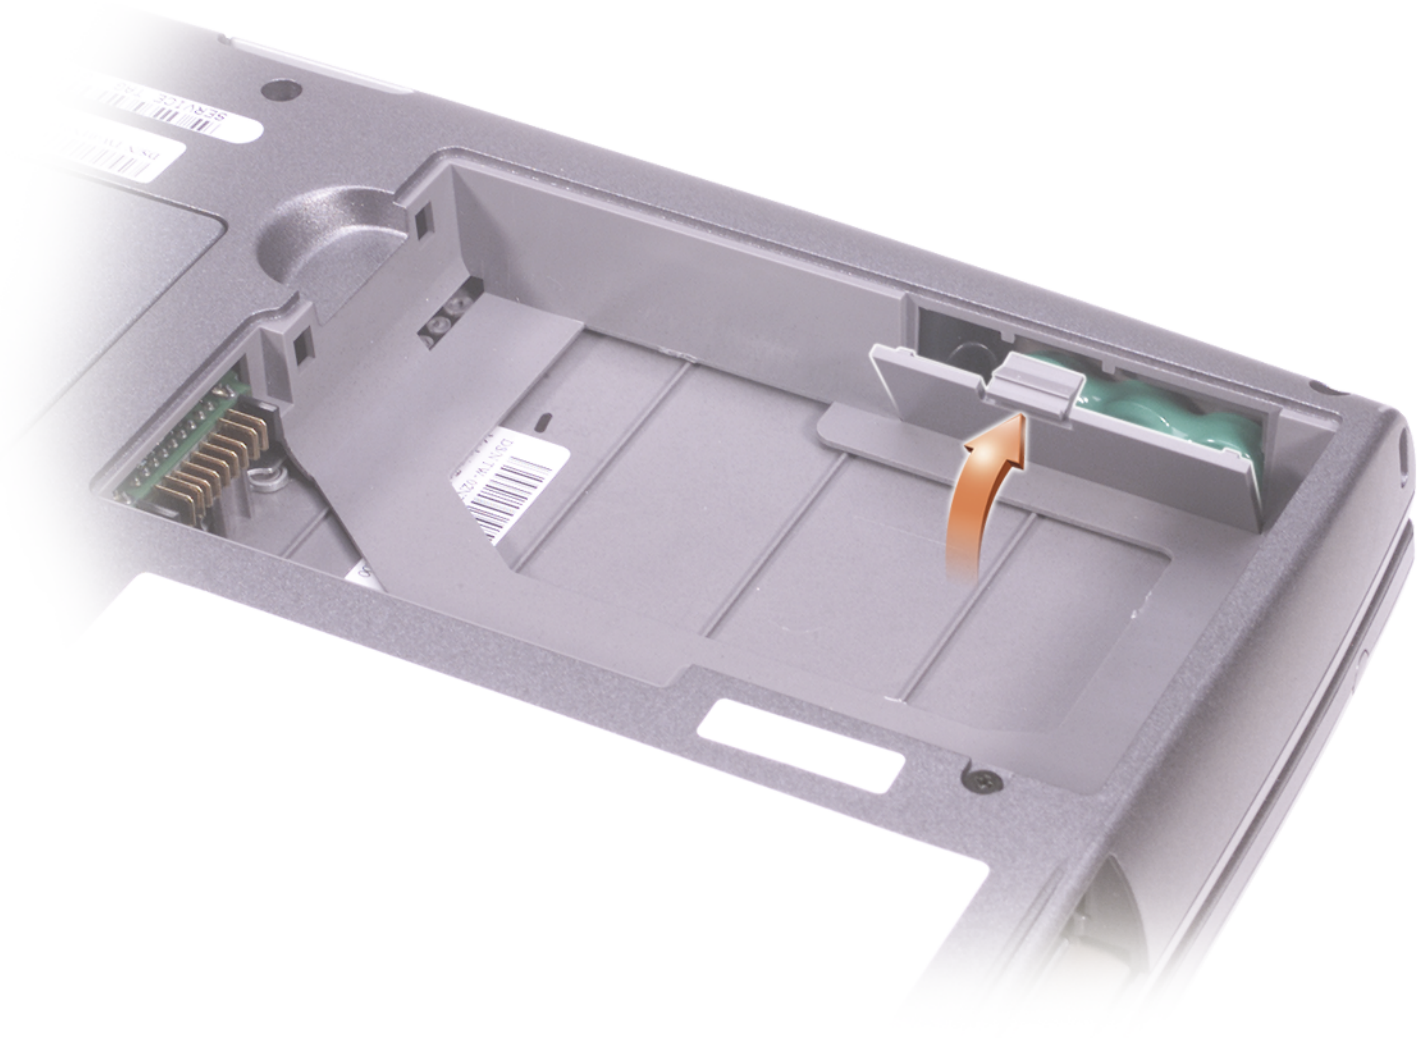

전지 설치

분리 래치에서 딸각하는 소리가 날 때까지 베이에 전지를 밀어 넣으십시오.

보조 전지 설치에 대한 자세한 내용은 온라인 ≪사용 설명서≫에서 「모듈 베이 사용」을 참조하십시오.

Dell 진단 프로그램 실행

Dell 진단 프로그램은 하드 드라이브의 숨겨진 Diagnostics 유틸리티 파티션에 있습니다.

주: 컴퓨터에 화면 이미지가 나타나지 않으면 Dell에 문의하십시오 (해당 연락처 정보는 ≪사용 설명서≫의 「도움말 얻기」 참조).

1 컴퓨터를 종료하십시오.

2 컴퓨터가 도킹 장치에 연결(도킹)되어 있으면 도킹을 해제하십시오. 자세한 내용은 도킹 장치와 함께 제공된 설명서를 참조하십시오.

3 컴퓨터를 전원 콘센트에 연결하십시오.

4 컴퓨터의 전원을 켜십시오. DELL™ 로고가 나타나면 즉시 <F12>를 누르십시오. 시간이 초과되어 Microsoft® Windows® 로고가 나타나면 Windows 바탕 화면이 표시될 때까지 기다리십시오. 컴퓨터를 종료했다가 다시 시작해보십시오.

5 부팅 장치 목록이 나타나면 **Diagnostics**를 선택하고 <Enter>를 누르십시오.

컴퓨터의 시스템 보드, 키보드, 하드 드라이브 및 디스플레이를 처음에 순서대로 검사해주는 사전 부팅 시스템 평가가 시작됩니다.

- 검사하는 동안 요청된 질문에 응답하십시오.
- 구성요소에 오류가 감지되면 컴퓨터는 실행을 중단하고 경고음을 냅니다. 평가를 중단하고 운영 체제를 재부팅하려면 <N>을 누르고, 다음 검사를 계속 실행하려면 <Y>를 누르고, 오류가 있는 구성요소를 다시 검사하려면 <R>을 누르십시오.
- 사전 부팅 시스템 평가가 진행되는 동안 오류가 감지되면 오류 코드를 적어두고, Dell 진단 프로그램을 계속 실행하기 전에 Dell에 문의하십시오(해당 연락처 정보는 ≪사용 설명서≫의 「도움말 얻기」 참조).
- Diagnostics 유틸리티 파티션을 찾을 수 없다는 메시지가 나타나면 드라이버 및 유틸리티 CD에서 Dell 진단 프로그램을 실행하여 화면에 나타난 지시사항을 따르십시오.

사전 부팅 시스템 평가가 성공적으로 완료되면 `Booting Dell Diagnostic Utility Partition. Press any key to continue.` 메시지가 나타납니다.

6 아무 키를 눌러 하드 드라이브에 있는 Diagnostics 유틸리티 파티션에서 Dell 진단 프로그램을 시작하십시오.

7 Dell 진단 프로그램이 로드되고 **Main Menu** 화면이 나타나면, 원하는 옵션 단추를 클릭하십시오.

주: 디스플레이에 아무것도 나타나지 않을 경우, 음소거 단추를 누른 상태에서 F12 대신 전원 단추를 눌러 Dell 진단 프로그램을 시작하십시오. Diagnostics를 선택하고 <Enter>를 누를 필요가 없습니다. 컴퓨터는 자동으로 사전 부팅 시스템 평가를 실행합니다.

주: 컴퓨터의 서비스 태그는 각 화면의 제목 표시줄에 표시됩니다.

옵션	기능
Express Test	장치를 빠르게 검사합니다. 이 검사는 일반적으로 10분에서 20분 정도 소요되며 사용자가 개입하지 않아도 됩니다. 문제를 신속하게 추적하려면 Express Test를 실행하십시오.
Extended Test	장치를 전체적으로 검사합니다. 이 검사는 일반적으로 1시간 이상 소요되며 사용자는 주기적으로 질문에 응답해야 합니다.
Custom Test	특정 장치를 검사합니다. 실행할 검사를 사용자 정의할 수 있습니다.
Symptom Tree	문제의 증상에 따라 검사를 선택할 수 있습니다. 옵션 목록에는 가장 일반적인 증상이 표시됩니다.

8 검사 도중 문제가 발견되면 오류 코드와 문제 설명이 메시지에 함께 표시되어 나타납니다. 오류 코드와 문제 설명을 기록해 두고 화면의 지시사항을 따르십시오. 오류 상태를 해결할 수 없는 경우, Dell에 문의하십시오(해당 연락처 정보는 ≪사용 설명서≫의 「도움말 얻기」 참조).

9 Custom Test 또는 Symptom Tree 옵션에서 검사를 실행할 경우 다음 표에서 설명하는 적용 가능한 탭을 클릭하여 추가 정보를 얻으십시오.

탭	기능
Results	검사 결과 및 발견된 오류 상태를 표시합니다.
Errors	발견된 오류 상태, 오류 코드 및 문제 설명을 표시합니다.
Help	검사를 설명하고 검사 실행에 필요한 요구사항을 표시할 수 있습니다.
Configuration	선택한 장치에 대한 하드웨어 구성을 나타냅니다. Dell 진단 프로그램은 시스템 설치 프로그램, 메모리 및 각종 내부 검사를 통해 모든 장치의 구성 정보를 수집하고 이를 화면의 왼쪽 창에 있는 장치 목록에 표시합니다. 장치 목록에는 컴퓨터에 설치된 일부 구성요소 이름이나 컴퓨터에 장착된 일부 장치가 표시되지 않을 수 있습니다.
Parameters	검사 설정을 변경하여 사용자가 검사를 지정할 수 있습니다.

10 실행 중이던 검사가 완료되면 화면이 닫히고 **Main Menu** 화면으로 돌아갑니다. Dell 진단 프로그램을 종료하고 컴퓨터를 재부팅하려면, **Main Menu** 화면을 닫으십시오.

규정사항

EMI (Electromagnetic Interference)는 전원 리드선 또는 신호 리드선을 따라 전도되거나 자유 공간으로 방출되는 신호 또는 전파를 말하며, 신호나 무선 항공 또는 기타 안전 서비스 기능을 저해하고 무선 통신 서비스를 심각하게 방해하거나 지속적으로 차단시킵니다. 무선 통신 서비스에는 상업용 AM/FM 라디오 방송, TV, 휴대 통신 서비스, 레이더, 항공 관제소, 호출기 및 PCS (Personal Communication Service) 등을 비롯한 기타 서비스가 포함됩니다. 무선 통신 서비스뿐만 아니라 컴퓨터를 포함하여 디지탈 장치 등 전자파 방사 장치도 전자파 환경 문제가 되고 있습니다.

EMC (ElectroMagnetic Compatibility)는 전자기 환경에서 전자 장치가 올바르게 작동할 수 있도록 하는 기능입니다. 본 컴퓨터는 규정 기관의 EMI 관련 규제사항에 따라 설계되었으며 이에 부합하다는 판정을 받았으나, 경우에 따라 전자파 장애가 발생할 수 있습니다. 본 장치가 무선 통신 서비스 장애를 일으키는 경우, 컴퓨터를 껐다가 다시 켜거나 다음과 같은 방법으로 장애를 해결하십시오:

- 수신 안테나의 방향을 바꾸십시오.
- 수신기에 영향을 주는 컴퓨터의 위치를 변경하십시오.
- 수신기와 컴퓨터를 멀리 떨어뜨려 놓으십시오.
- 수신기와 컴퓨터가 회로를 공유하지 않도록 컴퓨터의 전원 콘센트를 다른 곳에 꽂으십시오.

필요한 경우 Dell 기술 지원부 또는 숙련된 라디오/TV 기술자에게 문의하여 도움을 받으십시오.

규정사항에 관한 자세한 내용은 온라인 ≪사용 설명서≫의 부록에서 「규정사항」을 참조하십시오. 각 규정기관의 규제사항에는 국가별 EMC/EMI 또는 제품 안전 정보에 대해 설명합니다.

Printed in Malaysia
马来西亚印制
馬來西亞印製
말레이시아에서 인쇄

01N788A00

P/N 1N788 Rev. A00

Printed in China
Printed on recycled paper
中国印制
中國印製
중국에서 인쇄

01N788A00
P/N 1N788 Rev. A00